KE-42TS2U

SERVICE MANUAL

US Model
Canadian Model

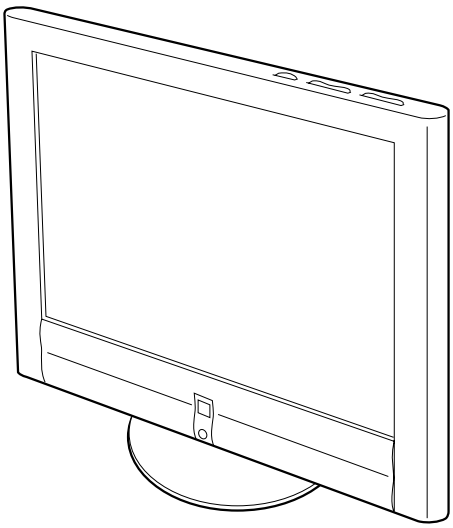

SPECIFICATIONS

Television system:
American TV standard

Channel coverage:
VHF: 2–13/UHF: 14–69/CATV: 1–125

Antenna:
75 Ω external terminal for VHF/UHF

Screen size (measured diagonally):
42 inches

Panel System:
Plasma Display panel

Display resolution:
1024 dots (horizontal) × 1024 lines (vertical)

VIDEO IN 1/2:
S VIDEO IN (4-pin mini DIN):
Y:1 Vp-p, 75 Ω unbalanced, sync negative
C:0.286 Vp-p (Burst signal), 75 Ω
VIDEO (phono jack):
1 Vp-p, 75 Ω unbalanced, sync negative
AUDIO (phono jacks):
500 mVrms (100% modulation), Impedance: 47 kΩ

VIDEO IN 3:
DVI-HDTV: 1 terminal, 3.3V T.M.D.S., 50 Ω
DVI-HDTV input terminal is compliant with the EIA-861 standard and is not intended for use with personal computers.
AUDIO (phono jacks):
500 mVrms (100% modulation), Impedance: 47 kΩ

VIDEO IN 4:
Y:1 Vp-p, 75 Ω, 0.3 V negative sync
P_B:0.7 Vp-p, 75 Ω
P_R:0.7 Vp-p, 75 Ω
or
G:0.7 Vp-p, 75 Ω, Sync on Green
B:0.7 Vp-p, 75 Ω, Sync on Green
R:0.7 Vp-p, 75 Ω, Sync on Green
or
G:0.7 Vp-p, 75 Ω, non Sync on Green
B:0.7 Vp-p, 75 Ω, non Sync on Green
R:0.7 Vp-p, 75 Ω, non Sync on Green
HD:1–5 Vp-p
VD:1–5 Vp-p

AUDIO (phono jacks):
500 mVrms (100% modulation), Impedance: 47 kΩ

SUB WOOFER: phono jack

AUDIO OUT (phono jacks):
500 mVrms (100% modulation)

Headphones: Stereo minijack

CONTROL S IN/OUT:
minijacks

Speaker: 50 × 130 mm (2 × 5 1/8 inches) × 2

Speaker output: 9W × 2

Power requirement:
120 V AC, 60 Hz

Power consumption:
In use (Max.): 415W
In standby: 2.9W

Dimensions (W/H/D):
1,056 × 764 × 124 mm
(41 5/8 × 30 1/8 × 5 inch)

Mass: 37.5 kg (82 lbs 7 oz.)

Supplied accessories
Remote control RM-928Y (1)
Batteries size AA (2)
75 Ω coaxial cable (1)
AC power cord (1)
Brackets (2)
Cleaning cloth (1)
Operating instructions (1)

Optional accessories
Note that some optional accessories may be out of stock.

Headphones plug adapter
Connecting cables
VMC-810S/820S, YC-15V/30V, RK-74A, VMC-10HG, SMF-403

Design and specifications are subject to change without notice.

FLAT PANEL COLOR TELEVISION

SONY®

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are “pinched” or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the connector shell, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC Leakage. Check leakage as described right.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes).

Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOMs that are suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

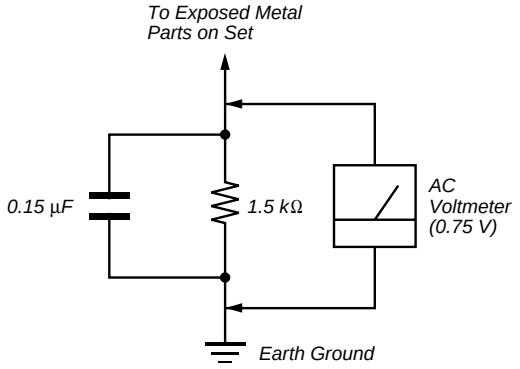

Fig. A. Using an AC voltmeter to check AC leakage.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.

ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET UNE MARQUE ⚠ SONT CRITIQUES POUR LA SÉCURITÉ. NE LES REMPLACER QUE PAR UNE PIÈCE PORTANT LE NUMÉRO SPECIFIÉ. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIÉS DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.

TABLE OF CONTENTS

Section	Title	Page
1. DISASSEMBLY		
1-1.	Rear Cover Removal	1-1
1-2.	Q, Q2 and TU Board Removal	1-2
1-3.	Main Shield Removal	1-3
1-4.	B Board Removal	1-4
1-5.	H1 Board Removal	1-5
1-6.	Switching Regulator Removal	1-6
1-7.	H2 Board Removal	1-7
1-8.	Plasma Display Panel Removal	1-8
2. ADJUSTMENTS		
2-1.	White Balance Adjustment	2-1
2-2.	Calibration Adjustment of A/D Converter and Video Coder	2-2
2-2-1.	Preparation for adjustment	2-2
2-2-2.	RGB AD adjustment	2-2
2-2-3.	Component AD adjustment	2-2
2-2-4.	Video AD adjustment	2-3
2-2-5.	Video coder input adjustment	2-3
2-3.	Adjustment of Sub-color and Sub-hue	2-4
3. DIAGRAMS		
3-1.	Block Diagrams	3-1
3-2.	Circuit Boards Location	3-5
3-3.	Schematic Diagrams and Printed Wiring Boards	3-6
(1)	Schematic Diagrams of B (ⓐ, ⓑ, ⓒ, ⓓ, ⓔ, ⓕ, ⓖ) Board	3-7
(2)	Schematic Diagram of H1 Board	3-15
(3)	Schematic Diagram of Q2 Board	3-16
(4)	Schematic Diagrams of Q (ⓐ, ⓑ) Board	3-17
(5)	Schematic Diagram of TU Board	3-20
(6)	Schematic Diagram of UD Board	3-22
3-4.	Semiconductors	3-24
4. EXPLODED VIEWS		4-1
4-1.	Cover	4-2
4-2.	Chassis	4-3
4-3.	Packing Materials	4-4
5. ELECTRICAL PARTS LIST		5-1

SECTION 1
DISASSEMBLY

1-1. REAR COVER REMOVAL

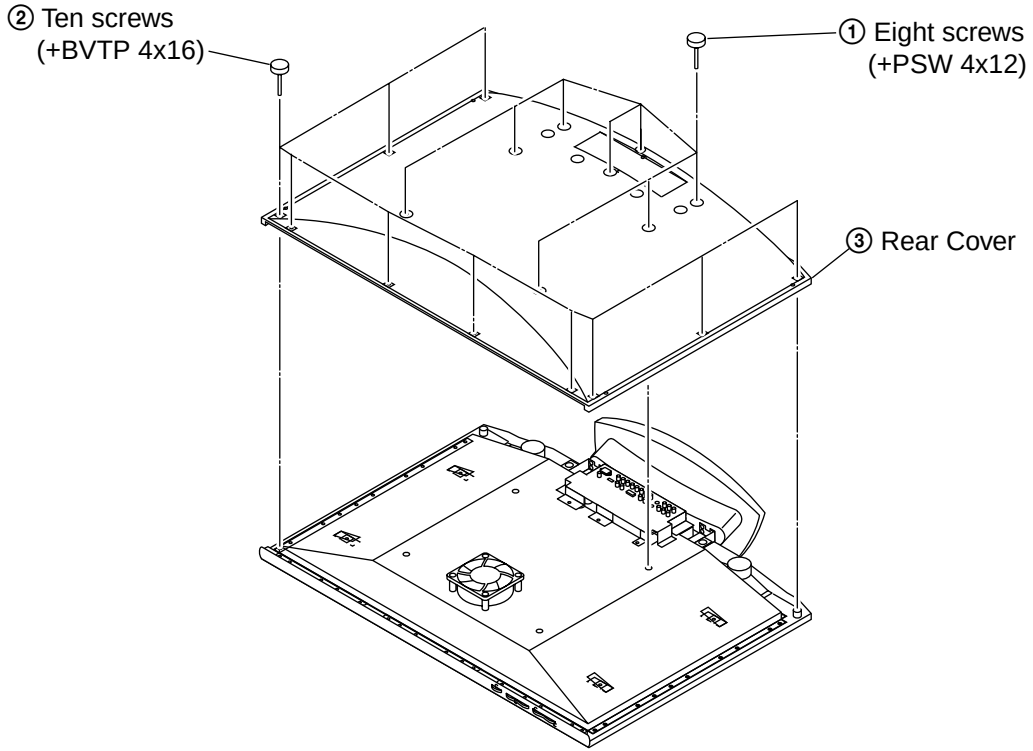

1-2. Q, Q2 AND TU BOARD REMOVAL

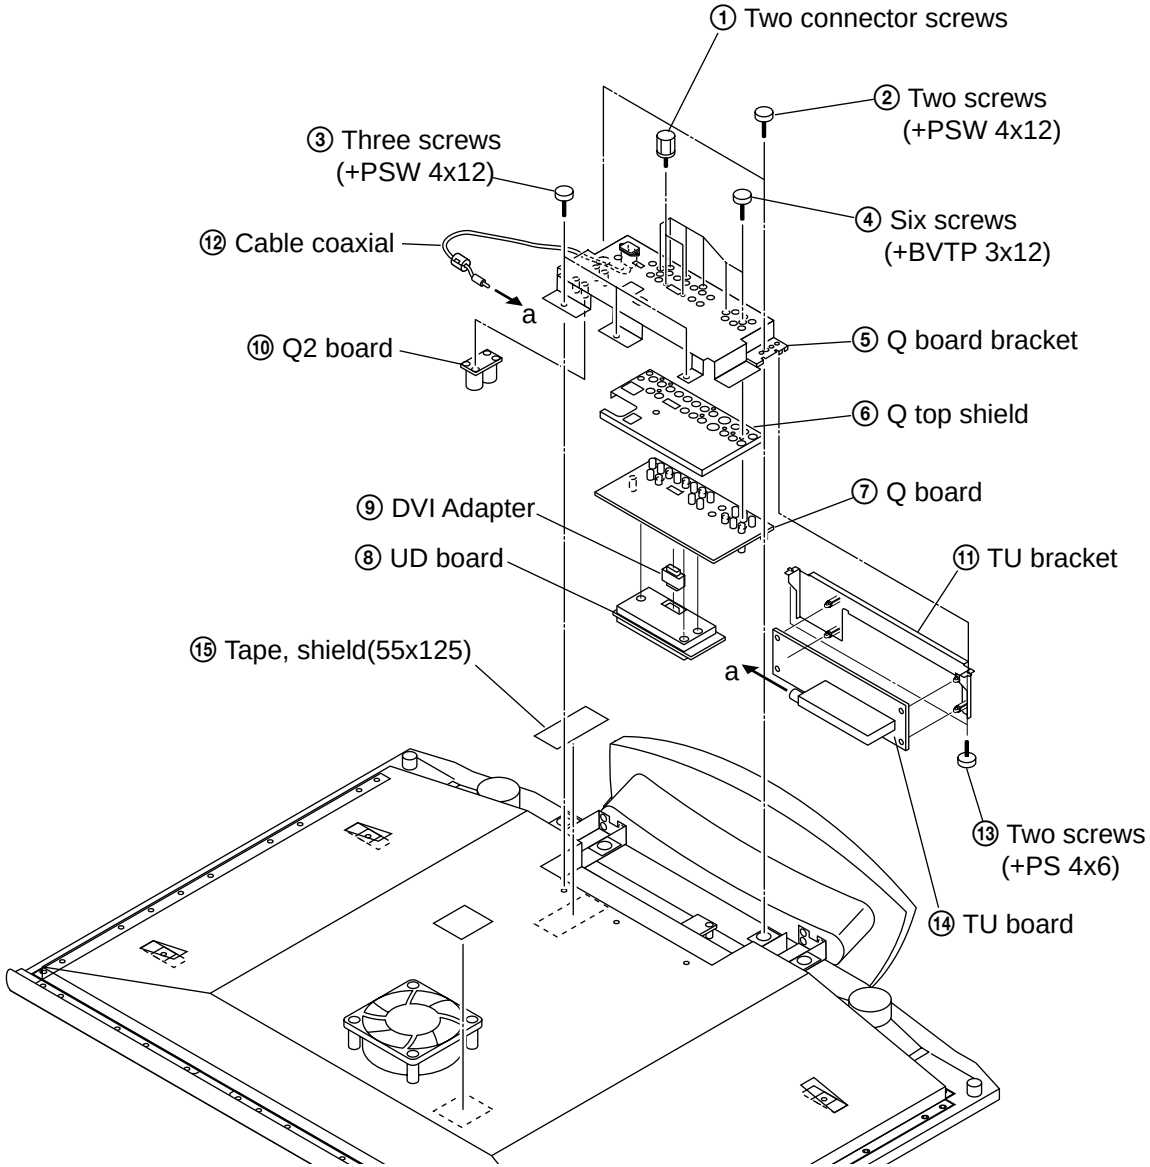

1-3. MAIN SHIELD REMOVAL

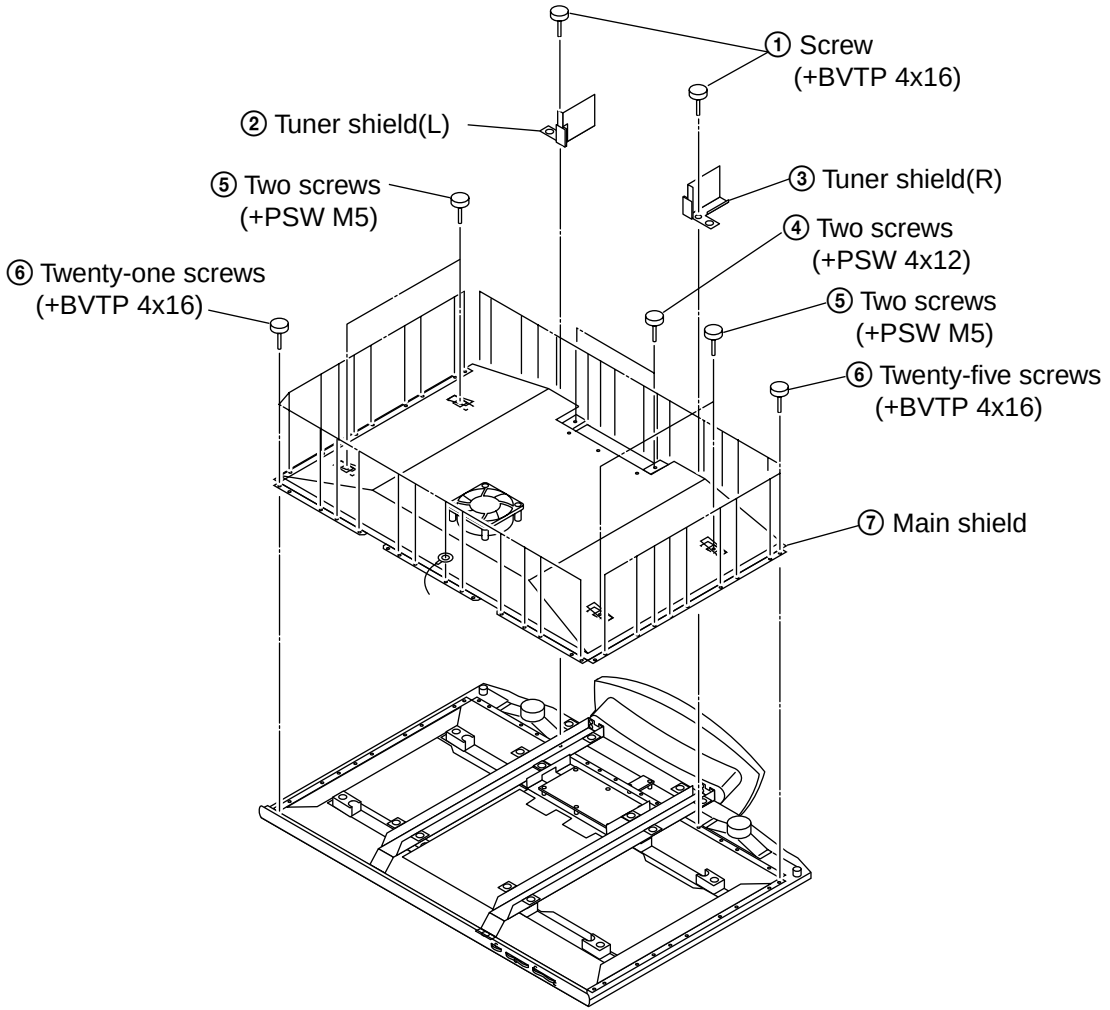

1-4. B BOARD REMOVAL

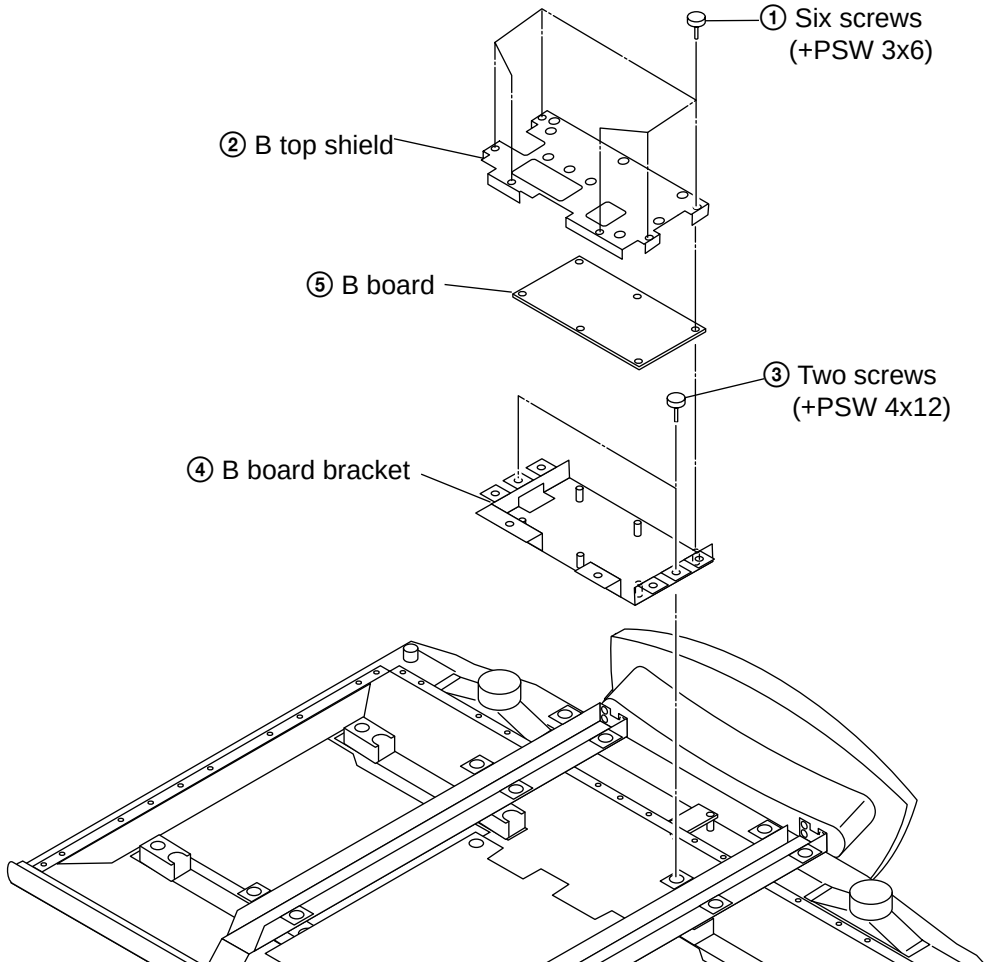

1-5. H1 BOARD REMOVAL

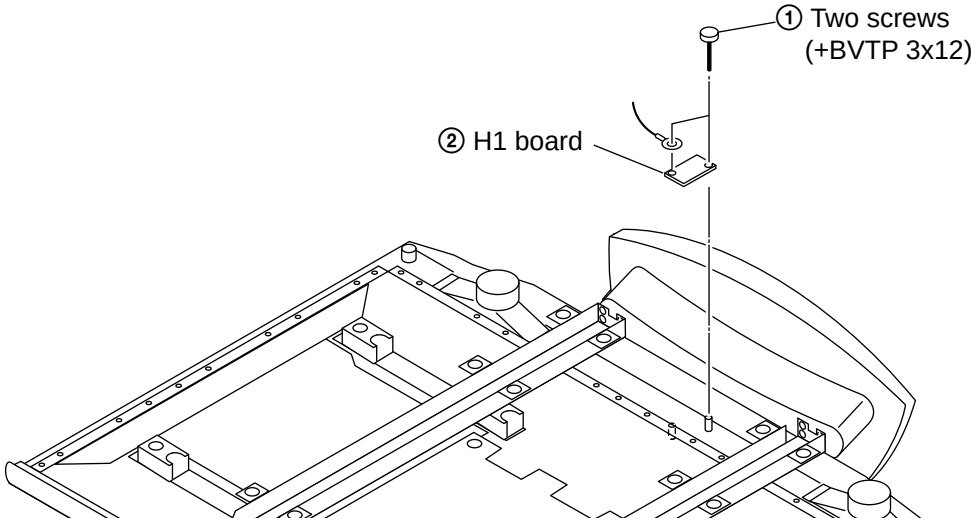

1-6. SWITCHING REGULATOR REMOVAL

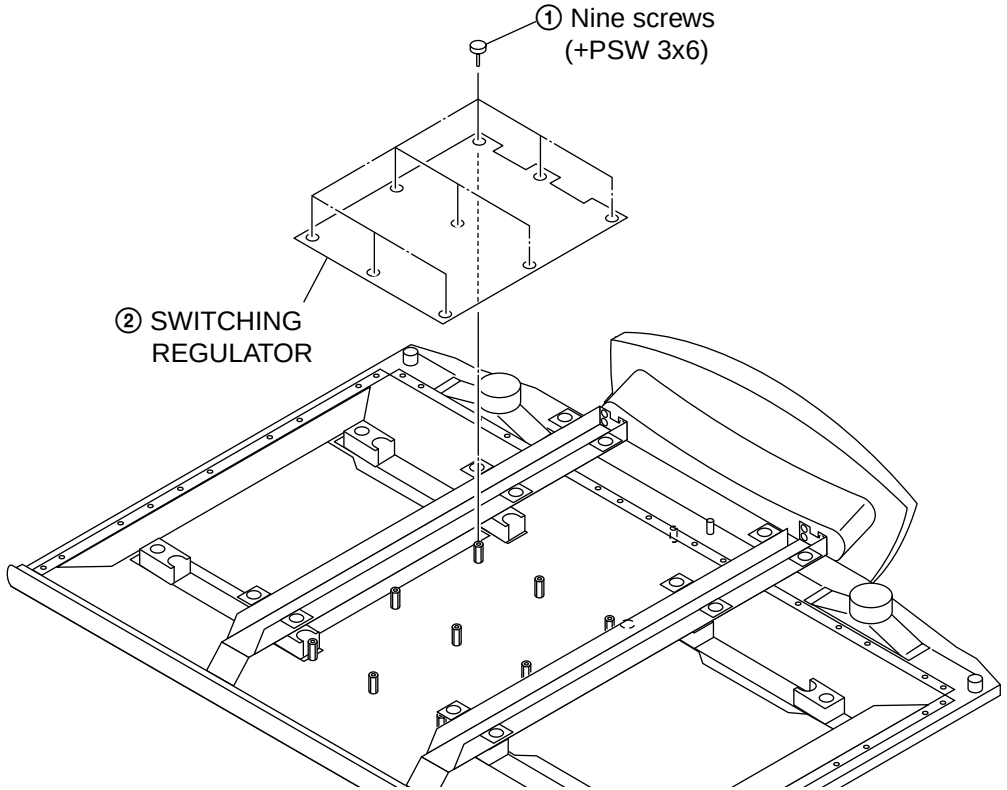

1-7. H2 BOARD REMOVAL

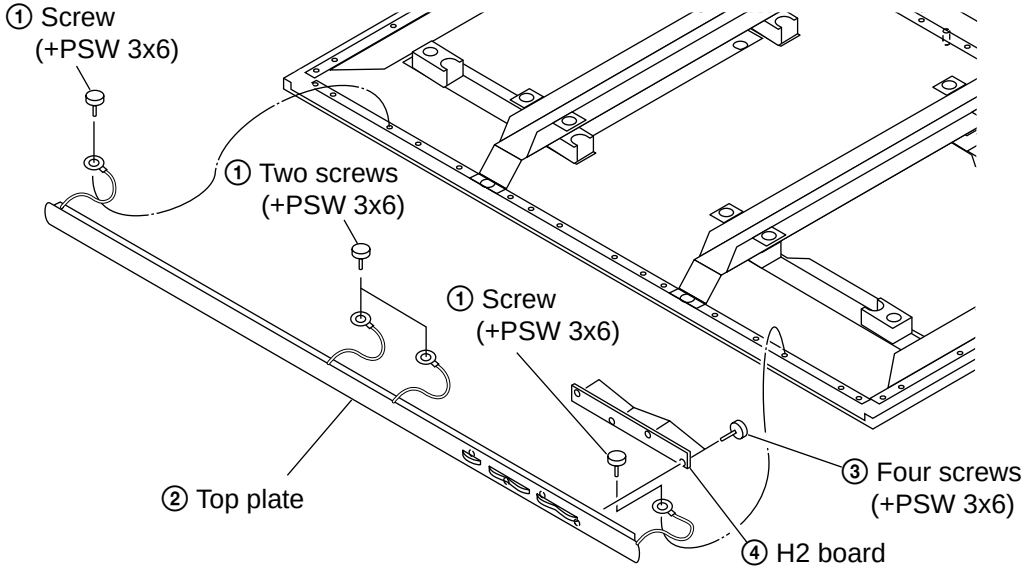

1-8. PLASMA DISPLAY PANEL REMOVAL

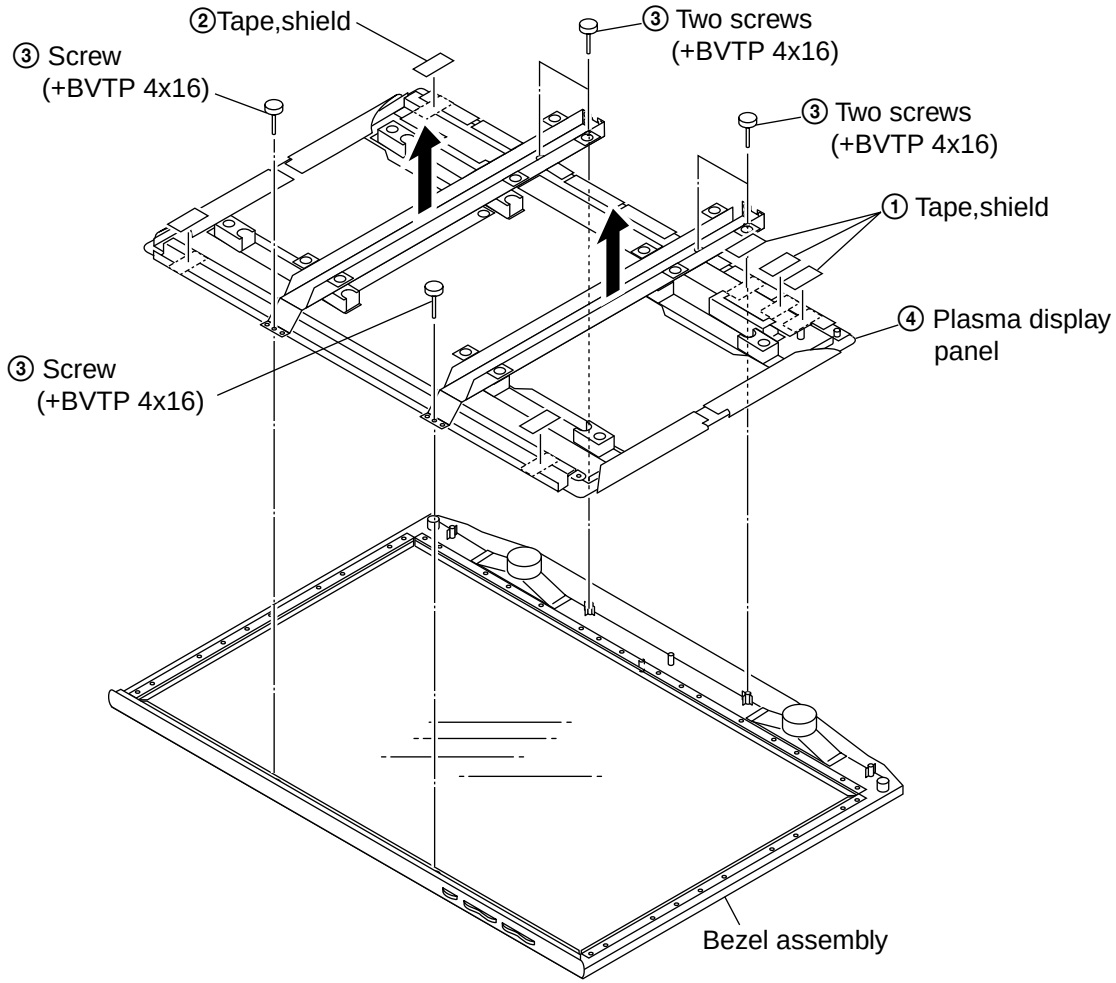

SECTION 2
ADJUSTMENTS

<Service Mode>

The service mode is not displayed in the normal state. It is displayed by entering a pass code.
All hidden menus are displayed when you enter the pass code below.
The uppermost item of the displayed menus is the service mode menu.

Pass code: Enter in the standby state (when the red LED lights) as follows:
Screen display → 5 → Vol+ → Power ON

== Service Mode Menu ==
1) EEP ROM Initialize
2) Chroma Decoder
3) AD Converter
4) White Balance
5) General
6) Manual Control
7) Preset Edit
8) Service Status

2-1. White Balance Adjustment

1. Set the service mode then select White Balance menu.
2. Select Large in the Window menu to output an internal adjustment signal.
3. Set the color temperature to "High".
4. Adjust the white balance so that the color temperature is set to the value below during R, G, and B gain adjustments.

   Color Temperature: 10000K + 2.5MPCD (x=0.280 y=0.290 ±0.005)

5. Set the color temperature to "Middle".
6. Adjust the white balance so that the color temperature is set to the value below during R, G, and B gain adjustments.

   Color Temperature: 8000K + 2.5MPCD (x=0.295 y=0.306 ±0.005)

7. Set the color temperature to "Low".
8. Adjust the white balance so that the color temperature is set to the value below during R, G, and B gain adjustments.

   Color Temperature: 6500K + 2.5MPCD (x=0.313 y=0.326 ±0.005)

2-2. Calibration Adjustment of A/D Converter and Video Coder

2-2-1. Preparation for adjustment

1. Set [RGB MODE] of the Custom Setup menu in the service mode to [Other].
2. Set the [Cal Mode] of the AD Converter in the service mode to [ON].
3. Set the image quality mode to AV professional standard state.

2-2-2. RGB AD adjustment

1. Input All white 90 IRE signal of VGA (640x480/60Hz) to the RGB input terminal.
2. Select RGB Calibration from the AD Converter menu, then adjust the R gain and the B gain in the menu and balance so that the detection values of R and B approximate to the detection value of G.
3. Adjust the Sub Contrast (RGB), that is, adjust the detection values of R, G, and B to the set value.

   Detection set value: 230 ± 3

4. Set the RGB input signal to All gray 20 IRE signal of VGA (640x480/60Hz).
5. Adjust the RGB Bias, that is, adjust the detection values of R, G, and B to the set value.

   Detection set value: 51 ± 3

6. Repeat steps 1 to 5 described above until the detection set value is obtained.

2-2-3. Component AD adjustment

1. Input All white 90 IRE signal of 1080/60i to the component input terminal.
2. Adjust the Sub Contrast (YUV), that is, adjust the detection value of G to the set value.

   Detection set value: 230 ± 3

3. Set the component input signal to All gray 20 IRE signal of 1080/60i .
4. Adjust the Sub Bright (YUV), that is, adjust the detection value of G to the set value.

   Detection set value: 51 ± 3

5. Adjust the CB Offset (YUV), that is, adjust so that the detection value of B is the same as that of G.
6. Adjust the CR Offset (YUV), that is, adjust so that the detection value of R is the same as that of G.
7. Repeat steps 4 to 6 until the detection set value in step 4 is obtained.
8. Repeat steps 2 to 7 until the detection set value in steps 2 and 4 are obtained.

2-2-4. Video AD adjustment

1. Set the image quality mode to the AV professional standard state.
   Set the dynamic picture to OFF.
2. Set the input to Video, then input All white 90 IRE signal of NTSC to the video input terminal.
3. Adjust the Sub Contrast (Video), that is, adjust the detection value of G to the set value.

   Detection set value: 230 ± 3

4. Set the video input signal to All gray 20 IRE signal of NTSC.
5. Adjust the Sub Bright (Video), that is, adjust the detection values of G to the set value.

   Detection set value: 51 ± 3

6. Adjust the CB Offset (Video), that is, adjust so that the detection value of B is the same as that of G.
7. Adjust the CR Offset (Video), that is, adjust so that the detection value of R is the same as that of G.
8. Repeat steps 5 to 7 until the detection set value in step 5 is obtained.
9. Repeat steps 2 to 8 until the detection set values in steps 3 and 5 are obtained.
10. Add 15 to the Sub Contrast (Video) and subtract 35 from the Sub Bright (Video), and then write them.

2-2-5. Video coder input adjustment

1. Input All white 30 IRE signal of SECAM to the video input terminal.
2. Select BY Adj from the Chroma decoder menu.
3. Adjust the BY Adj (SECAM), that is, adjust so that the detection value of B is the same as that of G.
4. Select RY Adj from the Chroma decoder menu.
5. Adjust the RY Adj (SECAM), that is, adjust so that the detection value of R is the same as that of G.
6. Repeat steps 3 to 5 until the detection values of R, and B reach the allowable error range.

   Allowable error ± 5

7. Set [Cal Mode] to [OFF] after the A/D calibration adjustment is completed.

2-3. Adjustment of sub-color and sub-hue

1. Input an NTSC SMPTE 75% color-bar signal to VIDEO 1.
2. Set the image quality to the AV professional standard state.
3. In the service mode, put the unit into the Blue Only mode.
4. Adjust the NTSC sub-color and sub-hue while viewing the screen.
   Set the Sub-color value to 8 and adjust the C Out level so that the brightness of (1) and (A) is equal to each other and that of (4) and (D) is equal to each other. Then adjust the Sub-hue so that the brightness of (2) and (B) is equal to each other and that of (3) and (C) is equal to each other. Confirm the C Out level and Sub-hue again. (The C Out level and Sub-hue require tracking several times.)

5. Input a PAL SMPTE 75% color-bar signal to VIDEO 1.
6. Adjust the PAL sub-color while viewing the screen.
   Adjust the Sub-color so that the brightness of (1) and (A) is equal to each other and that of (4) and (D) is equal to each other.
   If the adjustment is omitted, set the Sub-color value to 10.

7. Input a SECAM SMPTE 75% color-bar signal to VIDEO 1.
8. Adjust the SECAM Sub-color while viewing the screen.
   Adjust the Sub-color so that the brightness of (1) and (A) is equal to each other and that of (4) and (D) is equal to each other.
   If the adjustment is omitted, set the Sub-color value to 9.

9. Cancel the Blue Only mode.

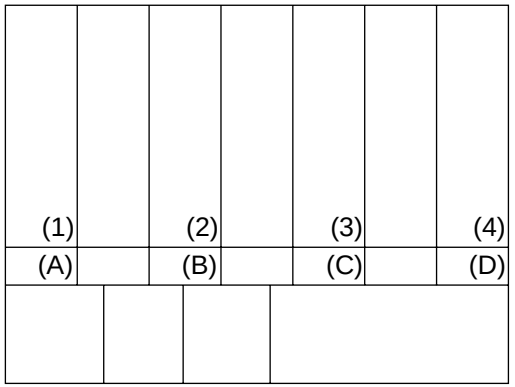

SMPTE color-bar signal

SECTION 3
DIAGRAMS

3-1. BLOCK DIAGRAMS

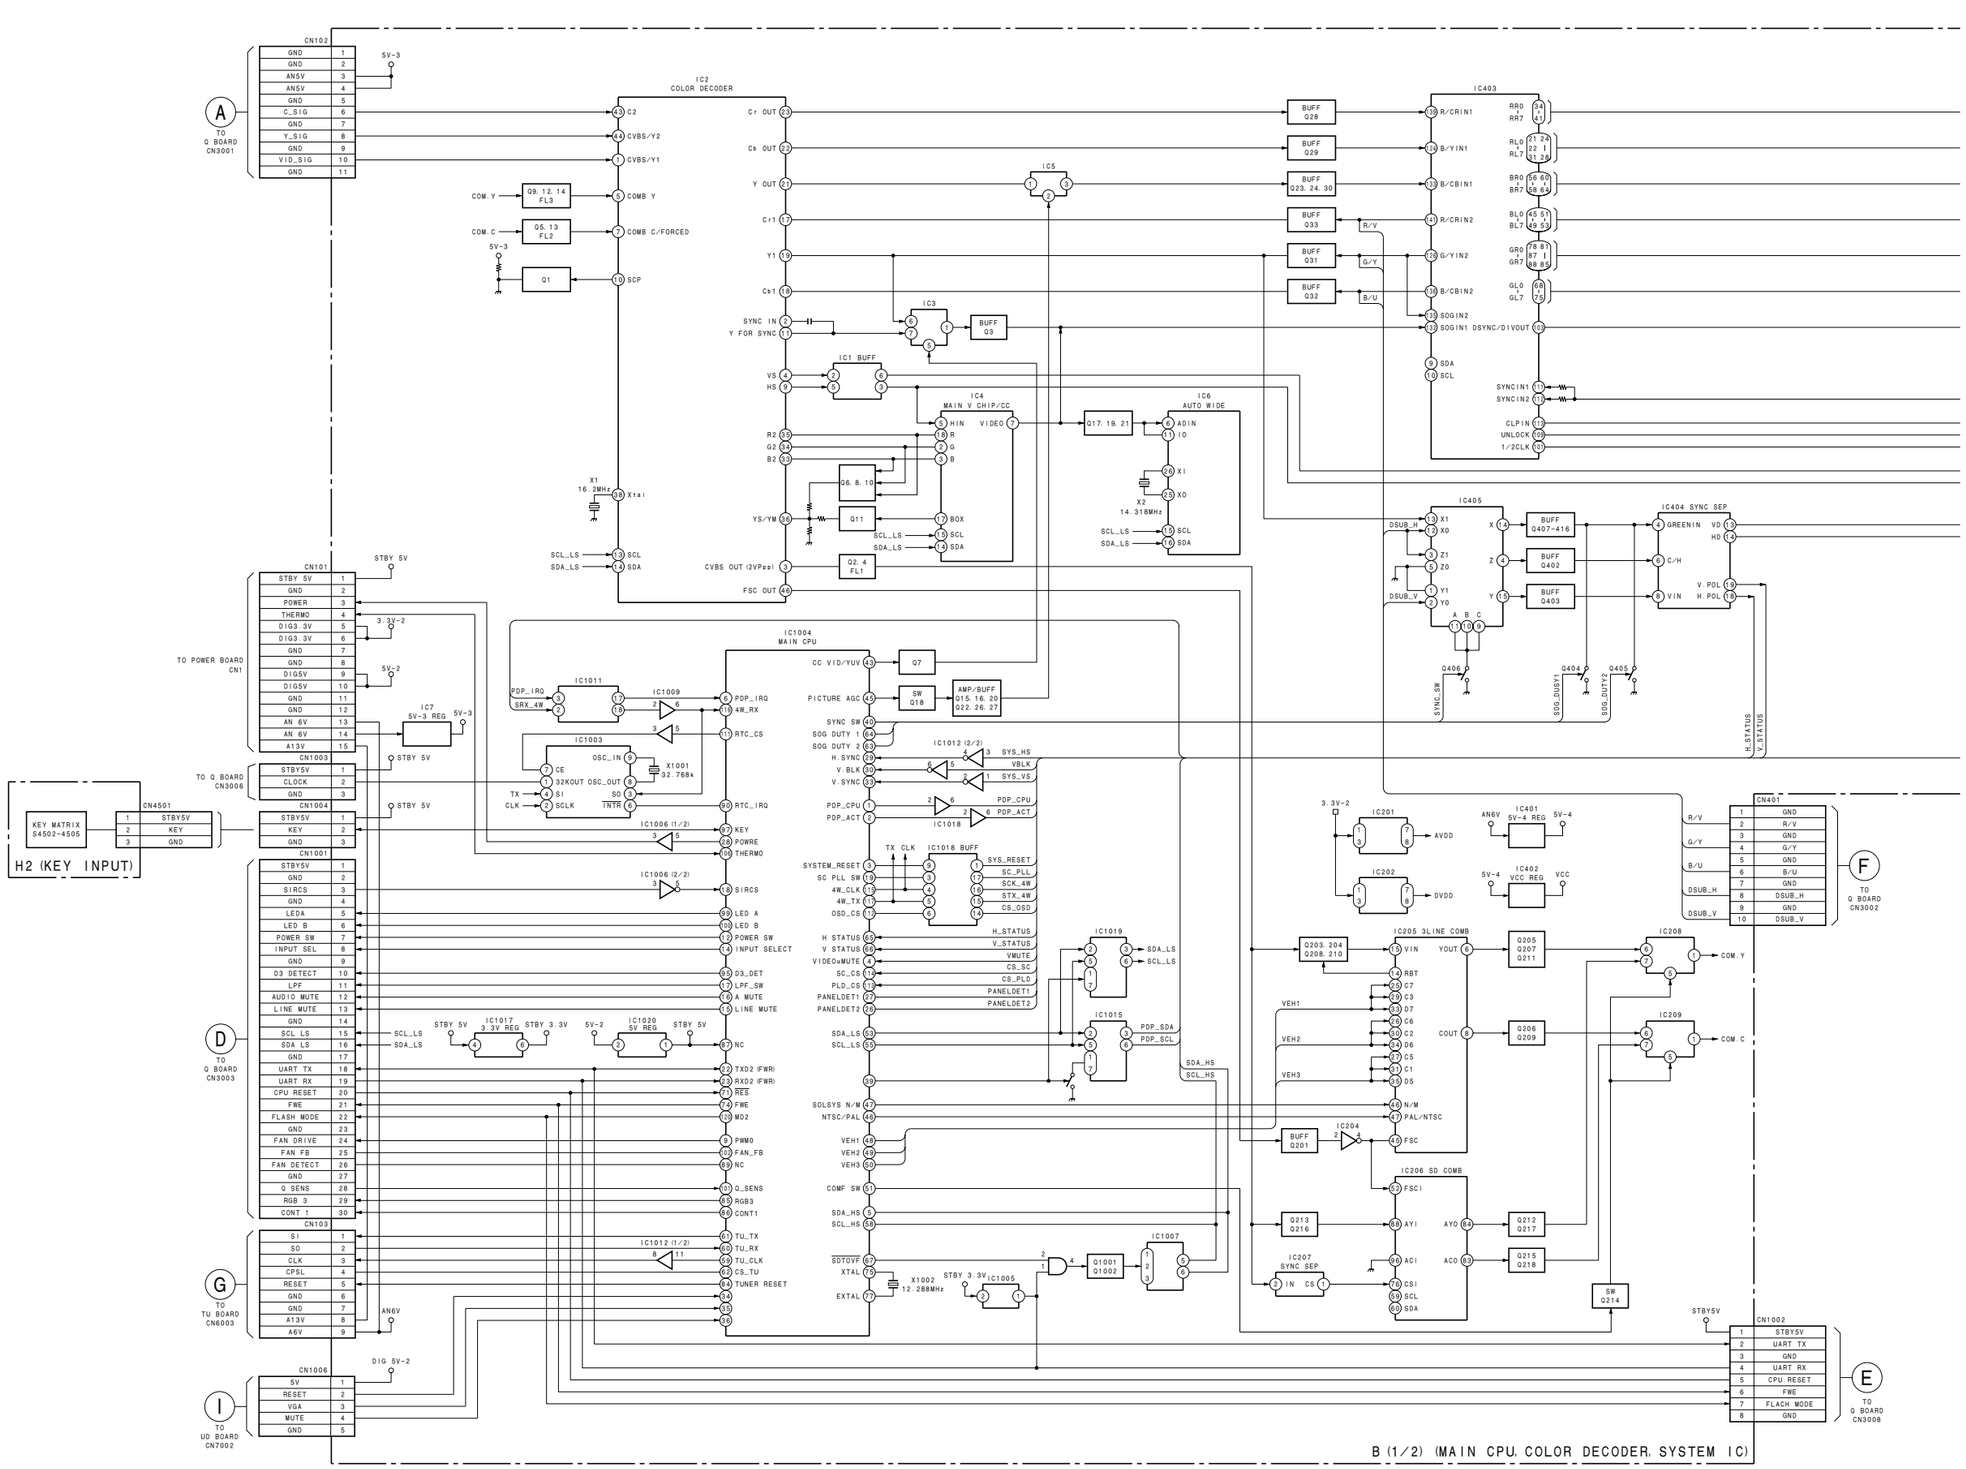

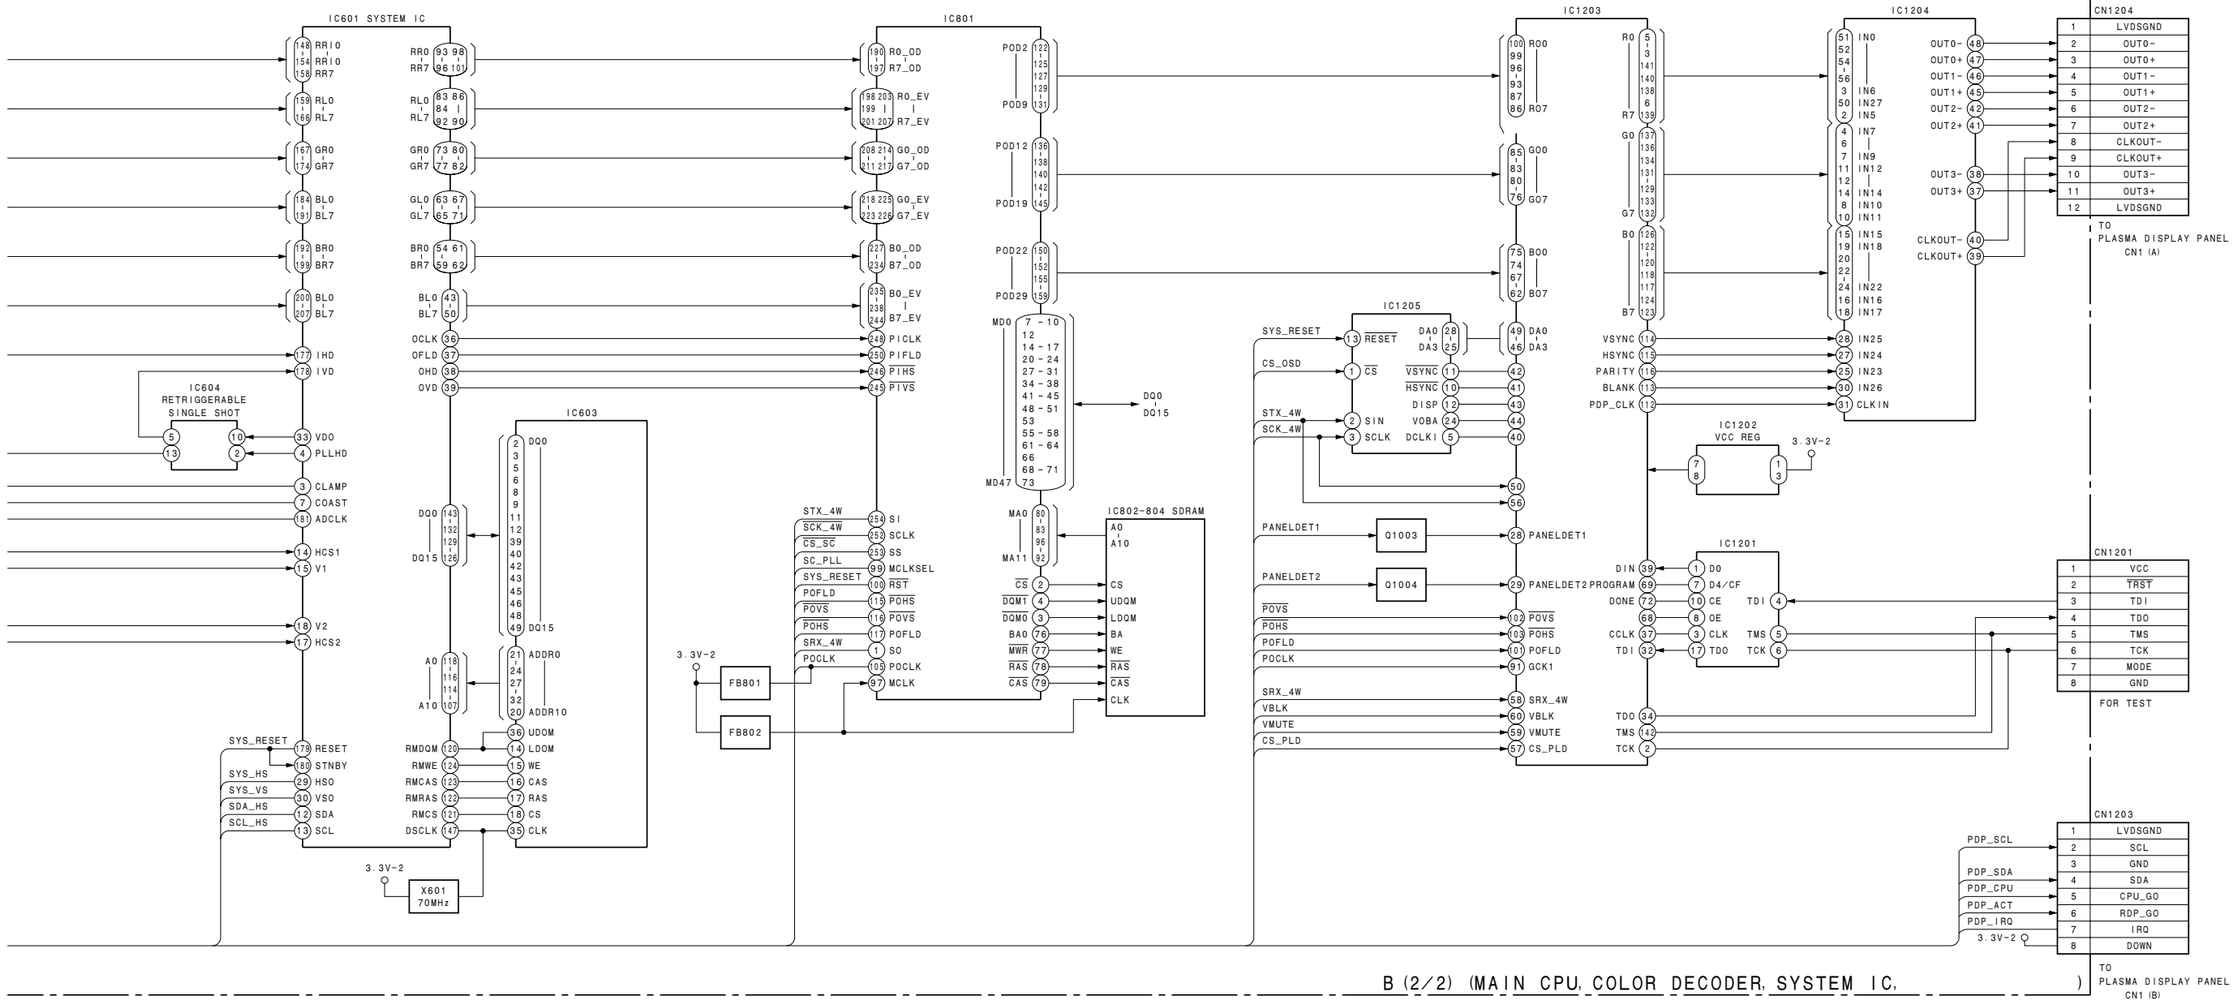
TO 1/2
IC601 SYSTEM IC
IC604
RETRIGGERABLE
SINGLE SHOT
IC603
X601
70MHz
IC801
IC802-804 SDRAM
FB801
FB802
3.3V-2
IC1205
IC1203
IC1204
IC1202
VCC REG
IC1201
CN1204
TO
PLASMA DISPLAY PANEL
CN1 (A)
CN1201
FOR TEST
CN1203
TO
PLASMA DISPLAY PANEL
CN1 (B)
B (2/2) (MAIN CPU, COLOR DECODER, SYSTEM IC,)

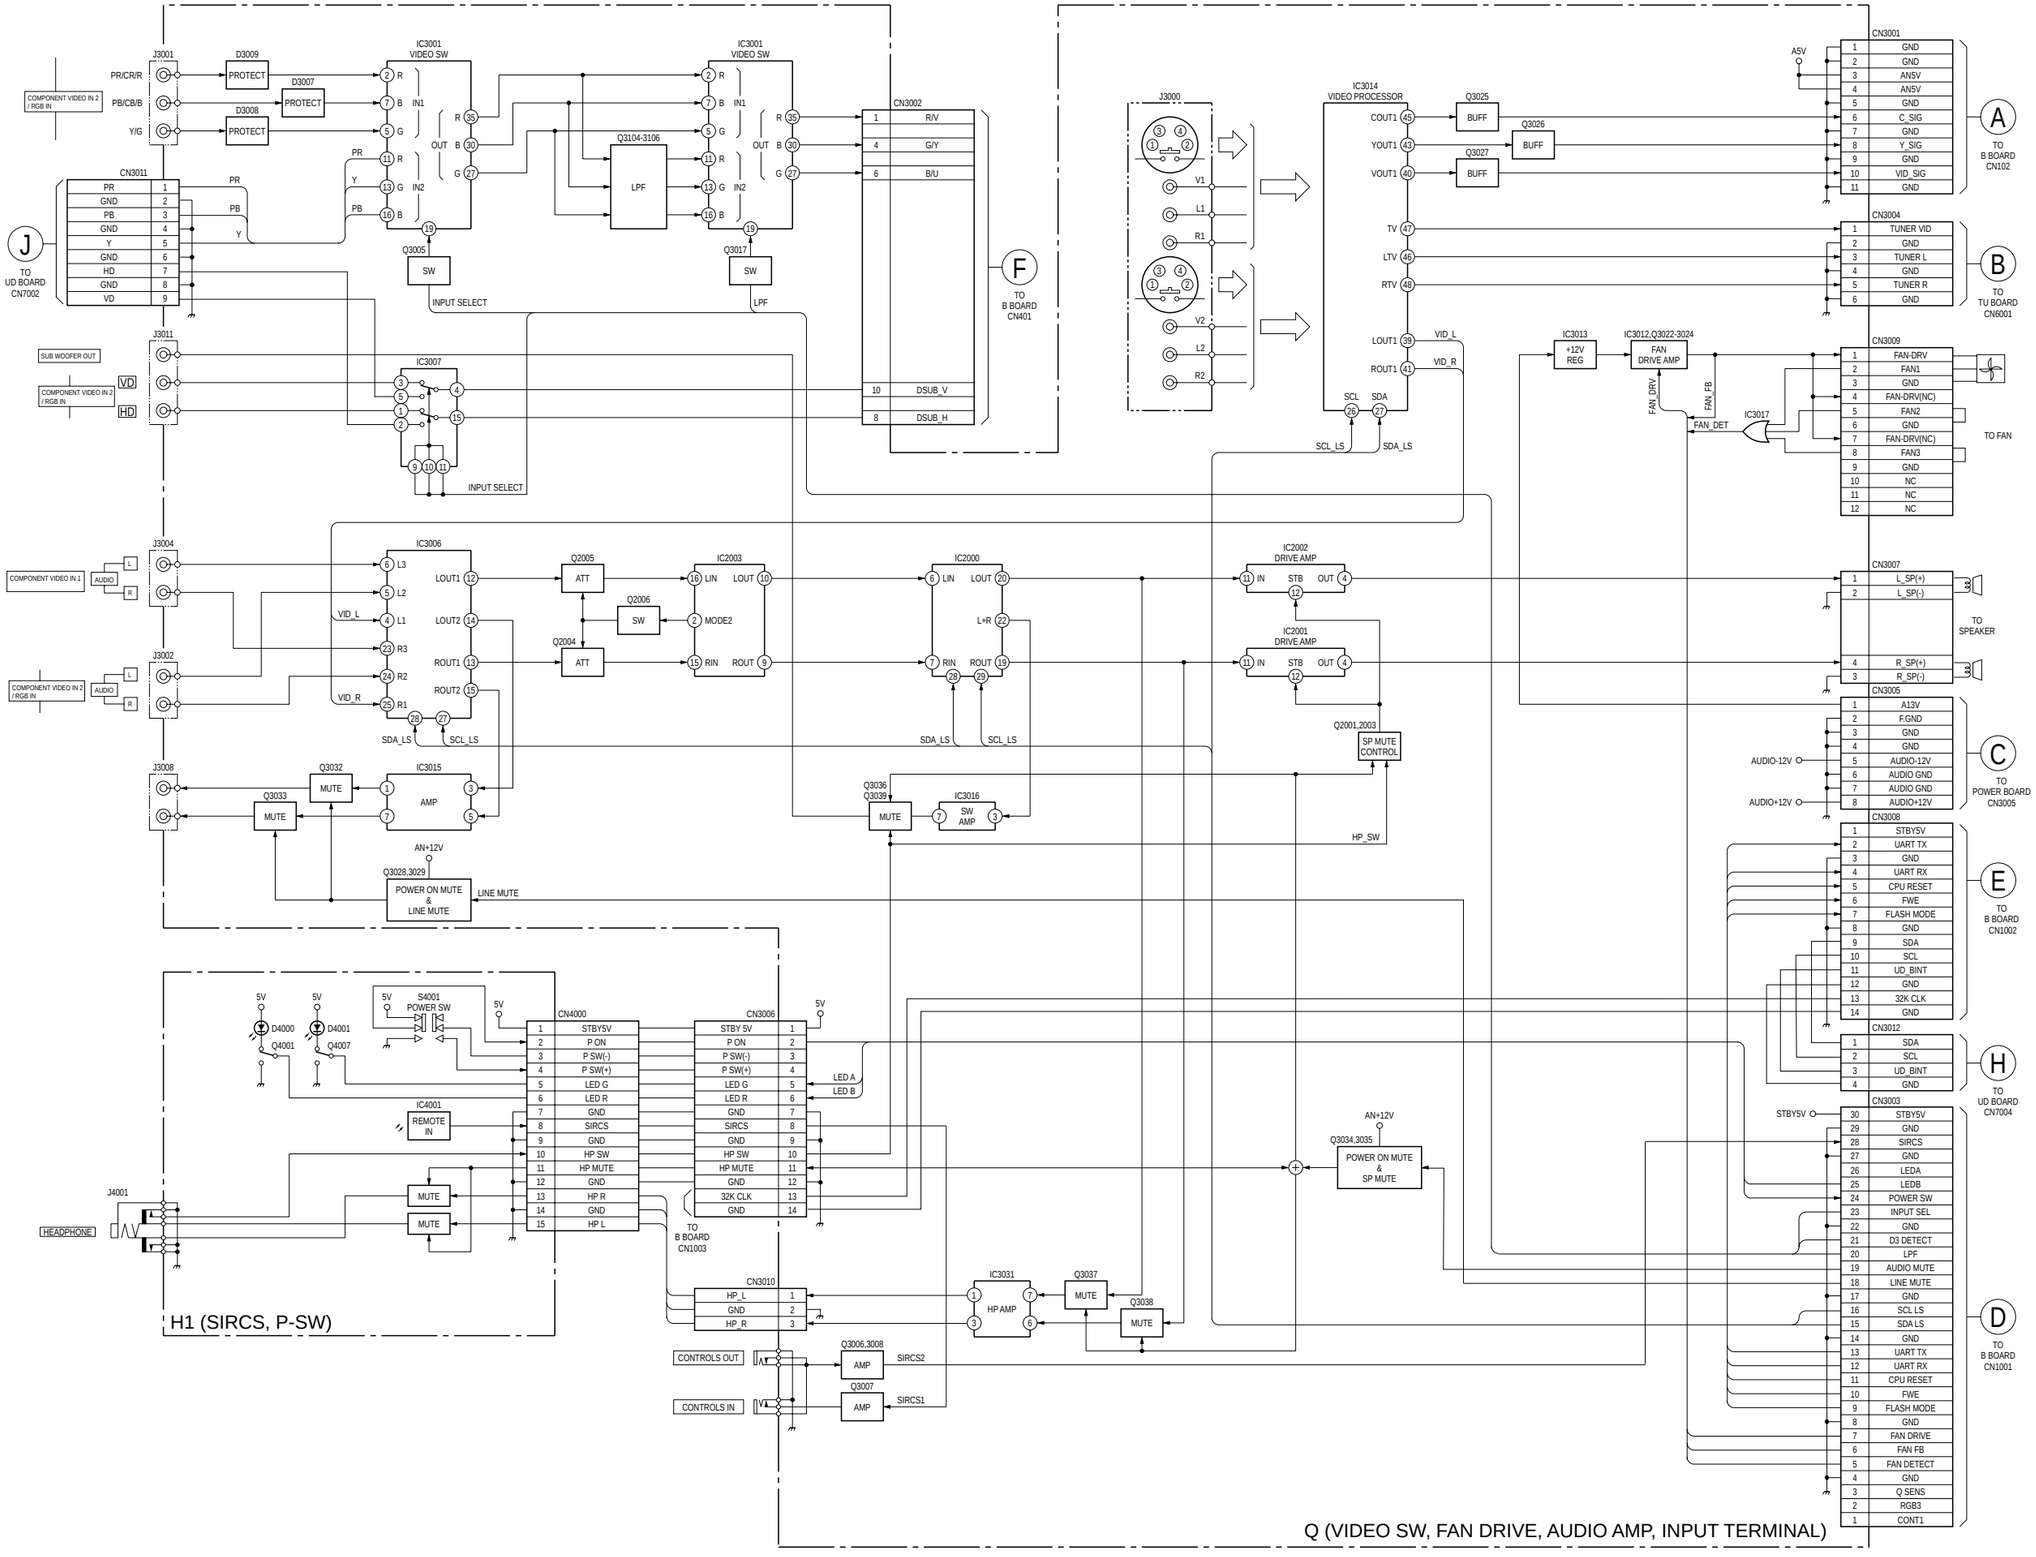
J3001
PR/CR/R
PB/CB/B
Y/G
COMPONENT VIDEO IN 2 / RGB IN
CN3011
PR
GND
PB
GND
Y
GND
HD
GND
VD
J
TO UD BOARD CN7002
D3009
D3007
D3008
PROTECT
IC3001 VIDEO SW
IN1
IN2
OUT
Q3005
Q3017
SW
INPUT SELECT
LPF
Q3104-3106
CN3002
R/V
G/Y
B/U
DSUB_V
DSUB_H
F
TO B BOARD CN401
J3011
SUB WOOFER OUT
COMPONENT VIDEO IN 2 / RGB IN
VD
HD
IC3007
J3000
V1
L1
R1
V2
L2
R2
IC3014 VIDEO PROCESSOR
COUT1
YOUT1
VOUT1
Q3025
Q3026
Q3027
BUFF
TV
LTV
RTV
LOUT1
ROUT1
VID_L
VID_R
SCL
SDA
SCL_LS
SDA_LS
A5V
CN3001
GND
AN5V
C_SIG
Y_SIG
VID_SIG
A
TO B BOARD CN102
CN3004
TUNER VID
TUNER L
TUNER R
B
TO TU BOARD CN6001
IC3013
+12V REG
IC3012,Q3022-3024
FAN DRIVE AMP
FAN_DRV
FAN_FB
FAN_DET
IC3017
CN3009
FAN-DRV
FAN1
FAN-DRV(NC)
FAN2
FAN-DRV(NC)
FAN3
NC
TO FAN
J3004
COMPONENT VIDEO IN 1
AUDIO
L
R
J3002
COMPONENT VIDEO IN 3 / RGB IN
IC3006
L3
L2
L1
R3
R2
R1
LOUT1
LOUT2
ROUT1
ROUT2
VID_L
VID_R
SDA_LS
SCL_LS
Q2005
Q2006
Q2004
ATT
SW
IC2003
LIN
LOUT
MODE2
RIN
ROUT
IC2000
L+R
IC2002 DRIVE AMP
IC2001 DRIVE AMP
IN
STB
OUT
Q2001,2003
SP MUTE CONTROL
HP_SW
CN3007
L_SP(+)
L_SP(-)
R_SP(+)
R_SP(-)
TO SPEAKER
J3008
Q3032
Q3033
MUTE
IC3015
AMP
AN+12V
Q3028,3029
POWER ON MUTE & LINE MUTE
LINE MUTE
Q3036
Q3039
IC3016
SW AMP
CN3005
A13V
F.GND
AUDIO-12V
AUDIO GND
AUDIO+12V
C
TO POWER BOARD CN3005
CN3008
STBY5V
UART TX
UART RX
CPU RESET
FWE
FLASH MODE
E
TO B BOARD CN1002
CN3012
SDA
SCL
UD_BINT
H
TO UD BOARD CN7004
5V
D4000
D4001
Q4001
Q4007
S4001 POWER SW
CN4000
P ON
P SW(-)
P SW(+)
LED G
LED R
SIRCS
HP SW
HP MUTE
32K CLK
LED A
LED B
IC4001
REMOTE IN
J4001
HEADPHONE
HP R
HP L
CN3006
TO B BOARD CN1003
CN3010
HP_L
HP_R
IC3031
HP AMP
Q3037
Q3038
CONTROLS OUT
CONTROLS IN
Q3006,3008
Q3007
SIRCS2
SIRCS1
AN+12V
Q3034,3035
POWER ON MUTE & SP MUTE
CN3003
STBY5V
P ON
P SW(-)
P SW(+)
LED G
LED R
SIRCS
HP SW
HP MUTE
32K CLK
LED A
LED B
AUDIO MUTE
LINE MUTE
SCL LS
SDA LS
FAN DRIVE
FAN FB
FAN DETECT
Q SENS
RGB3
CONT1
D
TO B BOARD CN1001
H1 (SIRCS, P-SW)
Q (VIDEO SW, FAN DRIVE, AUDIO AMP, INPUT TERMINAL)

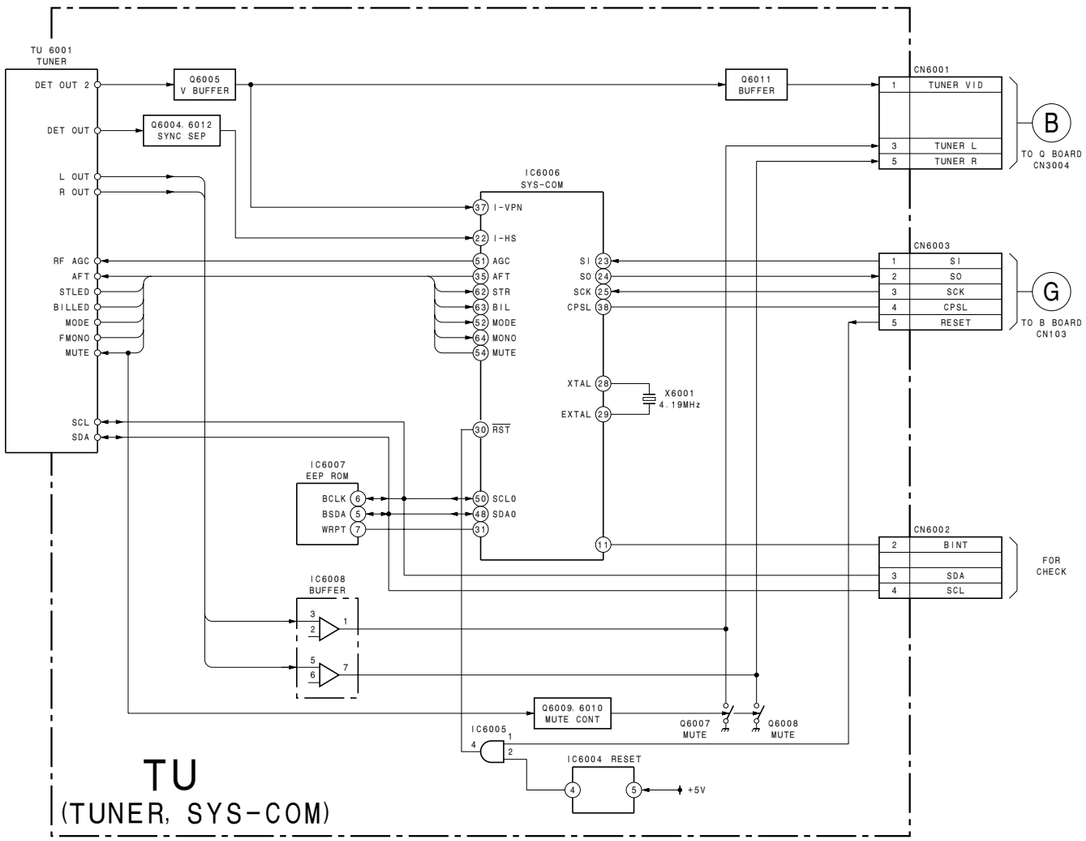
TU 6001
TUNER
DET OUT 2
DET OUT
L OUT
R OUT
RF AGC
AFT
STLED
BILLED
MODE
FMONO
MUTE
SCL
SDA
Q6005
V BUFFER
Q6004. 6012
SYNC SEP
Q6011
BUFFER
IC6006
SYS-COM
I-VPN
I-HS
AGC
AFT
STR
BIL
MODE
MONO
MUTE
RST
SCL0
SDA0
SI
SO
SCK
CPSL
XTAL
EXTAL
X6001
4.19MHz
IC6007
EEP ROM
BCLK
BSDA
WRPT
IC6008
BUFFER
Q6009. 6010
MUTE CONT
Q6007
MUTE
Q6008
MUTE
IC6005
IC6004 RESET
+5V
CN6001
TUNER VID
TUNER L
TUNER R
CN6003
SI
SO
SCK
CPSL
RESET
CN6002
BINT
SDA
SCL
B
TO Q BOARD
CN3004
G
TO B BOARD
CN103
FOR
CHECK
TU
(TUNER, SYS-COM)

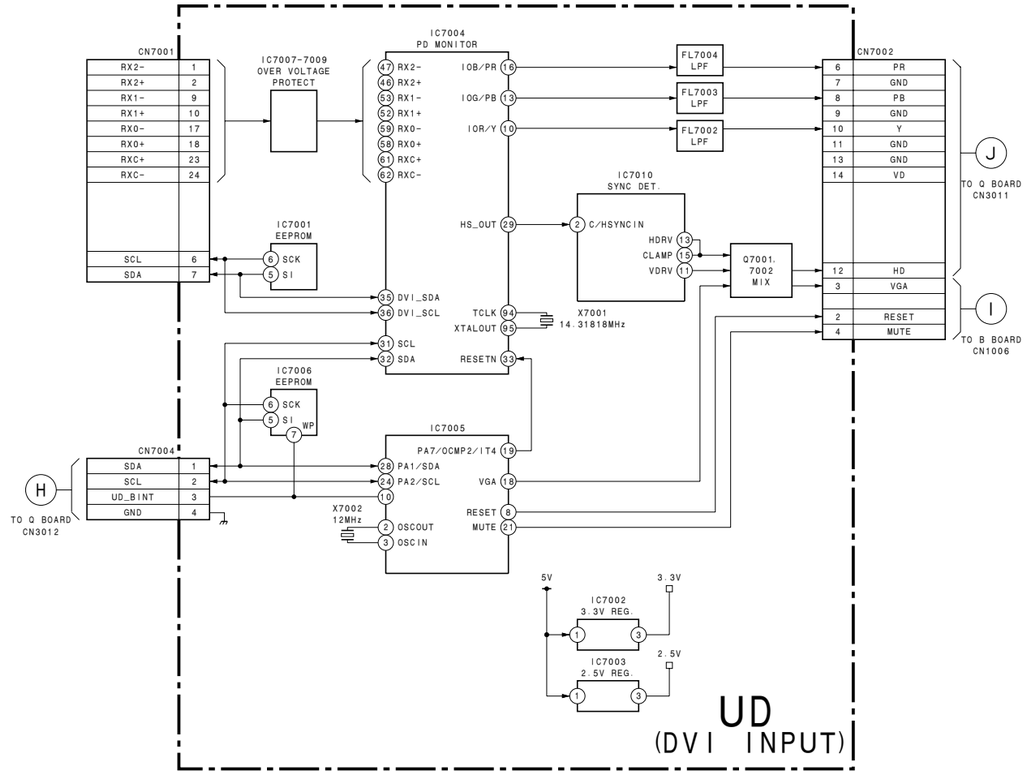
CN7001
RX2-
RX2+
RX1-
RX1+
RX0-
RX0+
RXC+
RXC-
SCL
SDA
IC7007-7009
OVER VOLTAGE
PROTECT
IC7004
PD MONITOR
IC7001
EEPROM
IC7006
EEPROM
IC7005
IC7010
SYNC DET.
C/HSYNCIN
HDRV
CLAMP
VDRV
HS_OUT
DVI_SDA
DVI_SCL
TCLK
XTALOUT
RESETN
X7001
14.31818MHz
Q7001.
7002
MIX
FL7004
LPF
FL7003
LPF
FL7002
LPF
IOB/PR
IOG/PB
IOR/Y
CN7002
PR
GND
PB
GND
Y
GND
GND
VD
HD
VGA
RESET
MUTE
J
TO Q BOARD
CN3011
I
TO B BOARD
CN1006
CN7004
SDA
SCL
UD_BINT
GND
H
TO Q BOARD
CN3012
PA7/OCMP2/IT4
PA1/SDA
PA2/SCL
VGA
RESET
MUTE
X7002
12MHz
OSCOUT
OSCIN
5V
3.3V
IC7002
3.3V REG.
IC7003
2.5V REG.
2.5V
UD
(DVI INPUT)

3-2. CIRCUIT BOARDS LOCATION

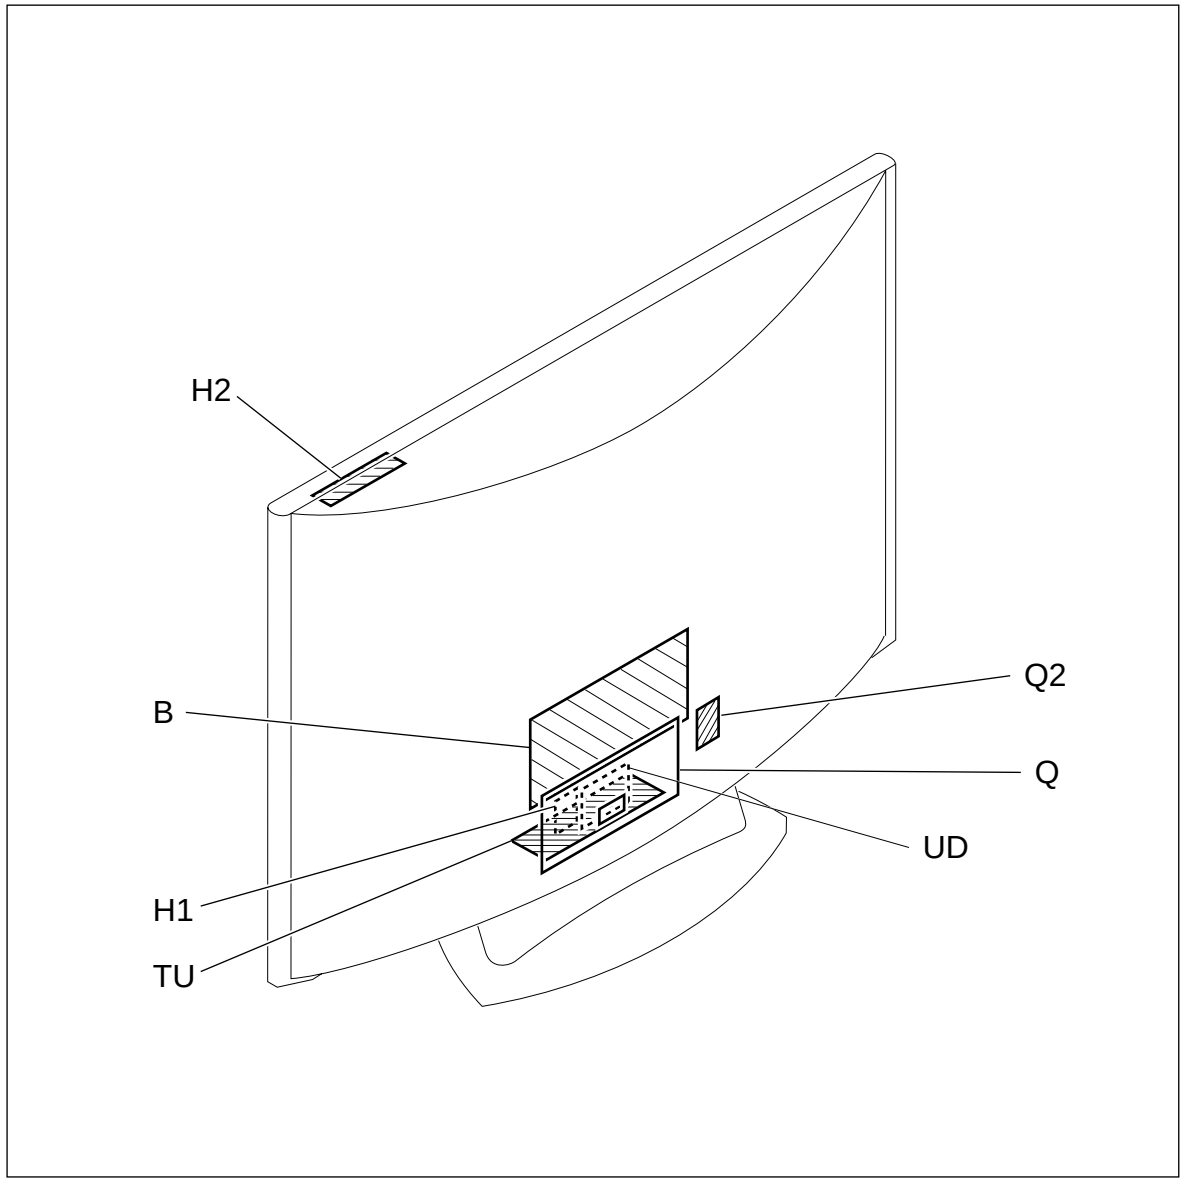

3-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note:

- All capacitors are in µF unless otherwise noted. (pF: µµF)
  Capacitors without voltage indication are all 50 V.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

  Pitch: 5 mm

Rating electrical power 1/4 W (CHIP : 1/10 W)

- All resistors are in ohms.
- : nonflammable resistor.
- : fusible resistor.
- △ : internal component.
- : panel designation, and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- ⊥ : earth-ground.
- ⏚ : earth-chassis.
- When replacing the part in below table, be sure to perform the related adjustment.
- All voltages are in V.
- Readings are taken with a 10 M digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
- ∗ : Can not be measured.
- Circled numbers are waveform references.
- : B + bus.
- : B – bus.

Note: The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par un tramé et une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- Divided circuit diagram

  One sheet of B and Q boards are circuit diagram is divided into three sheets, each having the code B-ⓐ to B-ⓒ. For example, the destination (ab1) on the code B-ⓐ sheet is connected to (ab1) on the B-ⓑ sheet.

  a b 1
  - 1 → Ref. No.
  - b → Circuit diagram division code
  - a → Circuit diagram division code

Terminal name of semiconductors in silk screen printed circuit (∗)

	Device	Printed symbol	Terminal name	Circuit
①	Transistor		Collector / Base / Emitter	
②	Transistor		Collector / Base / Emitter	
③	Diode		Cathode / Anode	
④	Diode		Cathode / Anode (NC)	
⑤	Diode		Cathode / Anode (NC)	
⑥	Diode		Common / Anode / Cathode	
⑦	Diode		Common / Anode / Cathode	
⑧	Diode		Common / Anode / Anode	
⑨	Diode		Common / Anode / Anode	
⑩	Diode		Common / Cathode / Cathode	
⑪	Diode		Common / Cathode / Cathode	
⑫	Diode		Anode Anode Cathode / Cathode Cathode Anode	
⑬	Transistor (FET)		Drain / Source / Gate	
⑭	Transistor (FET)		Drain / Source / Gate	
⑮	Transistor (FET)		Source / Drain / Gate	
⑯	Transistor		Emitter / Collector / Base	
⑰	Transistor		C2 B1 E1 / E2 B2 C1	
⑱	Transistor		C1 B2 E2 / E1 B1 C2	
⑲	Transistor		C1 B2 E2 / E1 B1 C2	
⑳	Transistor		C1 B2 E2 / E1 B1 C2	
㉑	Transistor		E2 B1 E1 / C2 C1(B2)	
㉒	Transistor		(B2) B1 E1 E2 / C1 C2	
㉓	Transistor		(B2) E2 E1 B1 / C2 C1	
–	Discrete semiconductot			

(Chip semiconductors that are not actually used are included.)

Ver.1.6

(1) Schematic Diagrams of B (ⓐ, ⓑ, ⓒ, ⓓ, ⓔ, ⓕ, ⓖ) Board

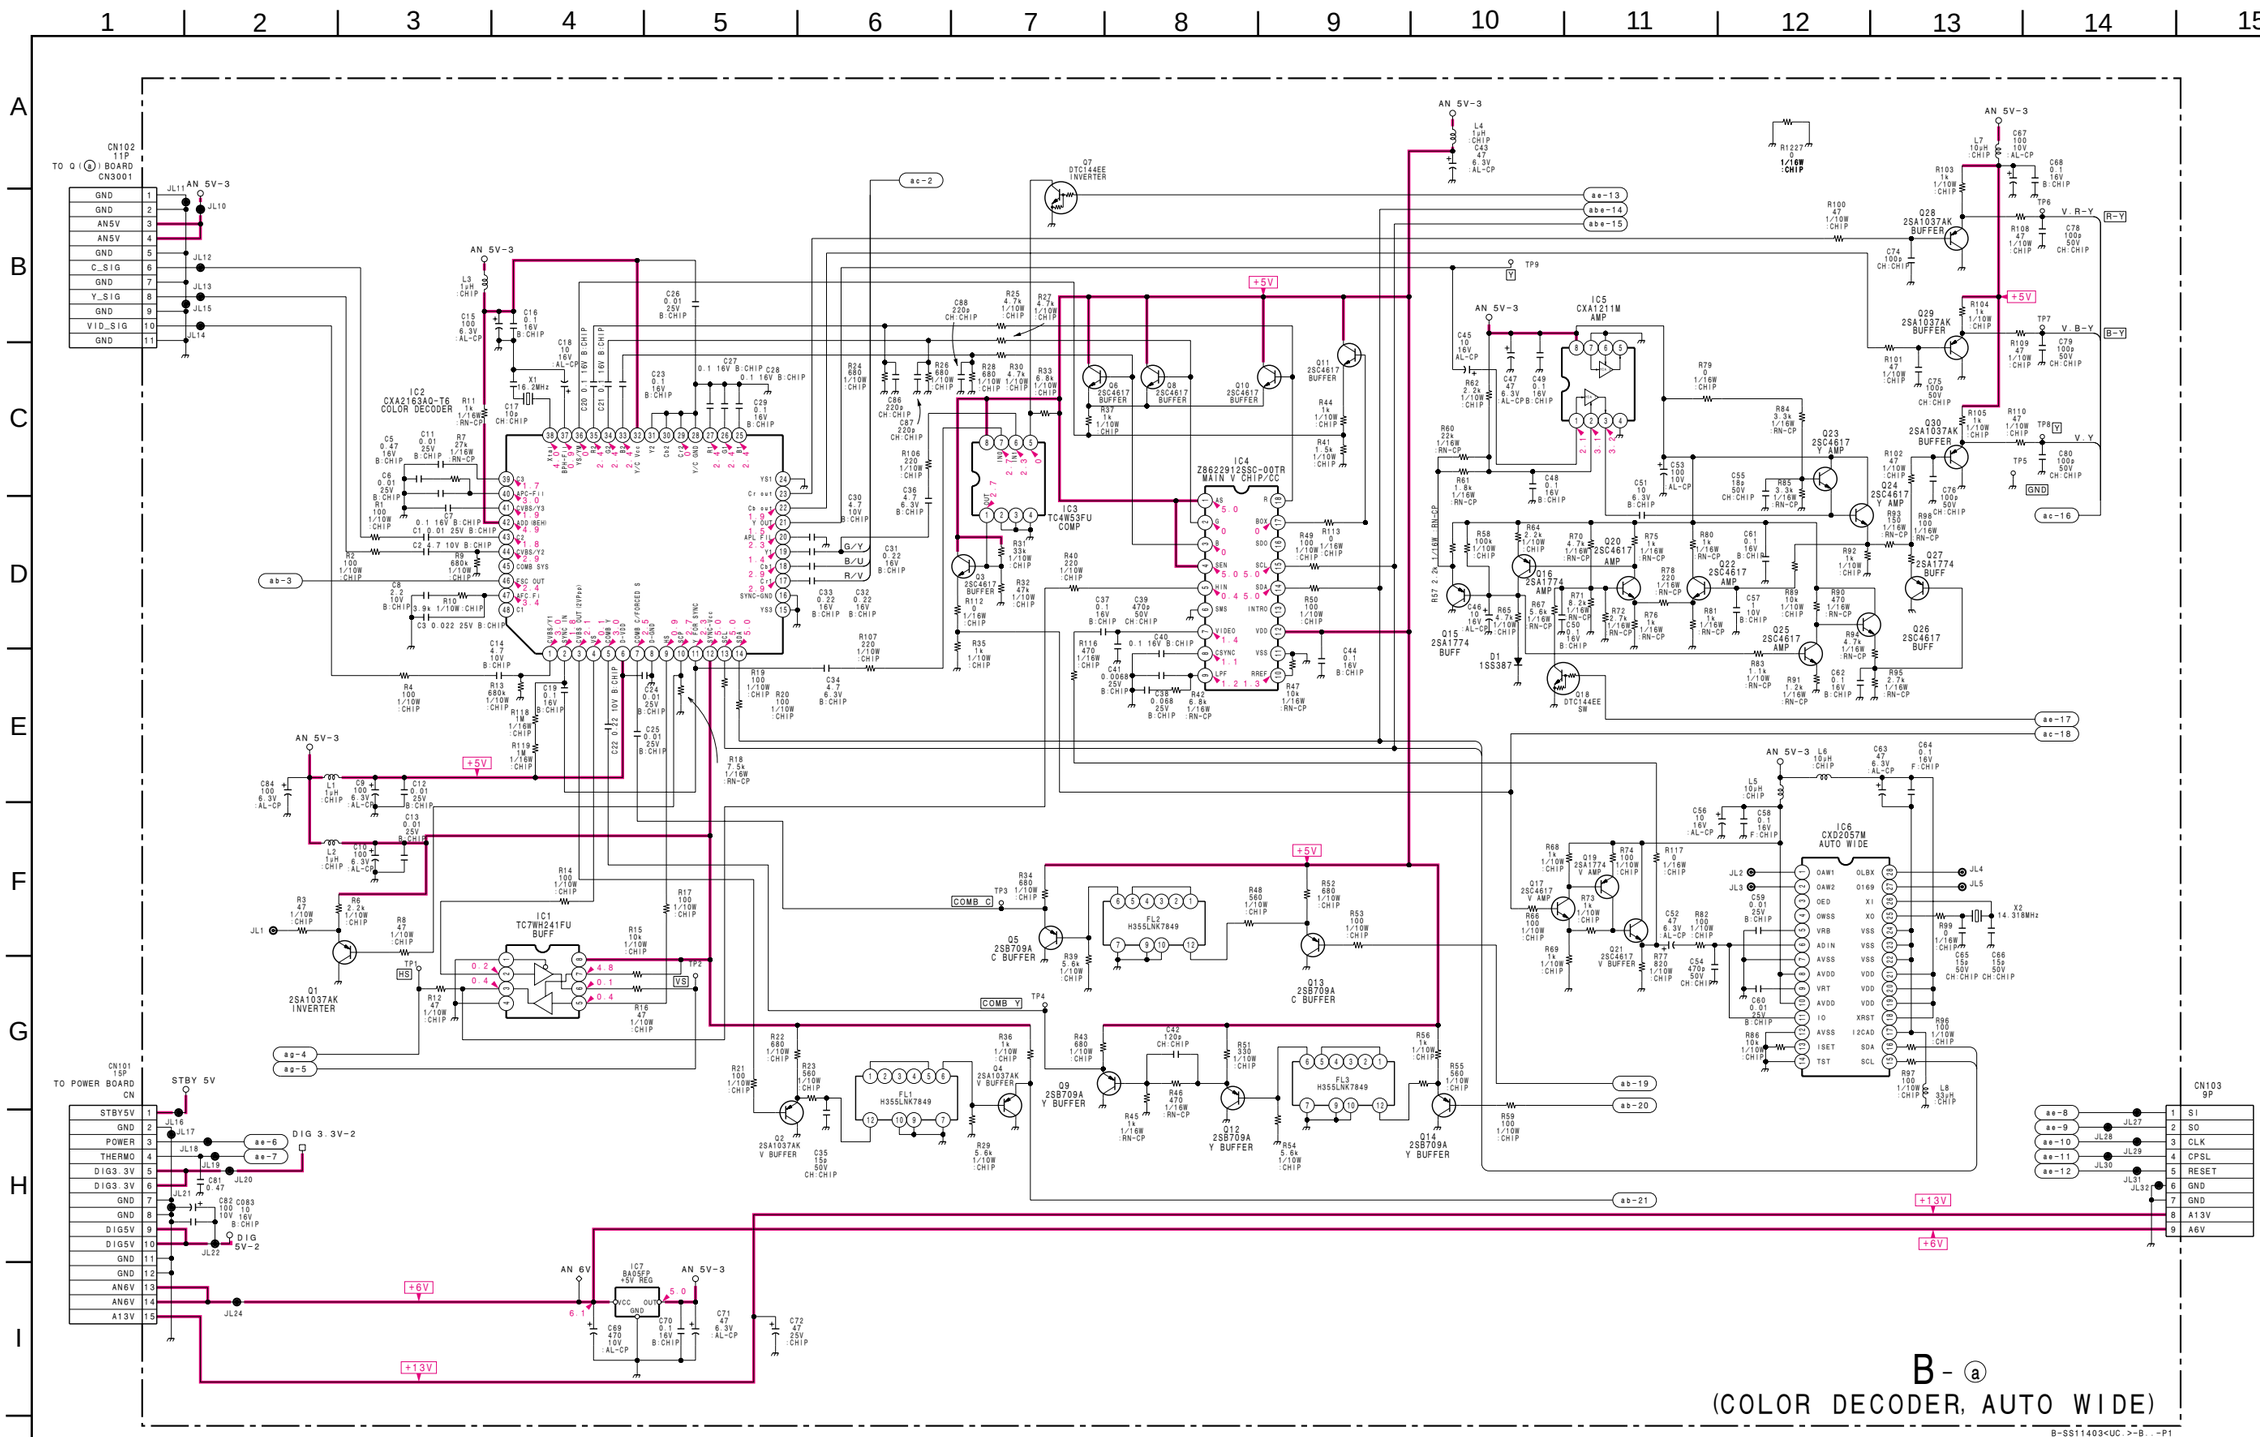

- Divided circuit diagram
  One sheet of B and Q boards are circuit diagram is divided into three sheets, each having the code B-ⓐ to B-ⓒ. For example, the destination (ab1) on the code B-ⓐ sheet is connected to (ab1) on the B-ⓑ sheet.

  a b 1
  - 1 → Ref. No.
  - b → Circuit diagram division code
  - a → Circuit diagram division code

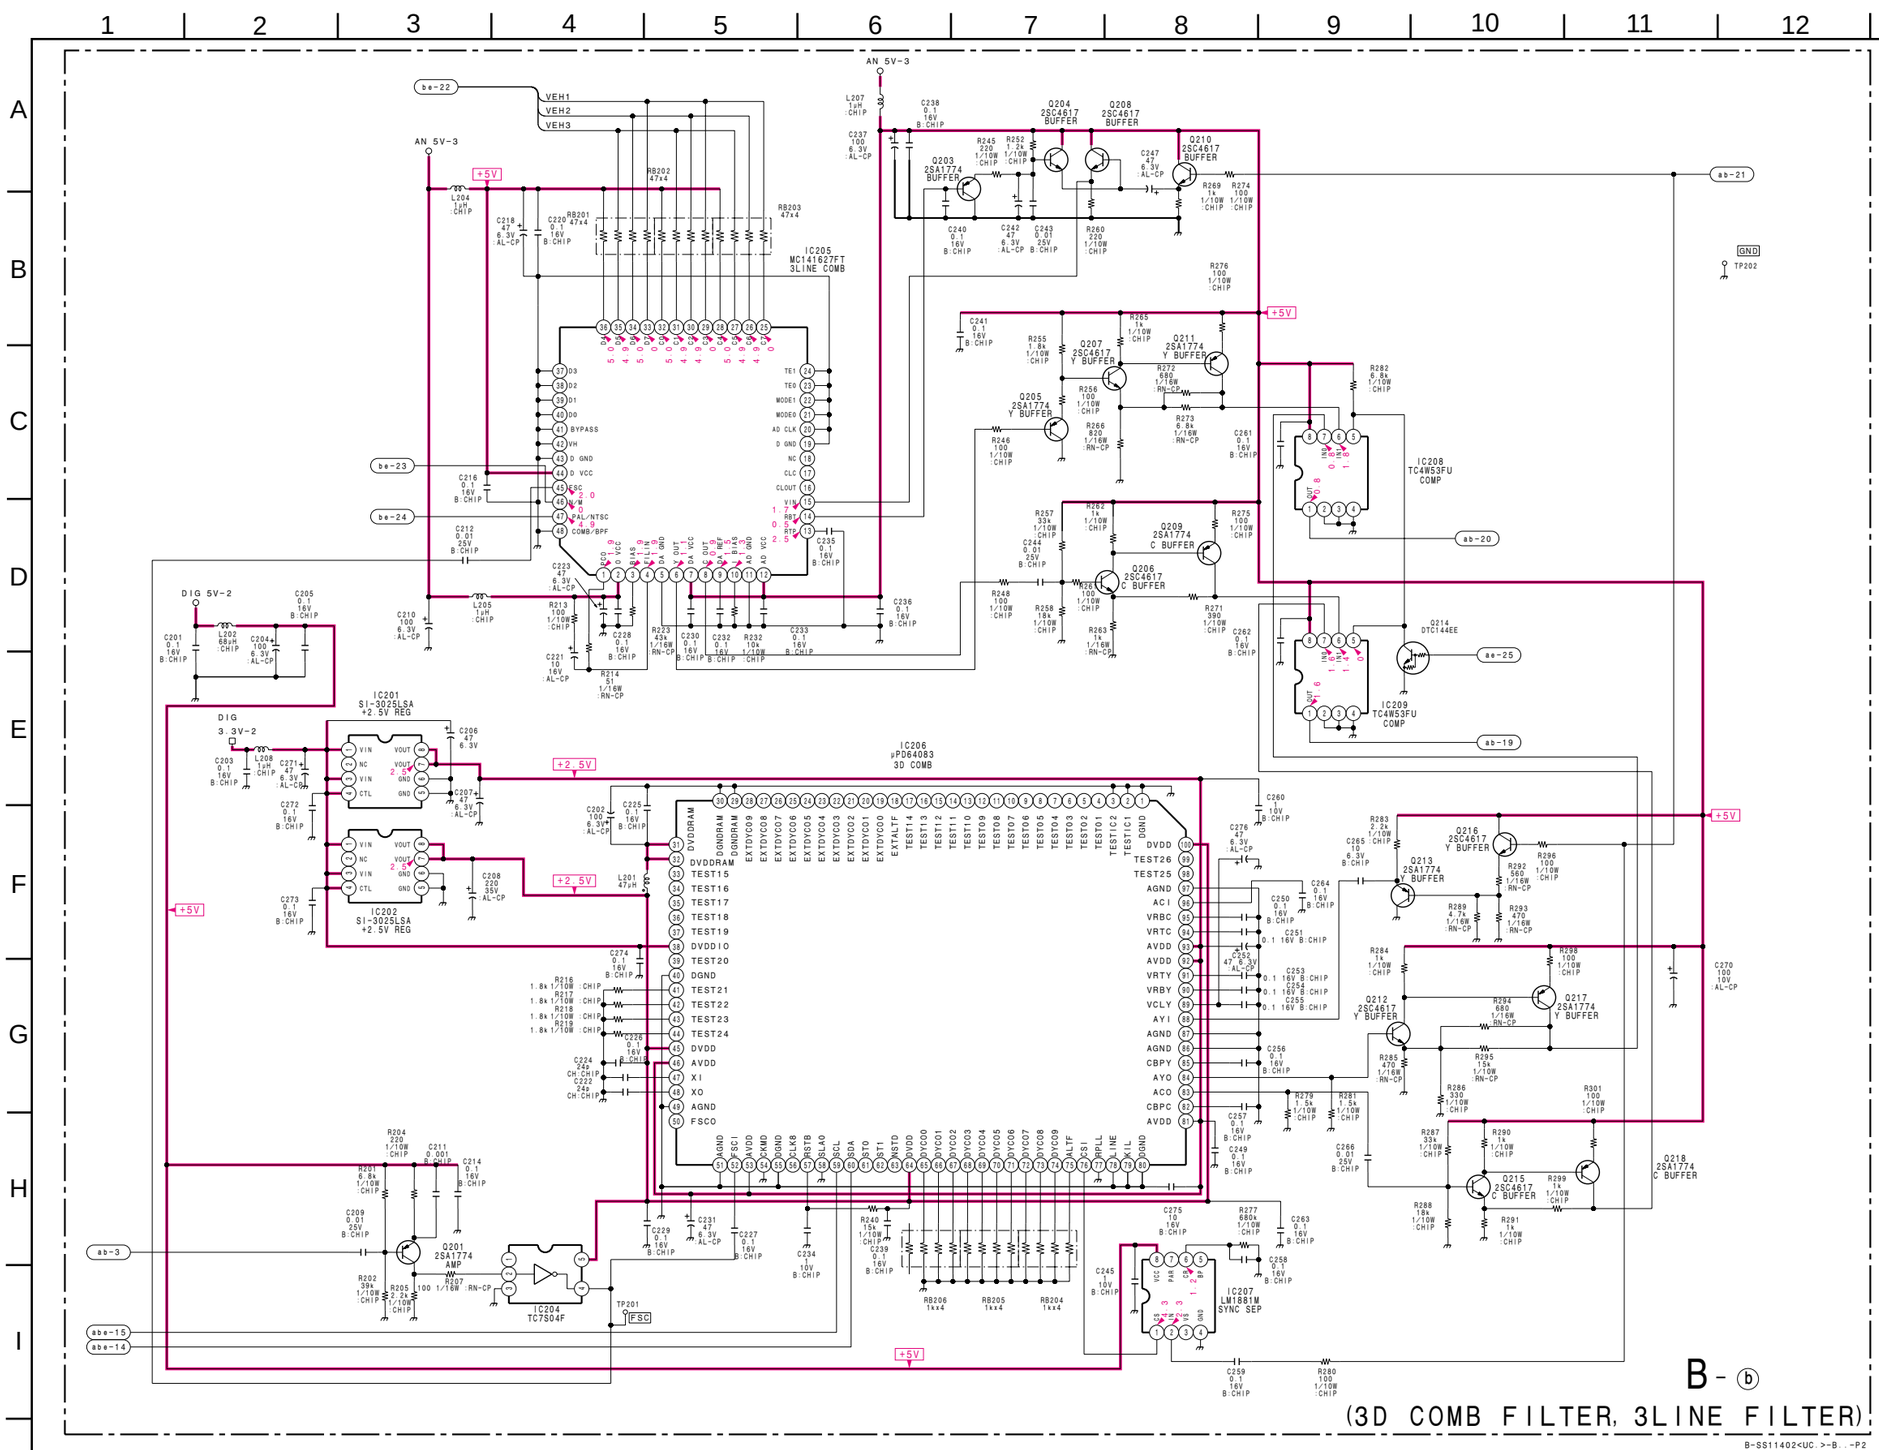

- Divided circuit diagram
  One sheet of B and Q boards are circuit diagram is divided into three sheets, each having the code B-ⓐ to B-ⓒ. For example, the destination (ab1) on the code B-ⓐ sheet is connected to (ab1) on the B-ⓑ sheet.

  a b 1
  - 1 → Ref. No.
  - b → Circuit diagram division code

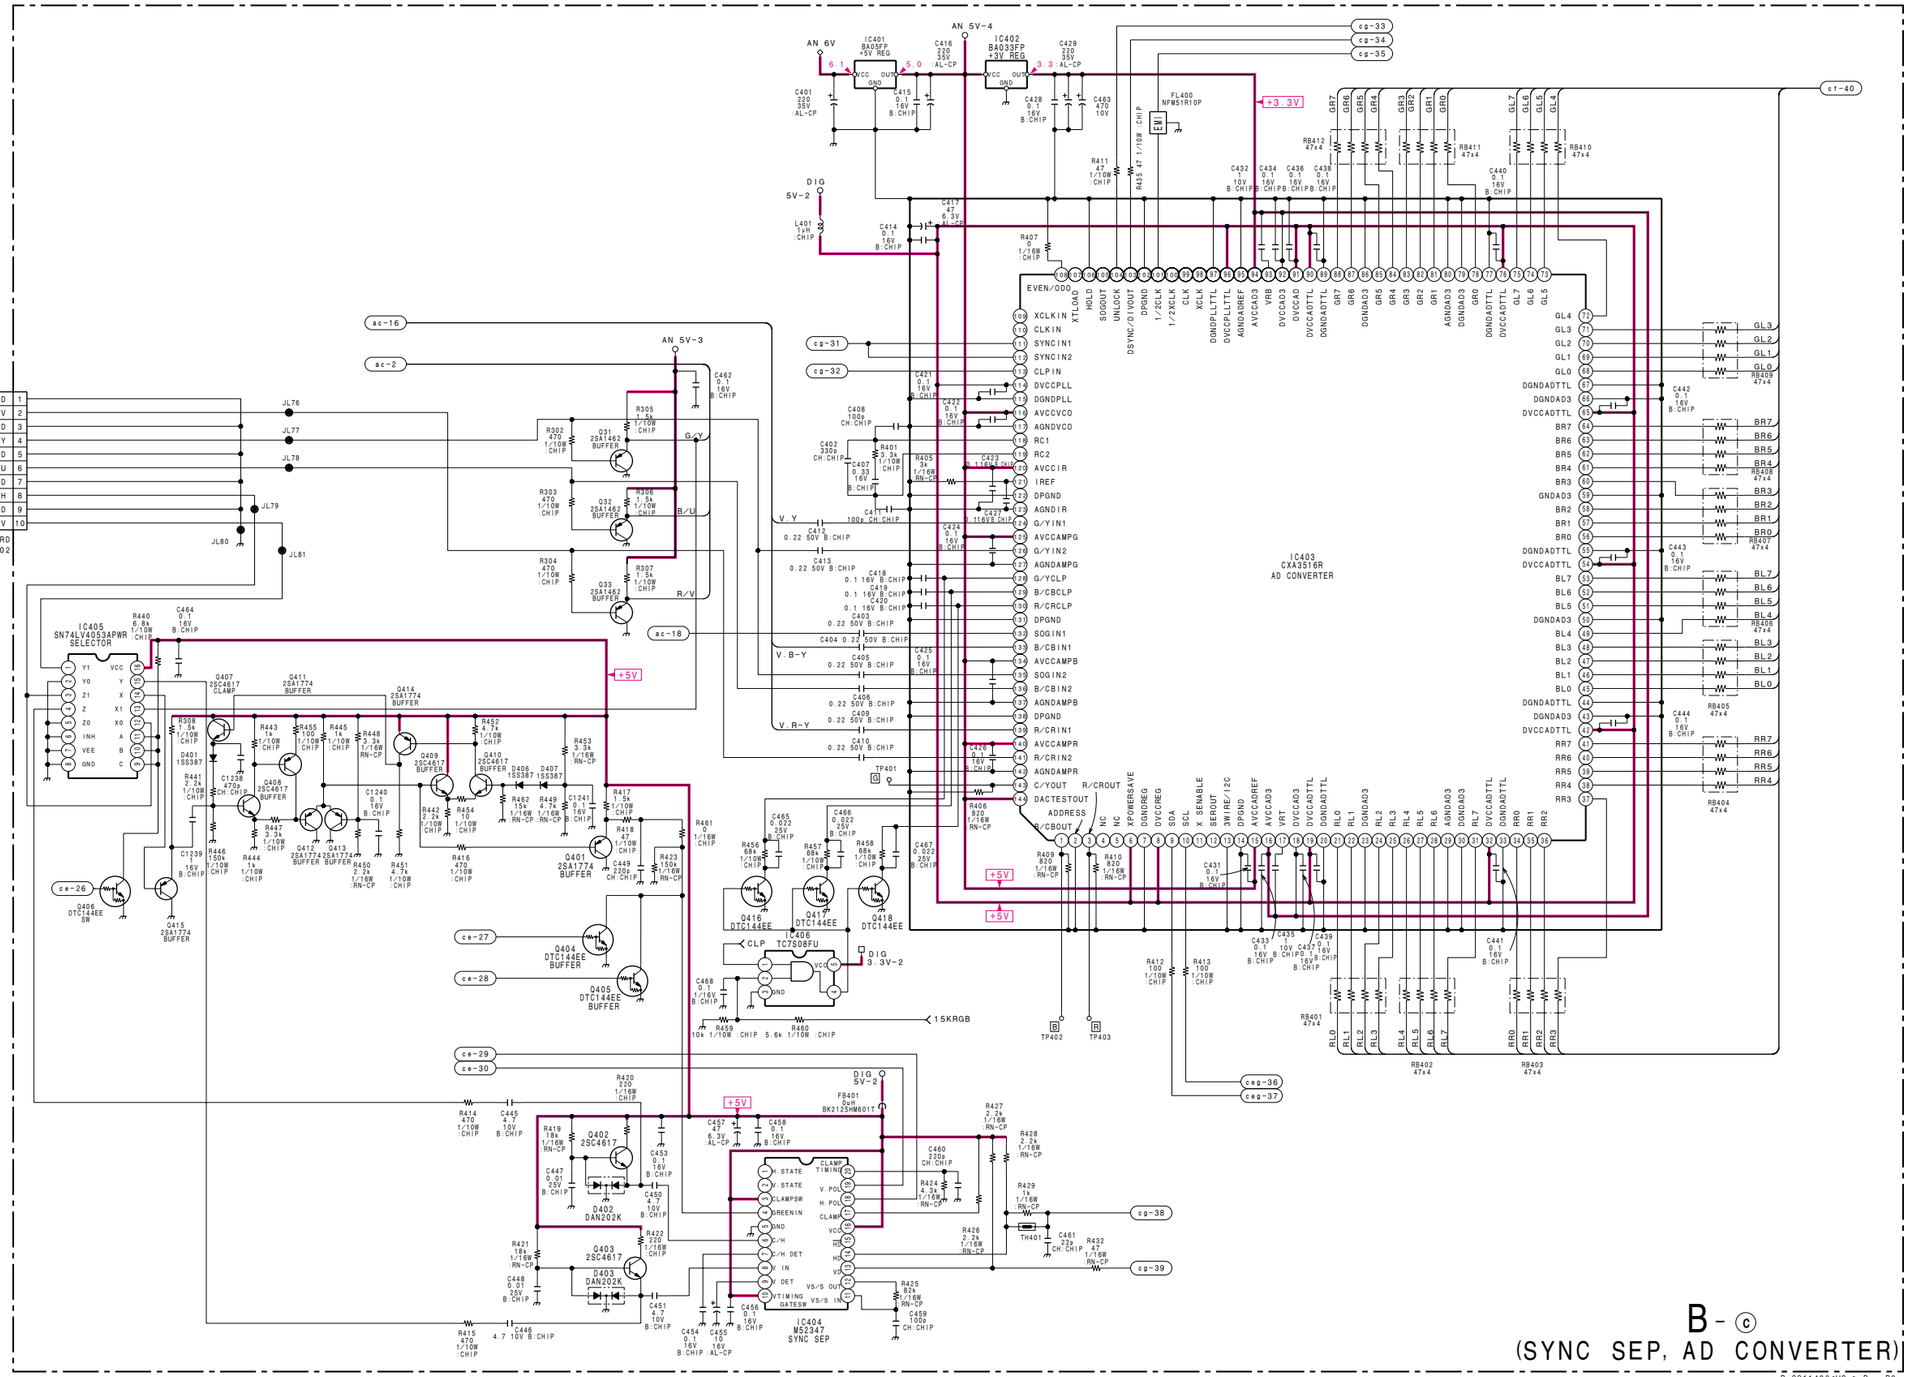

B-ⓒ
(SYNC SEP, AD CONVERTER)

- Divided circuit diagram
  One sheet of B and Q boards are circuit diagram is divided into three sheets, each having the code B-ⓐ to B-ⓒ. For example, the destination ab1 on the code B-ⓐ sheet is connected to ab1 on the B-ⓑ sheet.

a b 1
- 1 → Ref. No.
- b → Circuit diagram division code

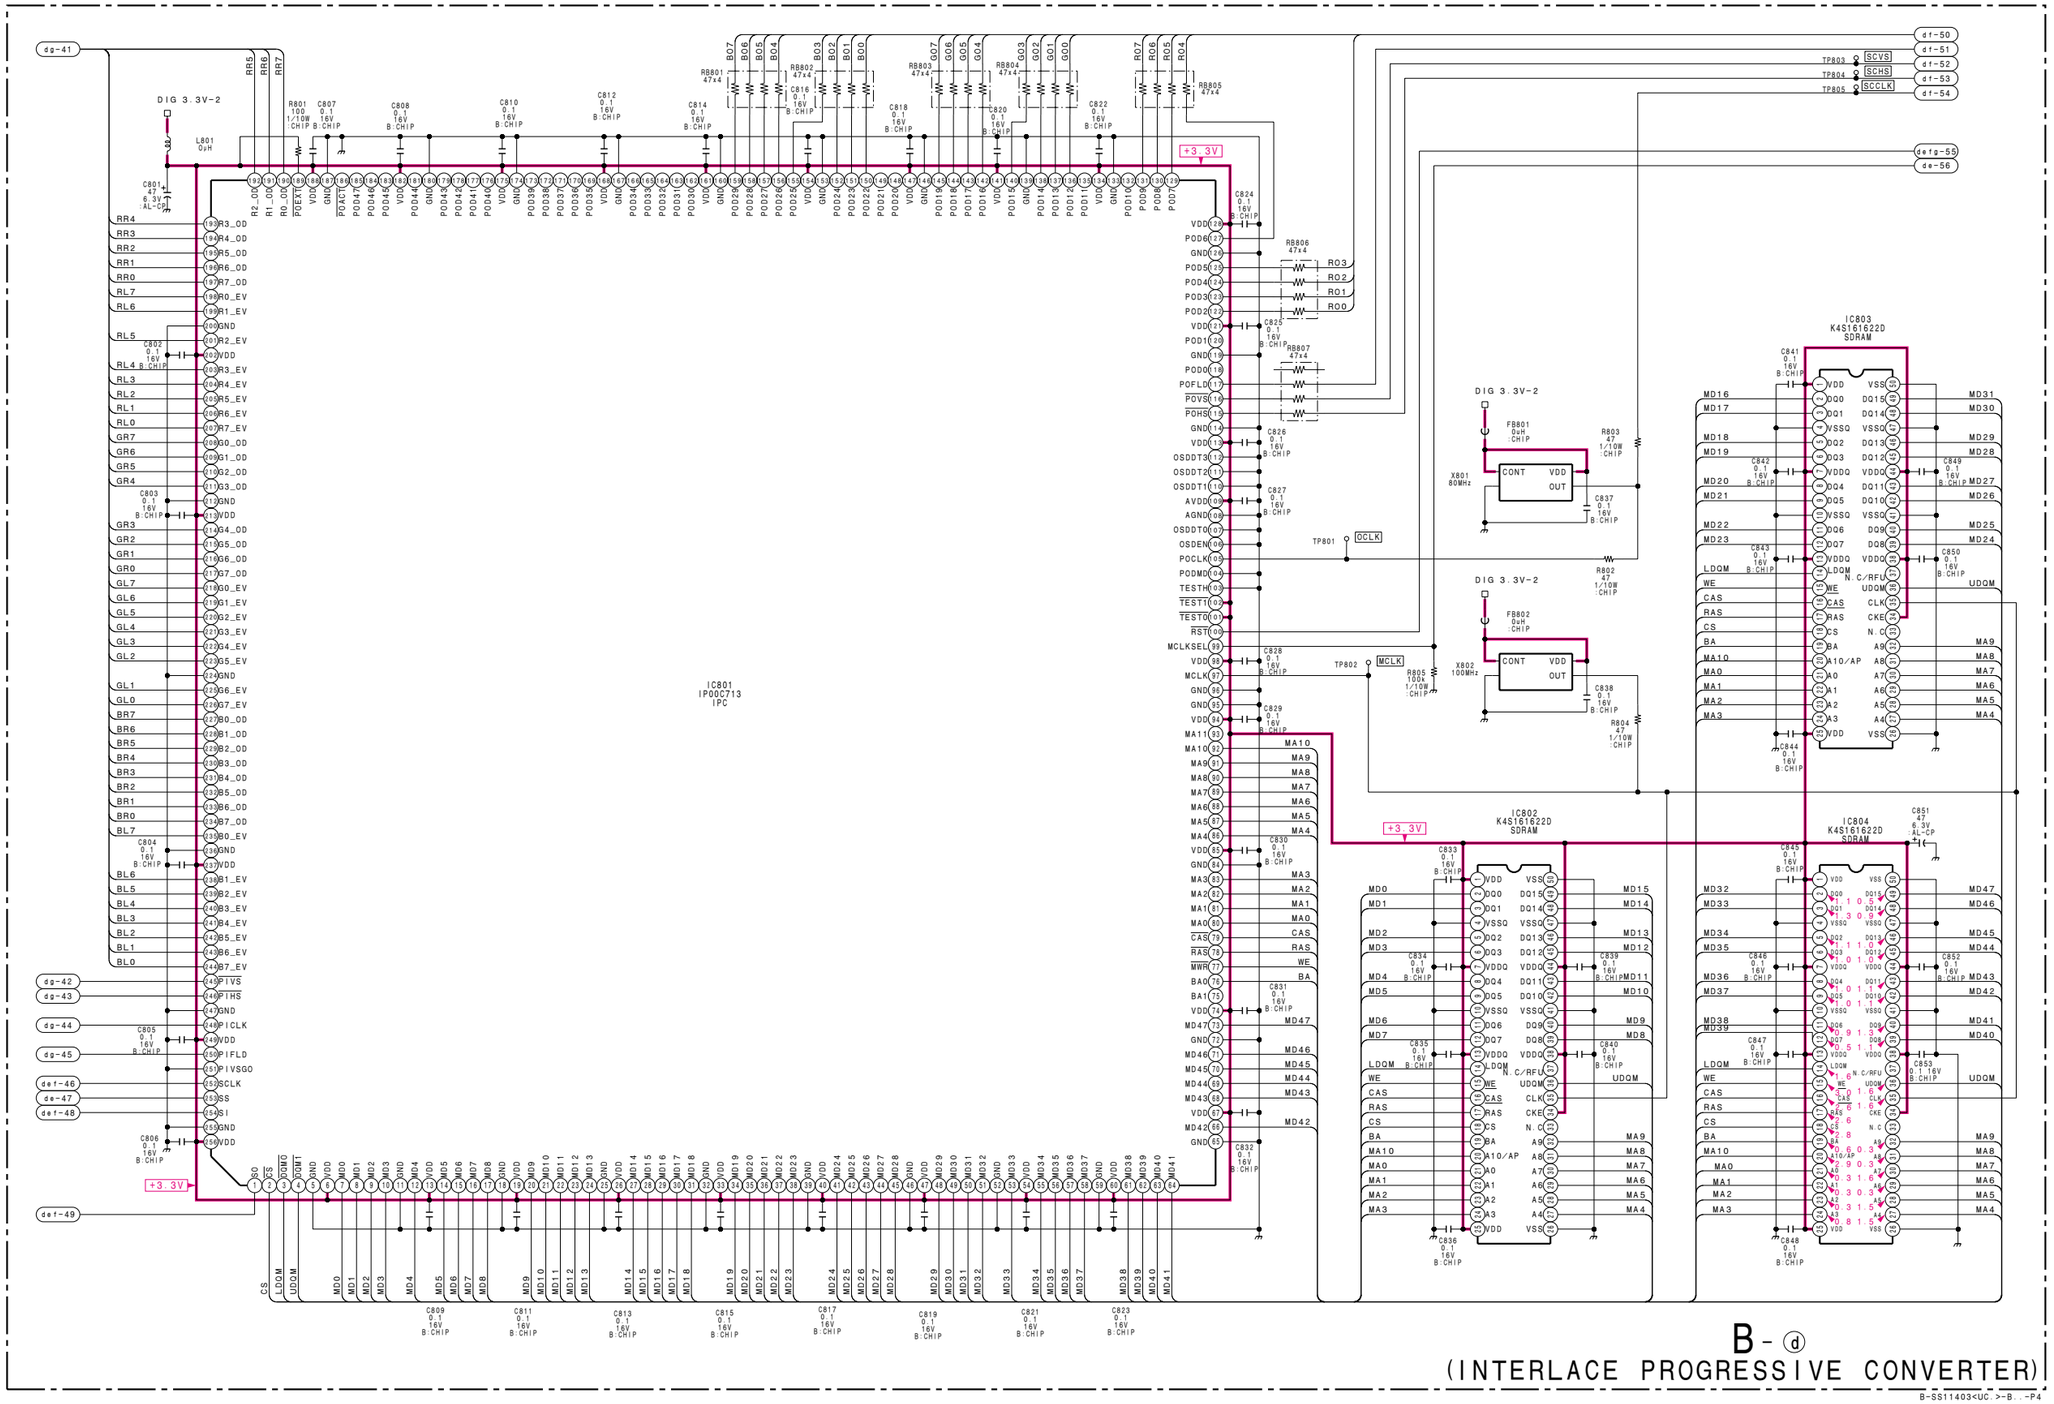

- Divided circuit diagram
  One sheet of B and Q boards are circuit diagram is divided into three sheets, each having the code B-ⓐ to B-ⓒ. For example, the destination ab1 on the code B-ⓐ sheet is connected to ab1 on the B-ⓑ sheet.

  a b 1
  - 1 → Ref. No.
  - a b → Circuit diagram division code

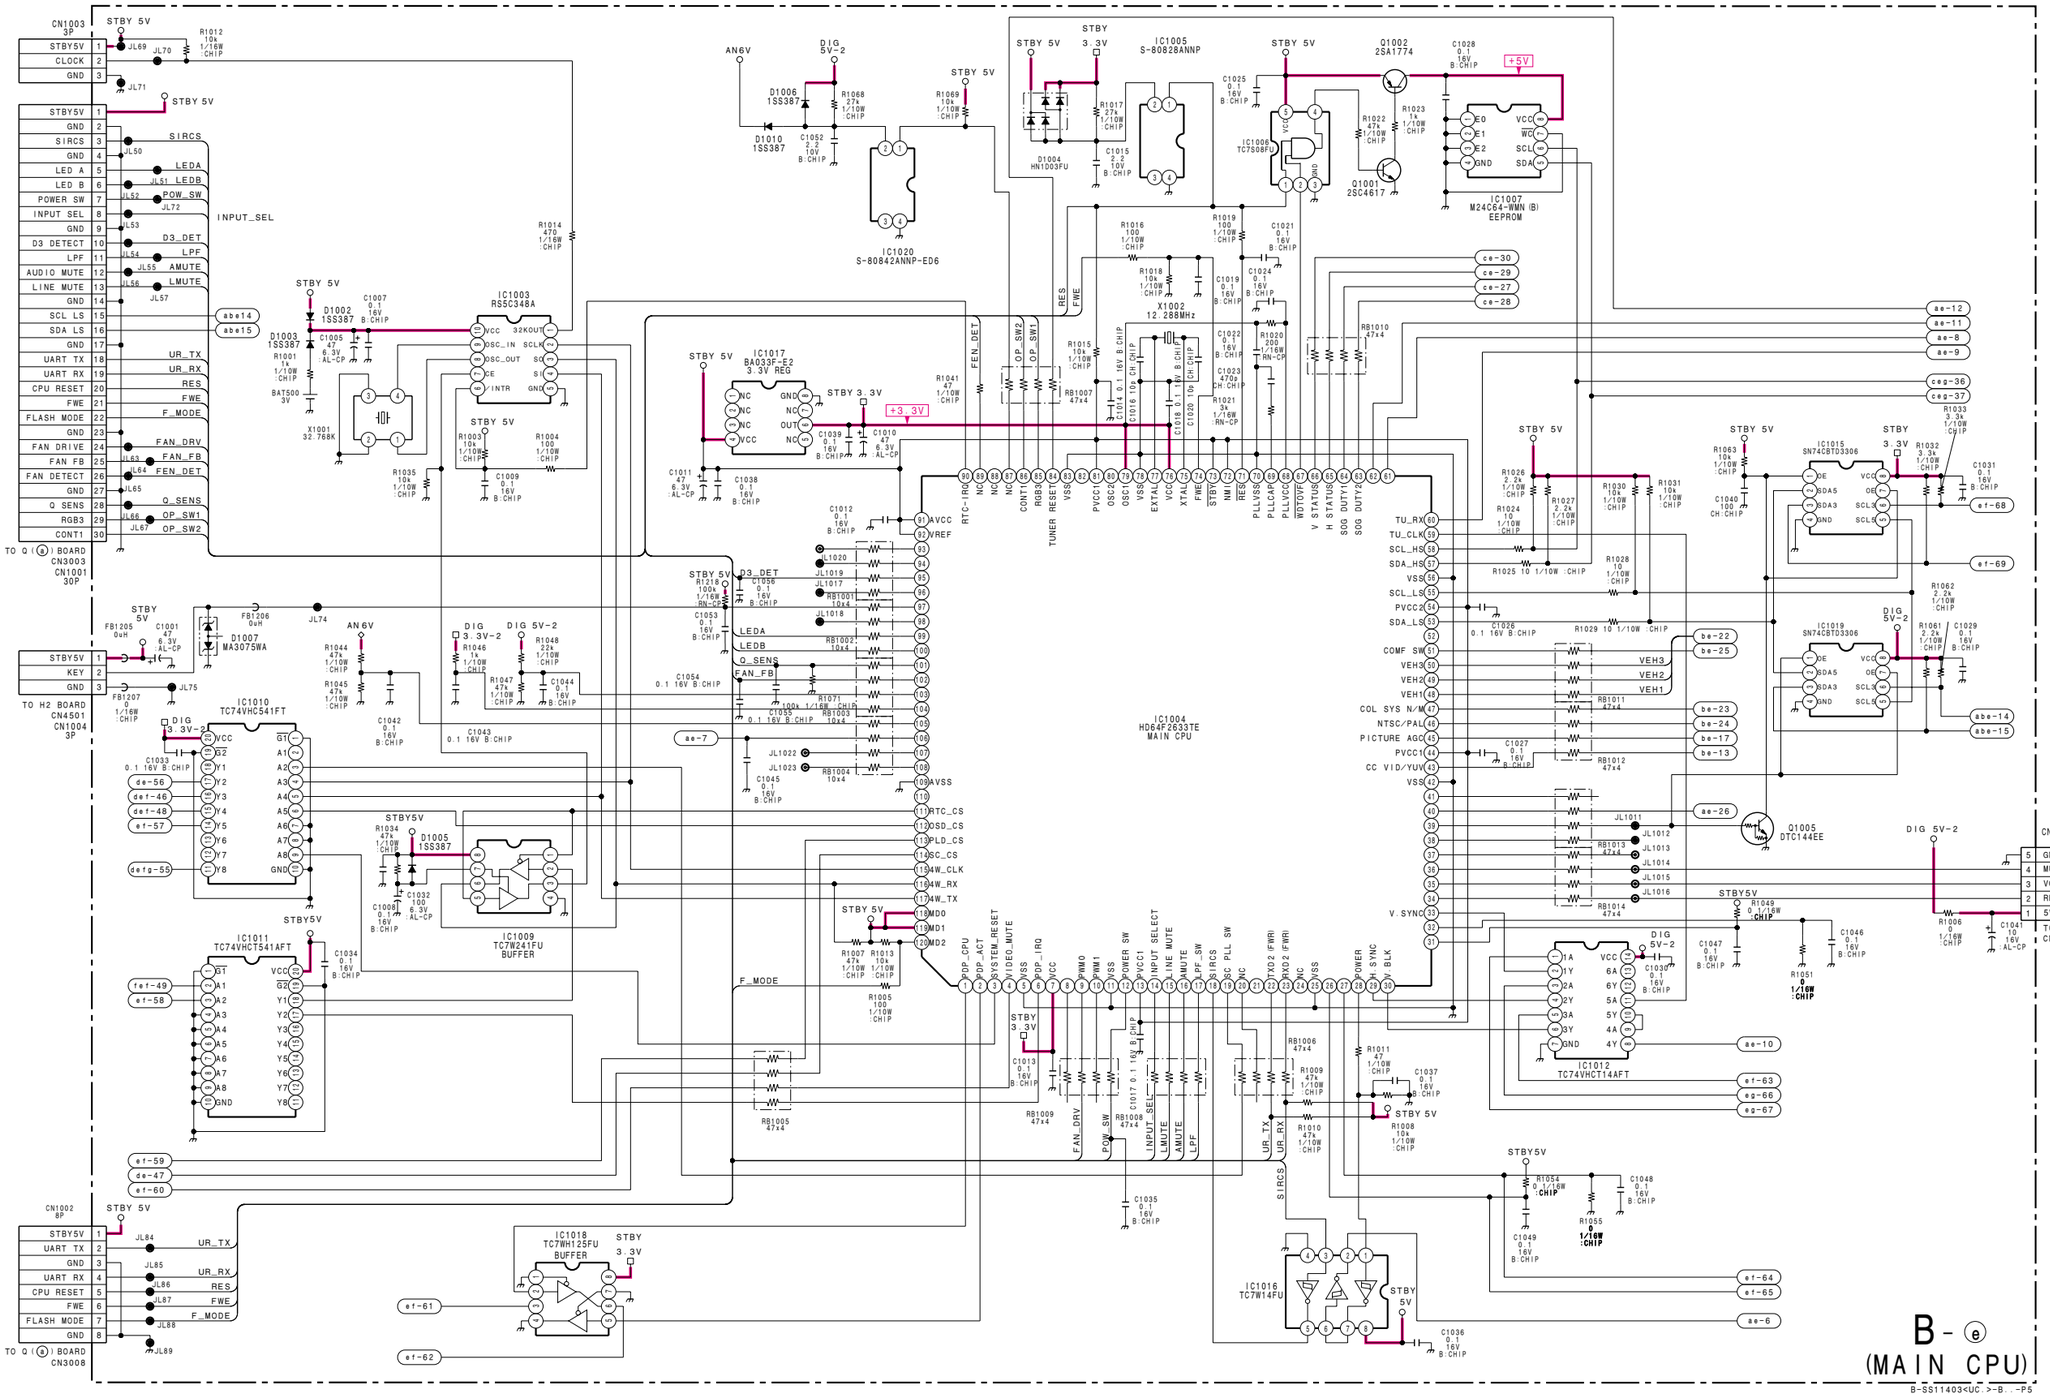

- Divided circuit diagram
  One sheet of B and Q boards are circuit diagram is divided into three sheets, each having the code B-ⓐ to B-ⓒ. For example, the destination ab1 on the code B-ⓐ sheet is connected to ab1 on the B-ⓑ sheet.

  a b 1
  - 1 → Ref. No.
  - a b → Circuit diagram division code

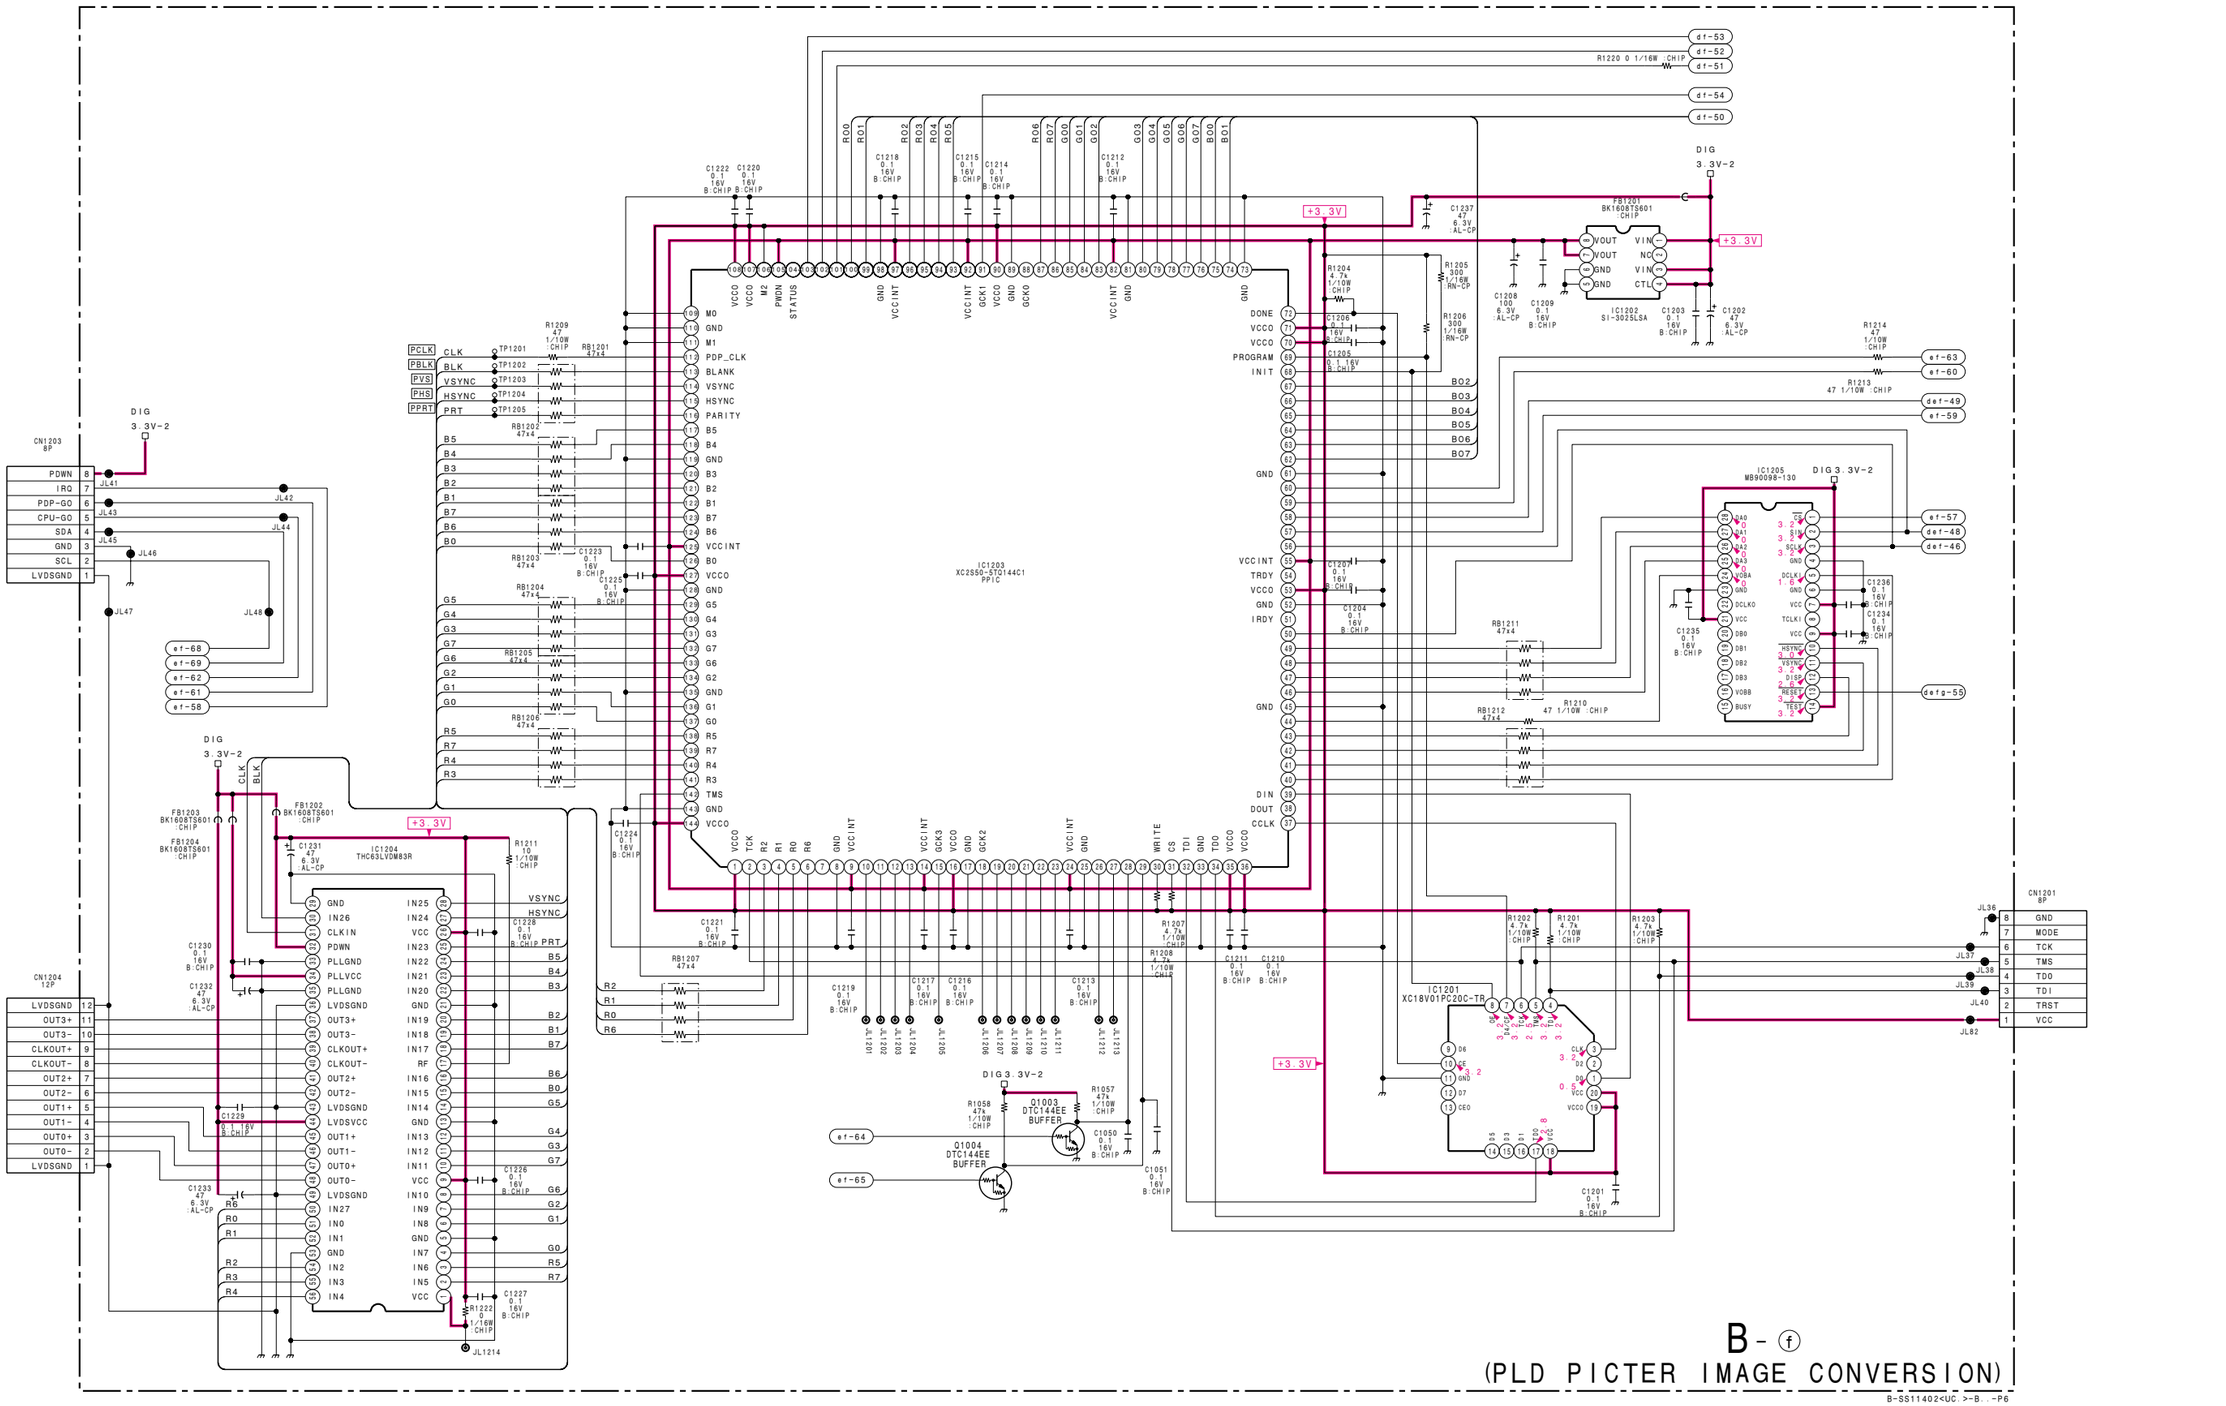

- Divided circuit diagram
  One sheet of B and Q boards are circuit diagram is divided into three sheets, each having the code B-ⓐ to B-ⓒ. For example, the destination (ab1) on the code B-ⓐ sheet is connected to (ab1) on the B-ⓑ sheet.

```
a b 1
    └──→ Ref. No.
  └────→ Circuit diagram division code
```

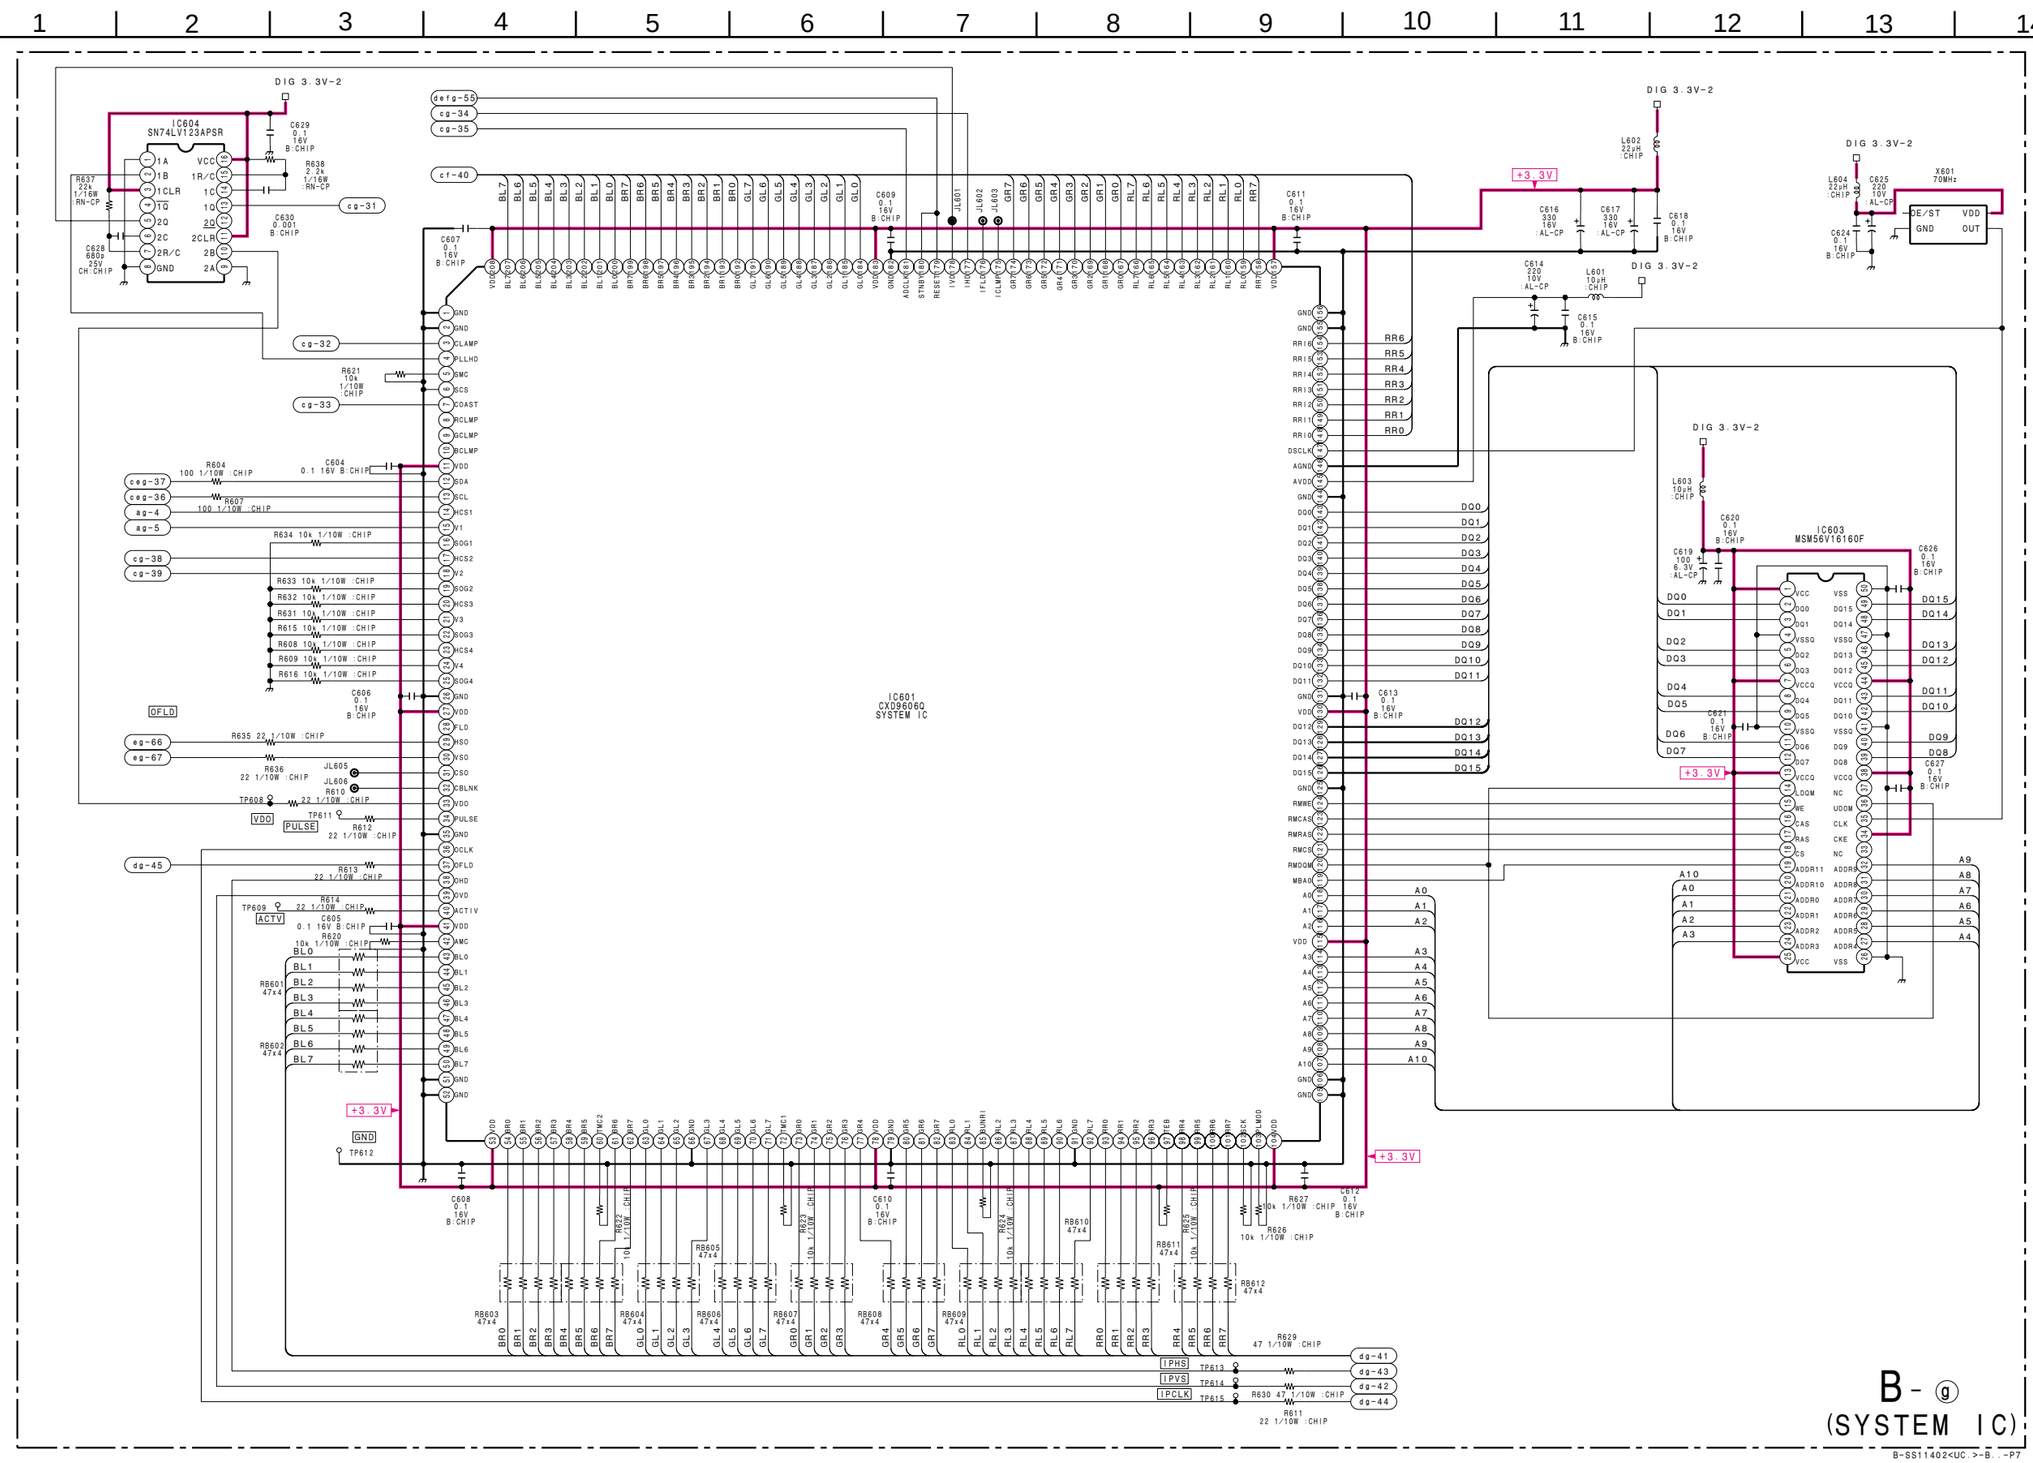

- Divided circuit diagram
  One sheet of B and Q boards are circuit diagram is divided into three sheets,
  each having the code B-ⓐ to B-ⓒ. For example, the destination
  ab1 on the code B-ⓐ sheet is connected to ab1 on the B-ⓑ sheet.



B [MAIN CPU,SYSTEM IC,COLOR DEC,A/D CONV,3D COMB FILTER]

— B BOARD —

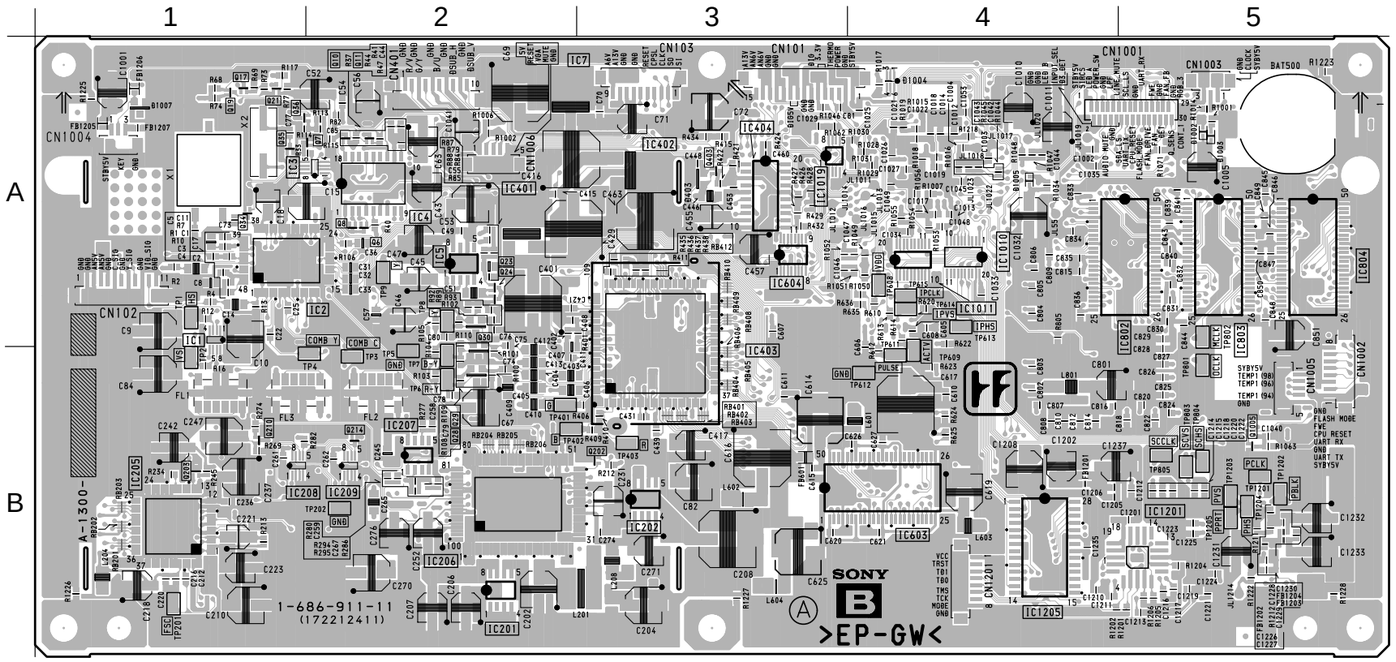

<COMPONENT SIDE>

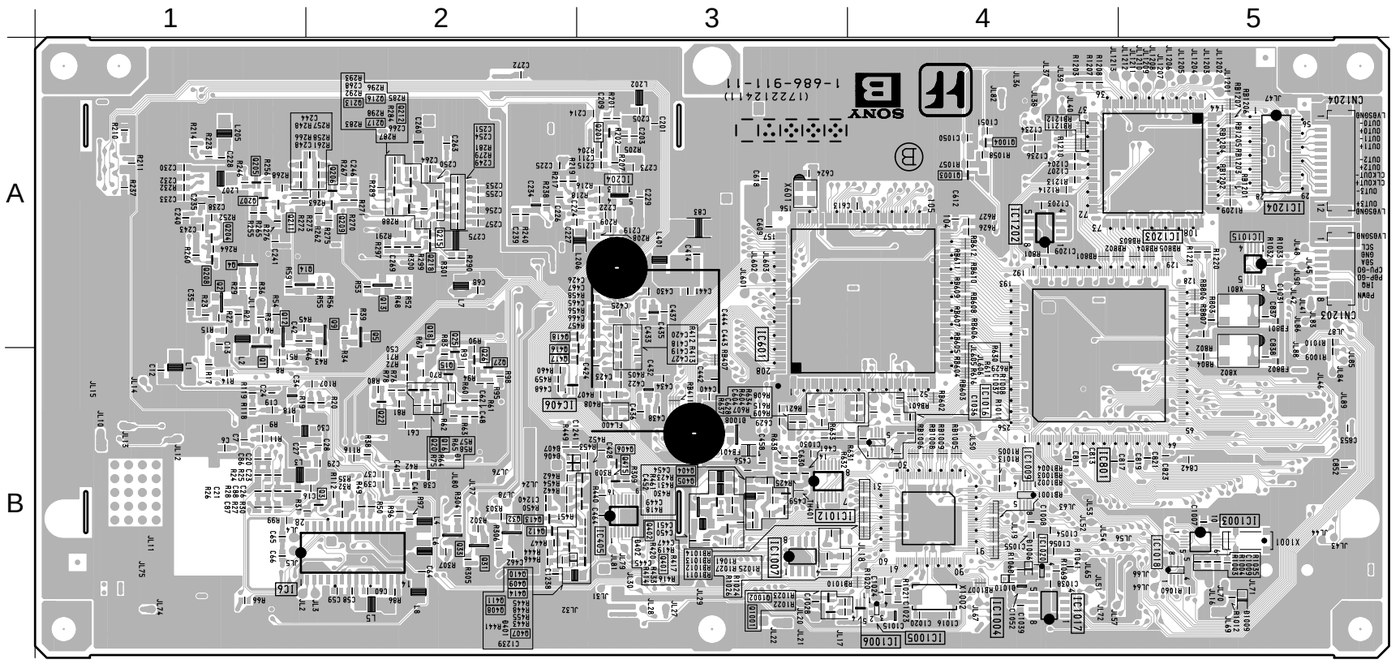

<CONDUCTOR SIDE>

• A BOARD SEMICONDUCTOR LOCATION

IC

	(COMPONENT SIDE)	(CONDUCTOR SIDE)
IC1	A-1	
IC2	A-1	
IC3	A-2	
IC4	A-2	
IC5	A-2	
IC6		B-2
IC7	A-2	
IC201	B-2	
IC202	B-3	
IC204		A-3
IC205	B-1	
IC206	B-2	
IC207	B-2	
IC208	B-1	
IC209	B-2	
IC401	A-2	
IC402	A-3	
IC403	A-3	
IC404	A-3	
IC405		B-3
IC406		B-2
IC601		A-4
IC603	B-4	
IC604	A-3	
IC801		B-4
IC802	A-5	
IC803	A-5	
IC804	A-5	
IC1003		B-5
IC1004		B-4
IC1005		B-4
IC1006		B-4
IC1007		B-3
IC1009		B-4
IC1010	A-4	
IC1011	A-4	
IC1012		B-3
IC1015		A-5
IC1016		B-4
IC1017		B-4
IC1018		B-5
IC1019	A-3	
IC1020		B-4
IC1201	B-5	
IC1202		A-4
IC1203		A-5
IC1204		A-5
IC1205	B-4	

TRANSISTOR

	(COMPONENT SIDE)	(CONDUCTOR SIDE)	*
Q1		A-1	②
Q2		A-1	②
Q3		B-2	②
Q4		A-1	②
Q5		A-2	②
Q6	A-2		②
Q7	A-2		②
Q8	A-2		②
Q9		A-2	②
Q10	A-2		②
Q11	A-2		②
Q12		A-1	②
Q13		A-2	②
Q14		A-1	②
Q15		B-2	②
Q16		B-2	②
Q17	A-1		②
Q18		A-2	②
Q19	A-1		②
Q20		B-2	②
Q21	A-1		②
Q22		B-2	②
Q23	A-2		②
Q24	A-2		②
Q25		B-2	②
Q26		B-2	②
Q27		B-2	②
Q28	B-2		②
Q29	B-2		②
Q30	A-2		②
Q31		B-2	②
Q32		B-2	②
Q33		B-2	②
Q201		A-3	②
Q203	B-1		②
Q204		A-1	②
Q205		A-1	②
Q206		A-2	②
Q207		A-1	②
Q208		A-1	②
Q209		A-2	②
Q210	B-1		②
Q211		A-1	②
Q212		A-2	②
Q213		A-2	②
Q214	B-2		②
Q215		A-2	②
Q216		A-2	②
Q217		A-2	②
Q218		A-2	②
Q401		B-3	②
Q402		B-3	②
Q403	A-3		②
Q404		B-3	②
Q405		B-3	②
Q406		B-3	②
Q407		B-3	②
Q408		B-2	②
Q409		B-3	②
Q410		B-3	②
Q411		B-2	②
Q412		B-2	②
Q413		B-2	②
Q414		B-3	②
Q415		B-3	②
Q416		B-3	②
Q417		B-3	②
Q418		A-3	②
Q1001		B-3	②
Q1002		B-3	②
Q1003		A-4	②
Q1004		A-4	②
Q1005	B-5		②

DIODE

	(COMPONENT SIDE)	(CONDUCTOR SIDE)	*
D1		B-2	③
D401		B-2	③
D402		B-3	⑨
D403	A-3		⑨
D406		B-2	③
D407		B-2	③
D1002	A-5		③
D1003	A-5		③
D1004	A-4		-
D1005	A-4		③
D1006		B-4	③
D1007	A-1		⑪
D1009		B-5	③
D1010		B-4	③

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-6)

(2) Schematic Diagram of H1 Board

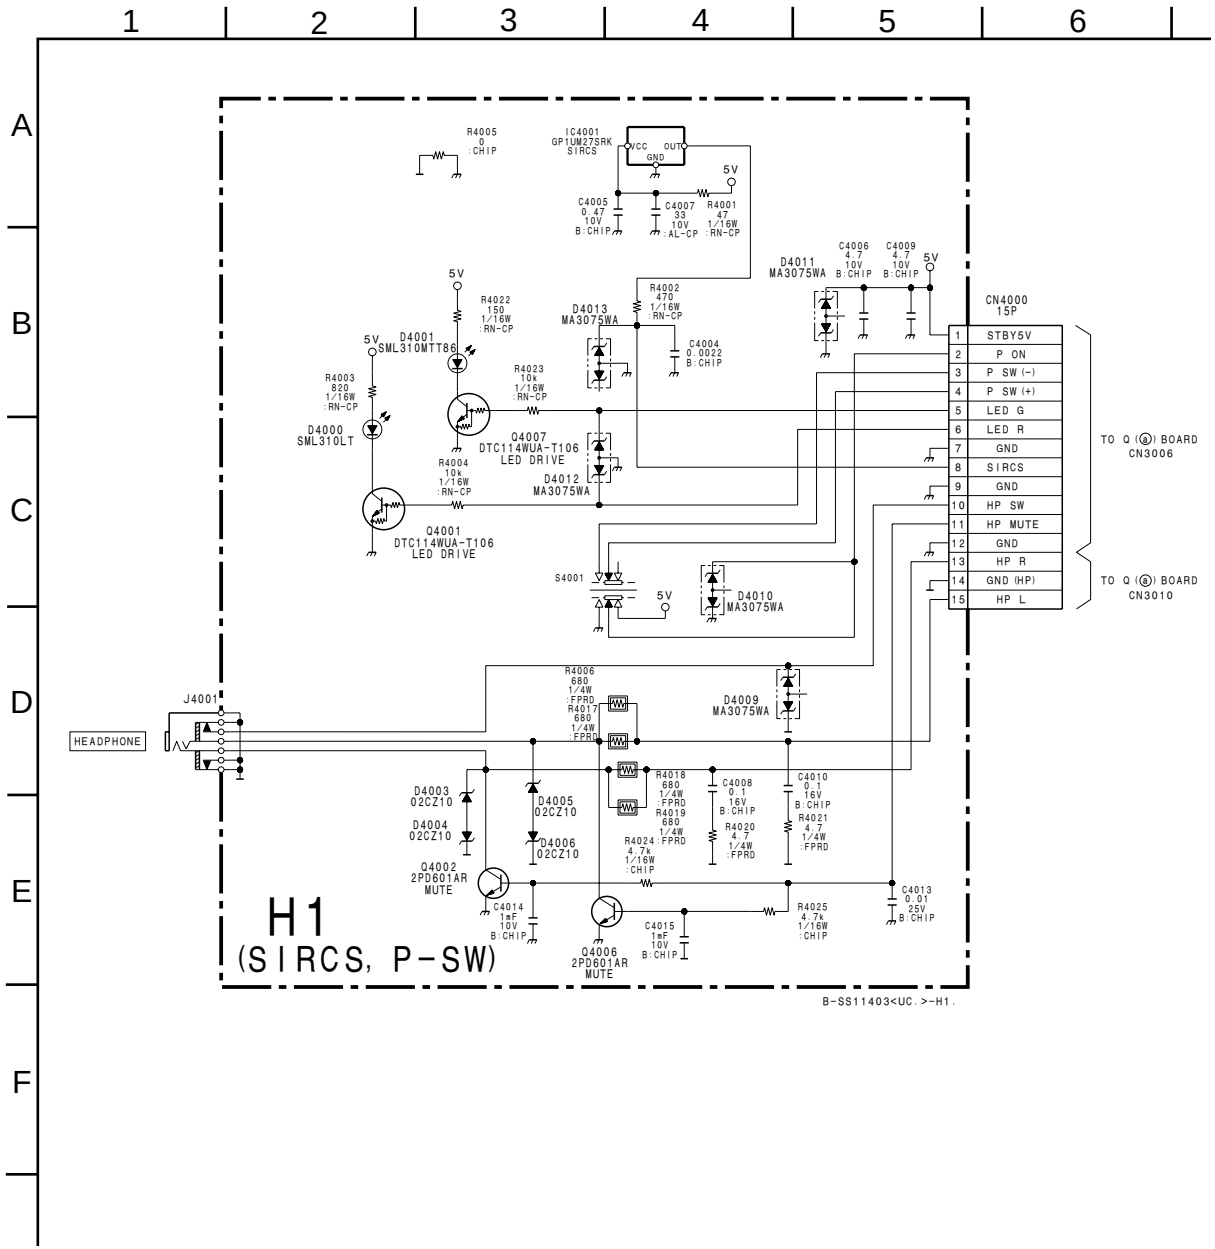

H1 [SIRCS, P-SW]

— H1 BOARD —

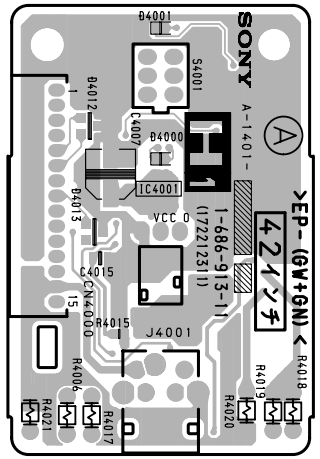

<COMPONENT SIDE>

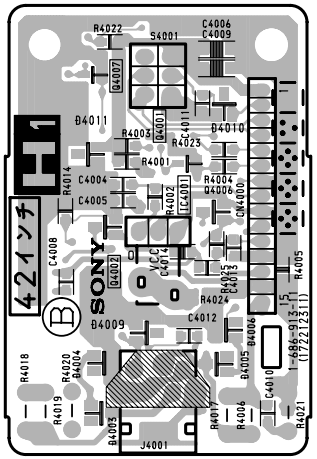

<CONDUCTOR SIDE>

H1 BOARD
Terminal name of semiconductors in silk screen printed circuit (∗)

Ref.	∗
D4000, D4001	③
D4003-D4006	④
D4009-D4011	⑩
D4012, D4013	⑪
Q4001, Q4002, Q4006, Q4007	①

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-6)

(3) Schematic Diagram of Q2 Board

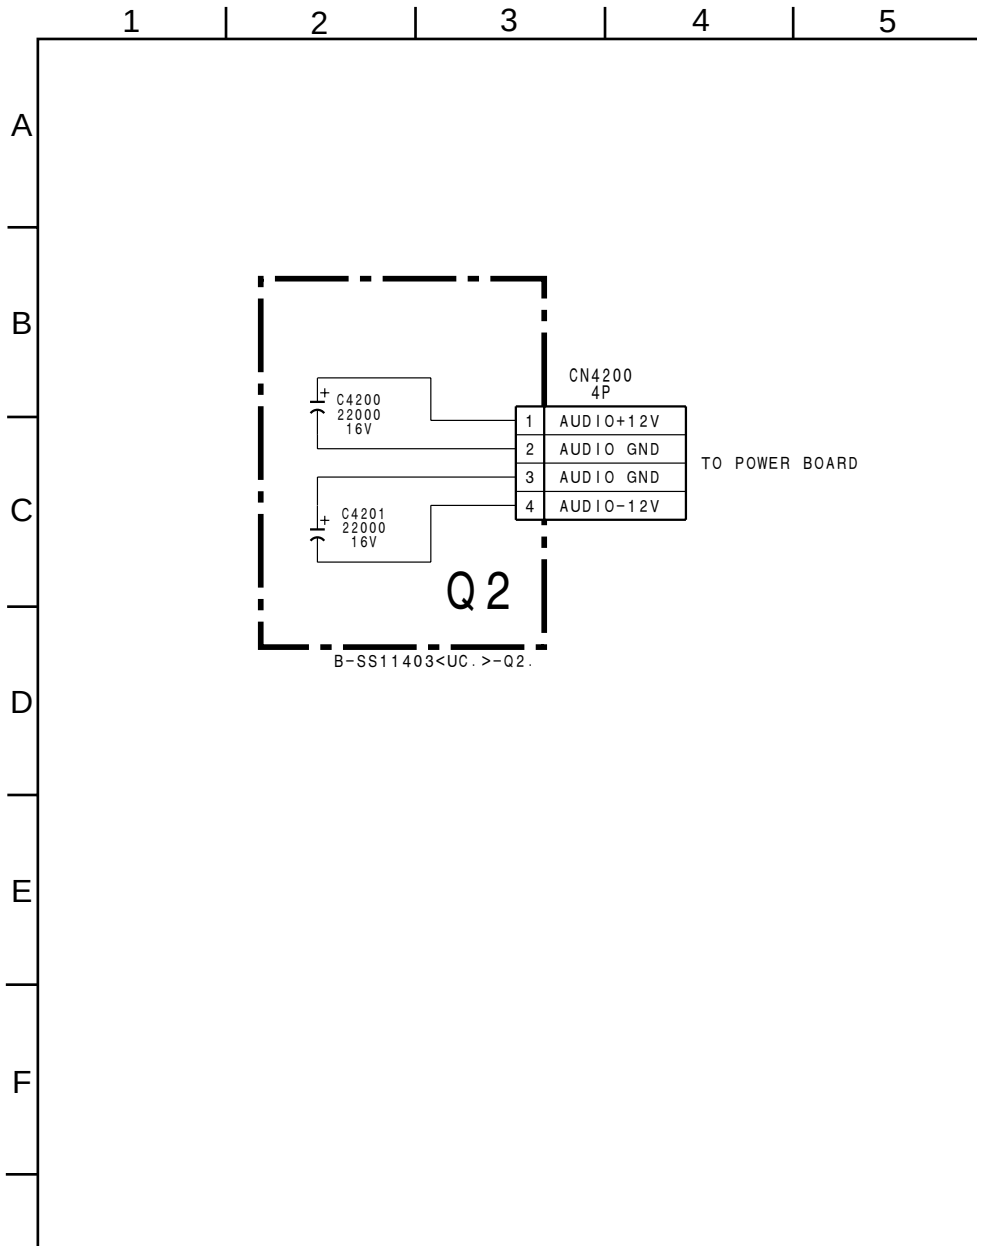

Q2

— Q2 BOARD —

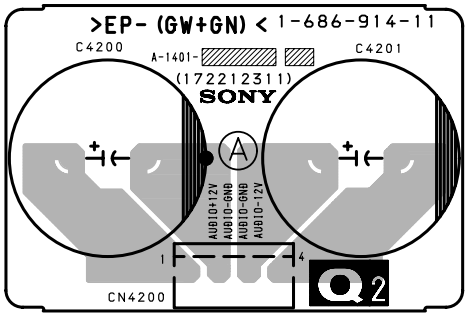

<COMPONENT SIDE>

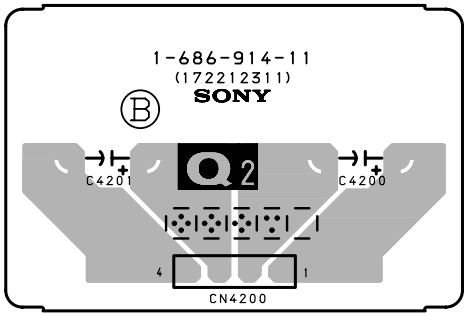

<CONDUCTOR SIDE>

(4) Schematic Diagrams of Q (ⓐ, ⓑ) Board

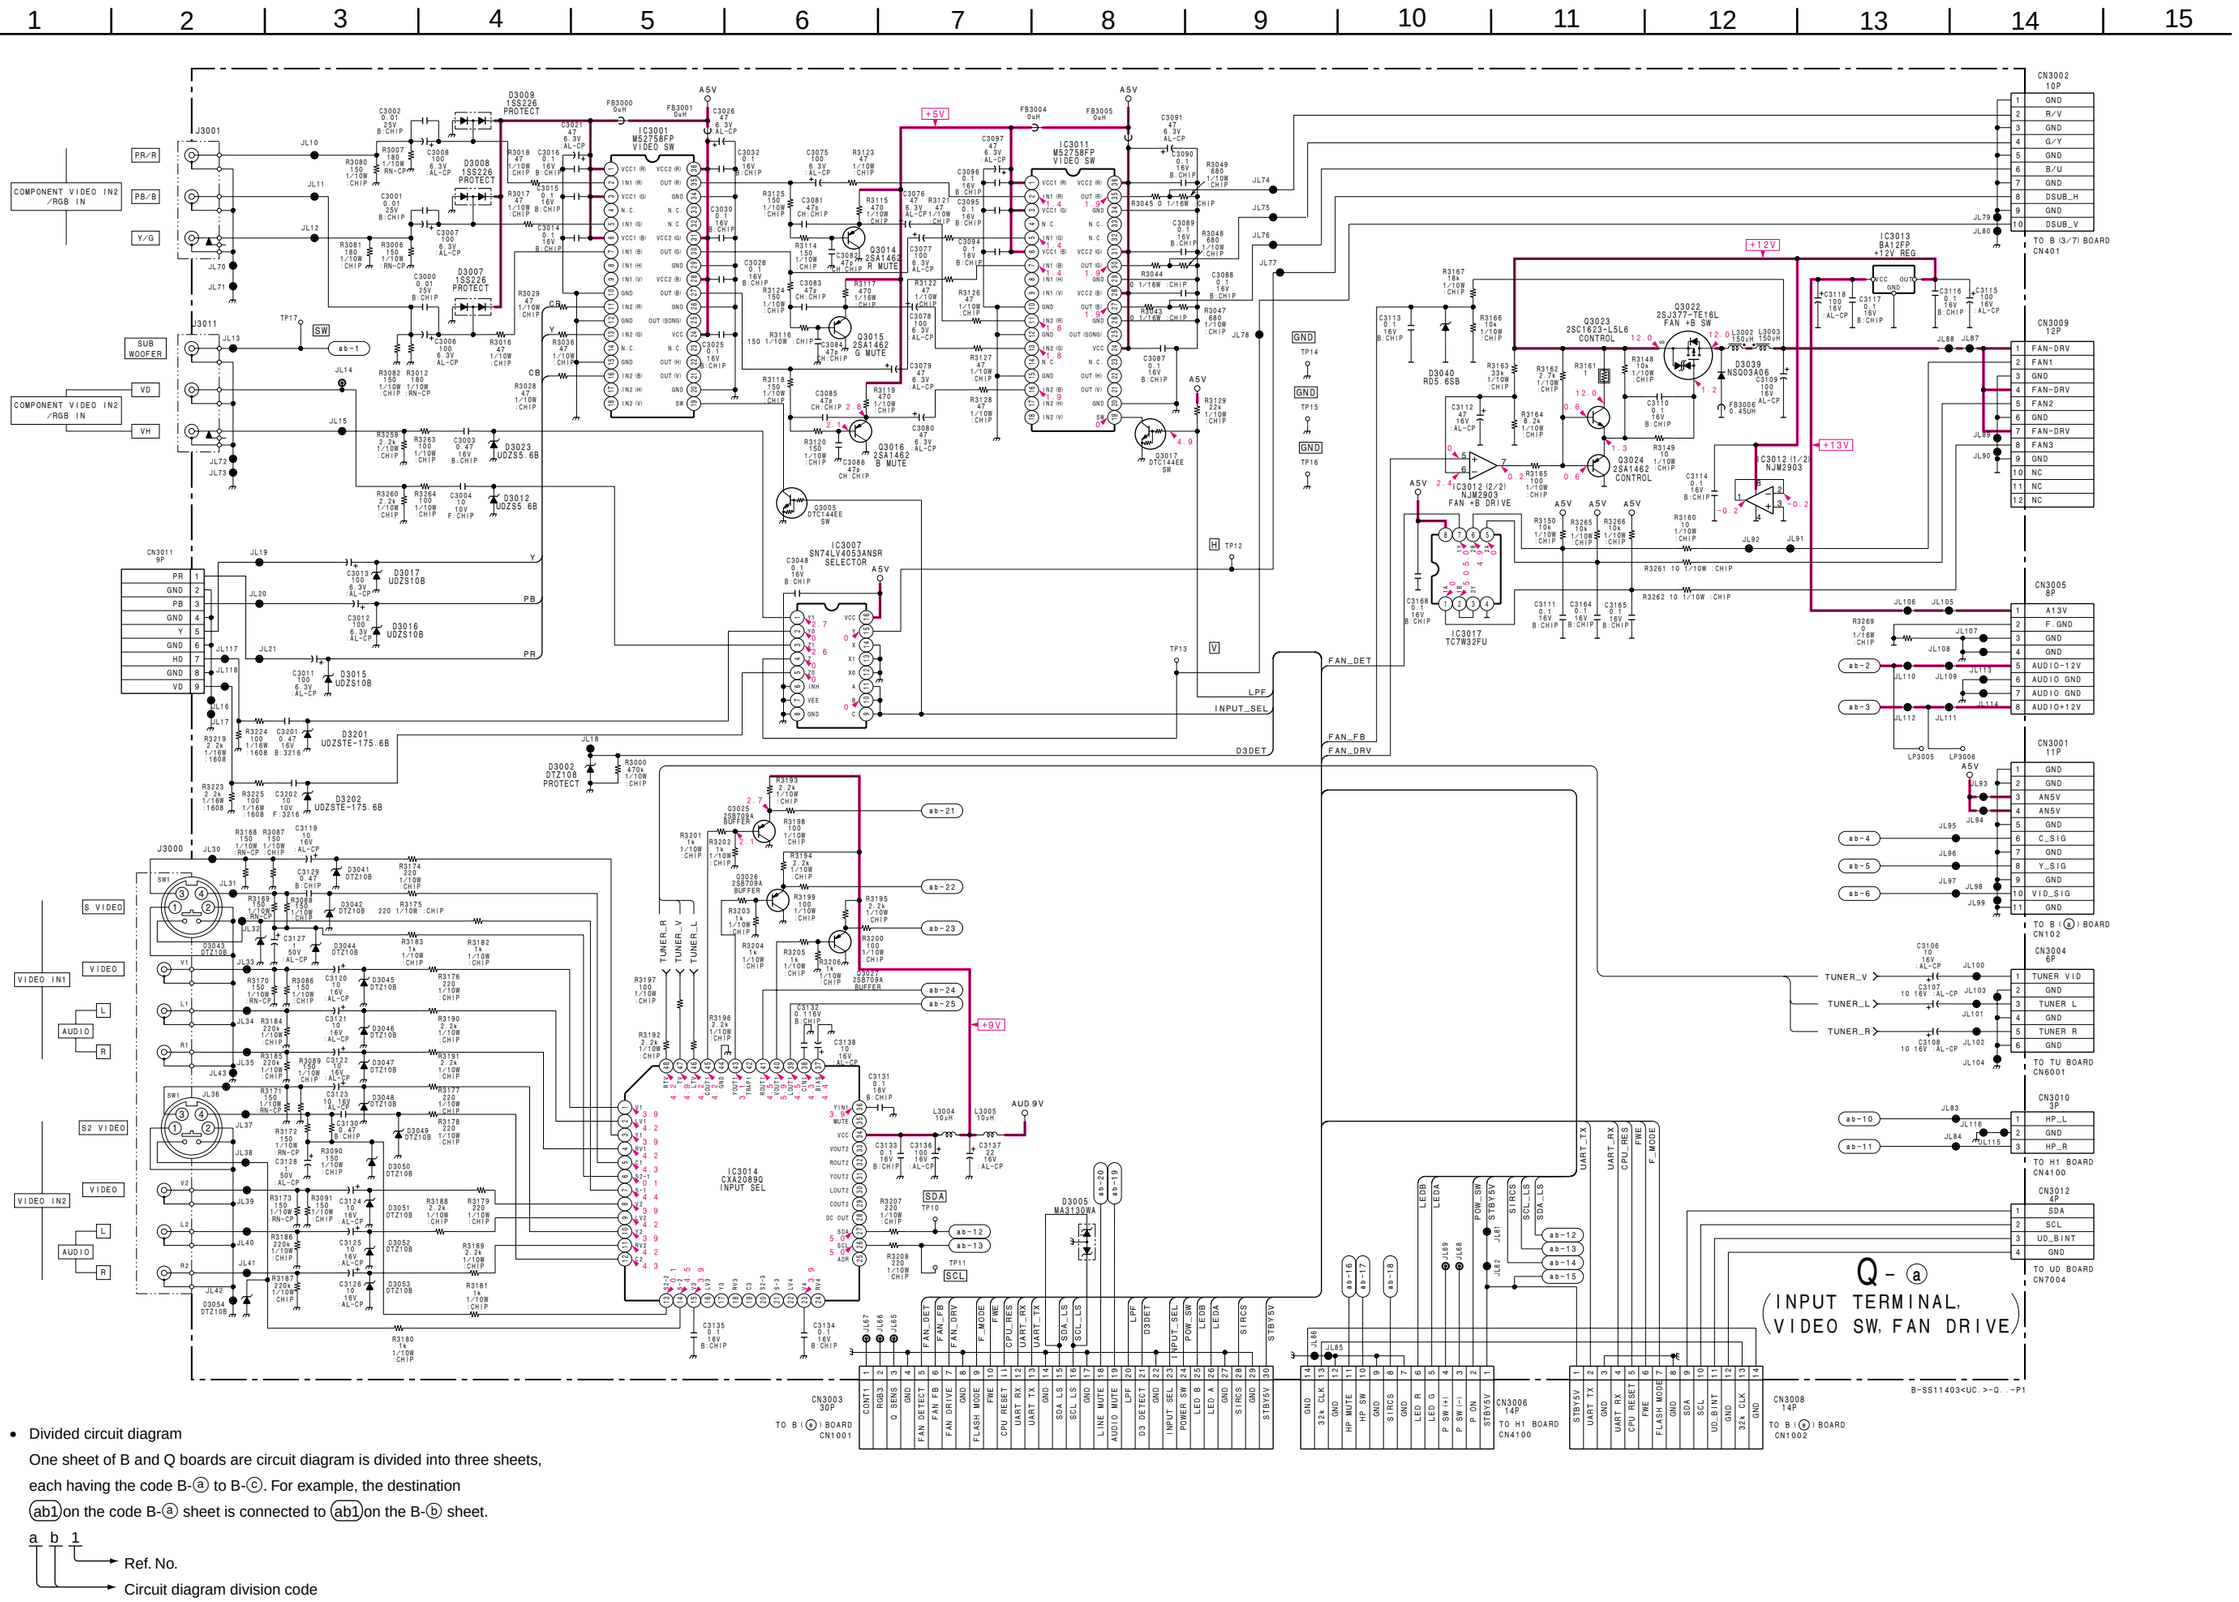

- Divided circuit diagram
  One sheet of B and Q boards are circuit diagram is divided into three sheets, each having the code B-ⓐ to B-ⓒ. For example, the destination ab1 on the code B-ⓐ sheet is connected to ab1 on the B-ⓑ sheet.

  a b 1 → Ref. No.
  → Circuit diagram division code

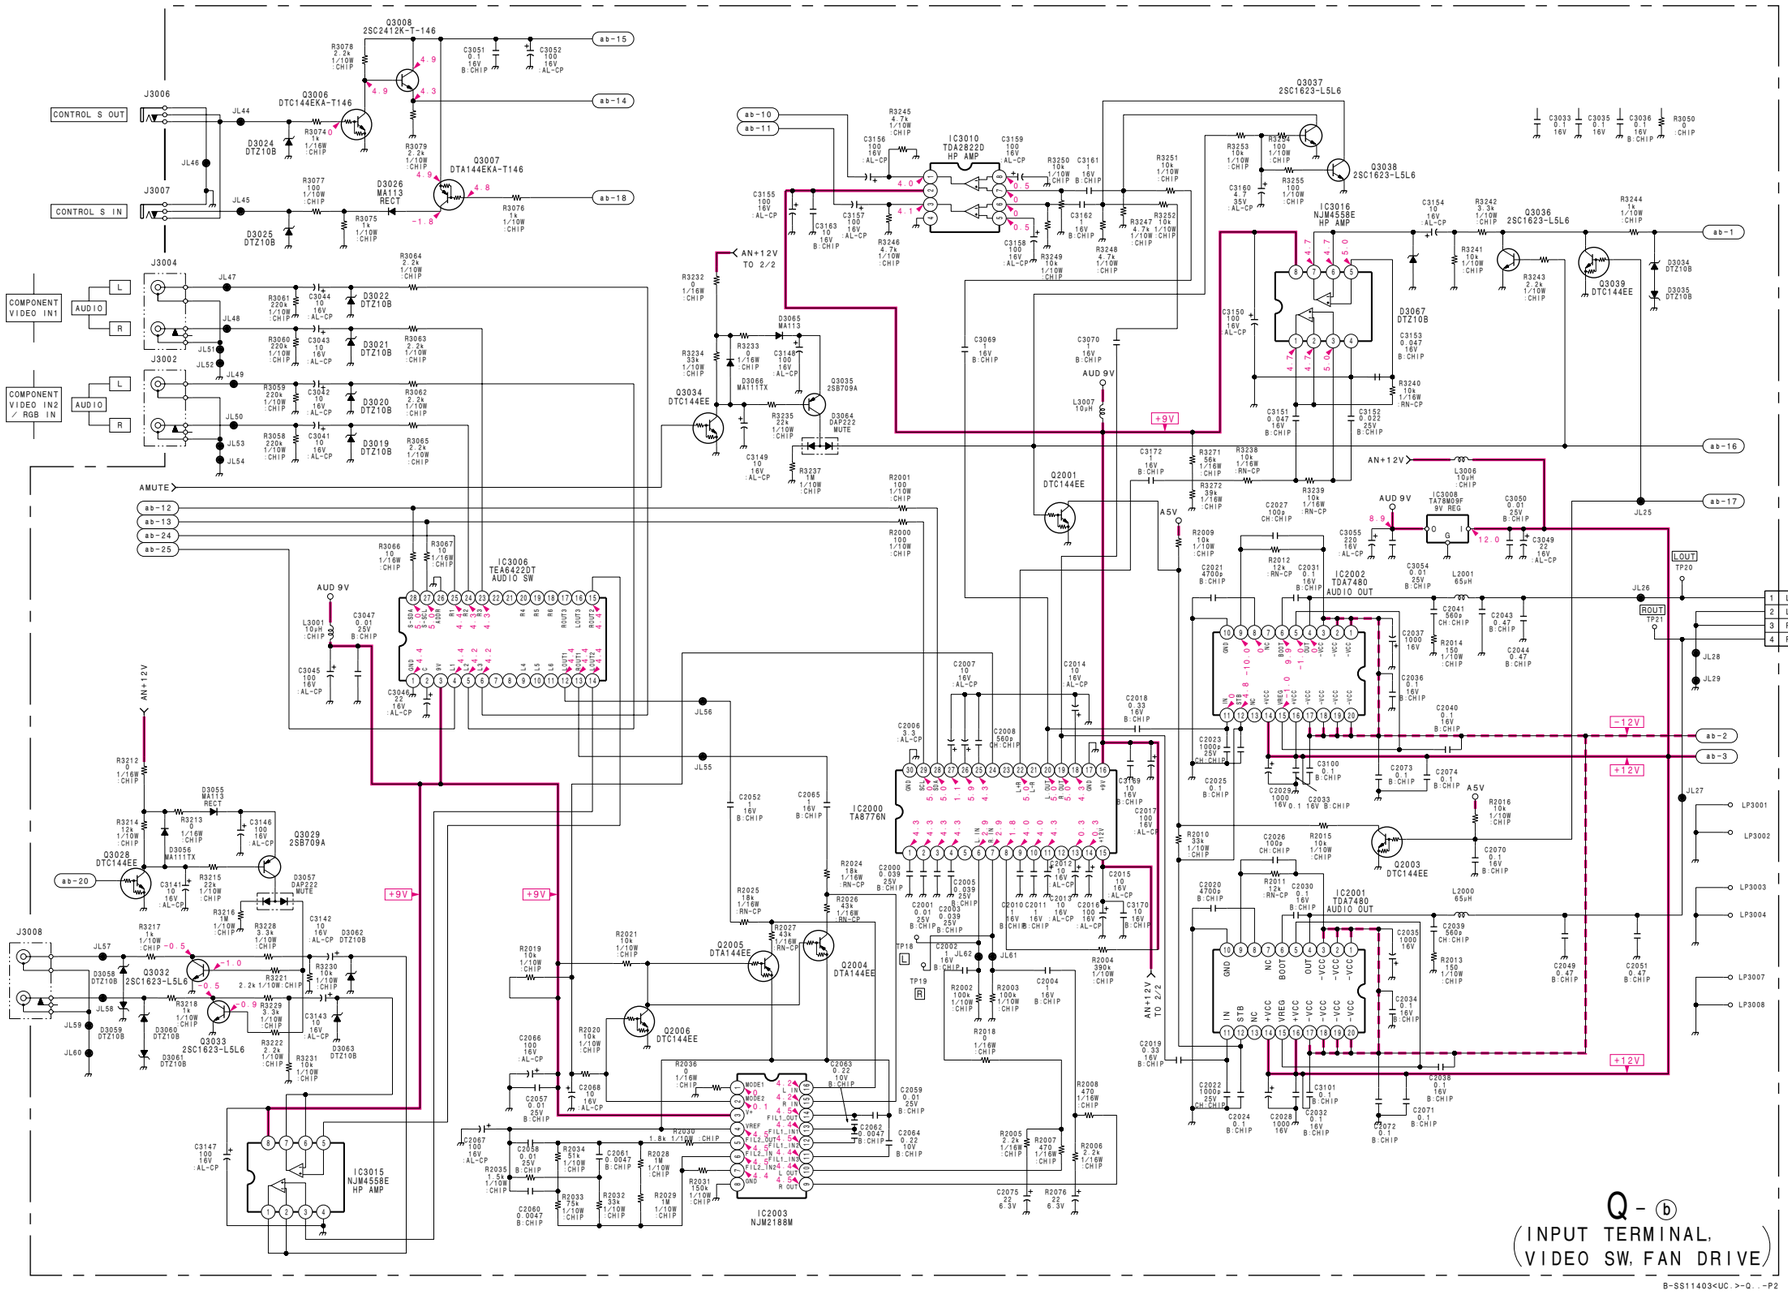

- Divided circuit diagram
  One sheet of B and Q boards are circuit diagram is divided into three sheets, each having the code B-ⓐ to B-ⓒ. For example, the destination (ab1) on the code B-ⓐ sheet is connected to (ab1) on the B-ⓑ sheet.

a b 1
- 1 → Ref. No.
- b → Circuit diagram division code
- a → Circuit diagram division code

Q [INPUT TERMINAL, FAN DRIVE, VIDEO SW]

— Q BOARD —

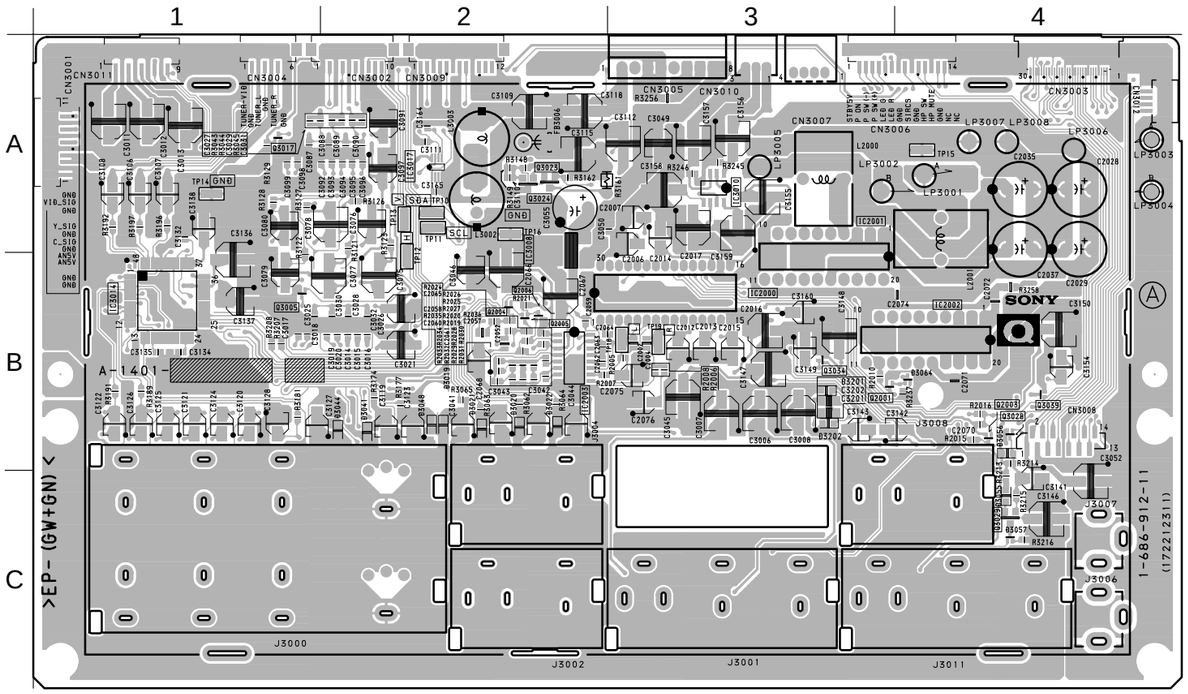

<COMPONENT SIDE>

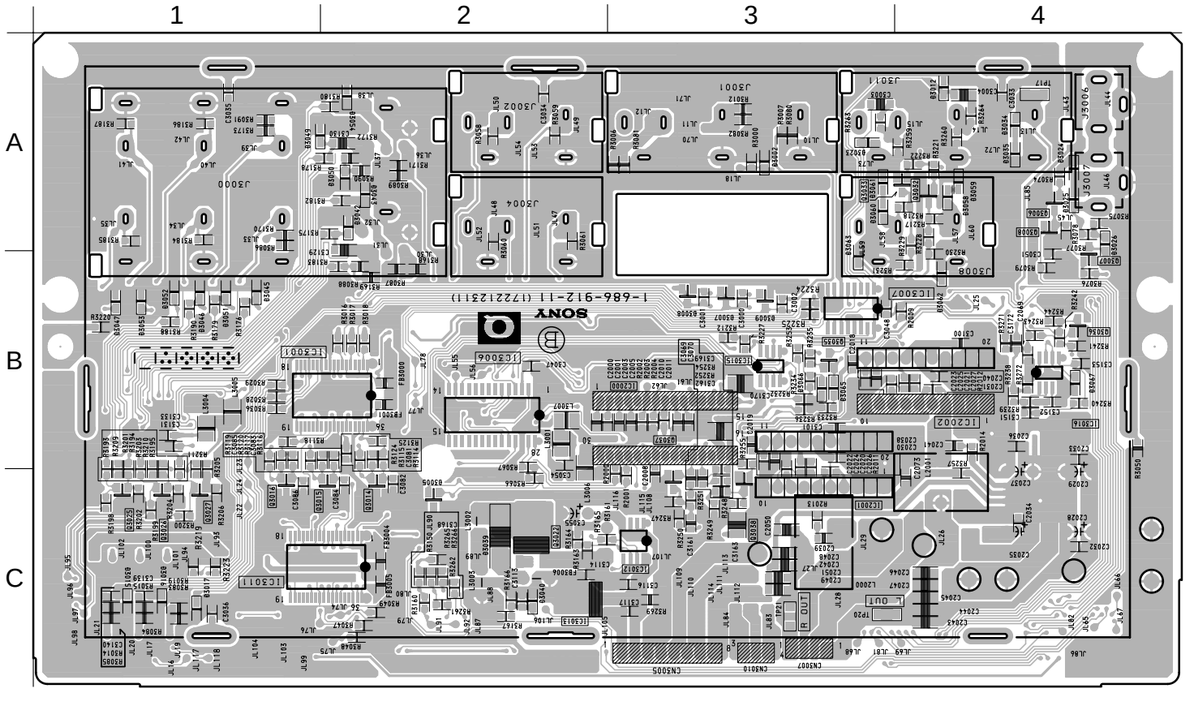

<CONDUCTOR SIDE>

• Q BOARD SEMICONDUCTOR LOCATION

IC

	(COMPONENT SIDE)	(CONDUCTOR SIDE)
IC2000	B-2	
IC2001	A-3	
IC2002	B-4	
IC2003	B-2	
IC3001		B-2
IC3006		B-2
IC3007		B-3
IC3008	A-2	
IC3010	A-3	
IC3011		C-2
IC3012		C-3
IC3013		C-2
IC3014	B-1	
IC3015		B-3
IC3016		B-4
IC3017	A-2	

TRANSISTOR

	(COMPONENT SIDE)	(CONDUCTOR SIDE)	*
Q2001	B-3		②
Q2003	B-4		②
Q2004	B-2		②
Q2005	B-2		②
Q2006	B-2		②
Q3005	B-1		②
Q3006		A-4	①
Q3007		B-4	①
Q3008		A-4	①
Q3014		C-2	①
Q3015		C-2	①
Q3016		C-1	①
Q3017	A-1		②
Q3022		C-2	-
Q3023	A-2		②
Q3024	A-2		②
Q3025		C-1	①
Q3026		C-1	①
Q3027		C-1	①
Q3028	B-4		②
Q3029	C-4		②
Q3032		A-4	①
Q3033		A-4	①
Q3034	B-3		②
Q3035		B-3	①
Q3036		B-4	①
Q3037		C-3	①
Q3038		C-3	①
Q3039	B-4		②

DIODE

	(COMPONENT SIDE)	(CONDUCTOR SIDE)	*
D3002		A-3	③
D3005		C-2	⑩
D3007		B-3	⑥
D3008		B-3	⑥
D3009		B-3	⑥
D3012		A-4	③
D3015		C-1	③
D3016		C-1	③
D3017		C-1	③
D3019	B-2		③
D3020	B-2		③
D3021	B-2		③
D3022	B-2		③
D3023		A-3	③
D3024		A-4	③
D3025		A-4	③
D3026		A-4	③
D3034		A-4	③
D3035		A-4	③
D3039		C-2	③
D3040		C-2	③
D3041	B-2		③
D3042		A-2	③
D3043		A-2	③
D3044	B-2		③
D3045		B-1	③
D3046		B-1	③
D3047		B-1	③
D3048	B-2		③
D3049		A-1	③
D3050		A-2	③
D3051		B-1	③
D3052		B-1	③
D3053		B-1	③
D3054		A-2	③
D3055	C-4		③
D3056	B-4		③
D3057	C-4		⑪
D3058		A-4	③
D3059		A-4	③
D3060		A-3	③
D3061		A-3	③
D3062		B-4	③
D3063		B-3	③
D3064	B-4		⑪
D3065		B-3	③
D3066		B-3	③
D3067		B-4	③
D3201	B-3		③
D3202	B-3		③

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-6)

(5) Schematic Diagram of TU Board

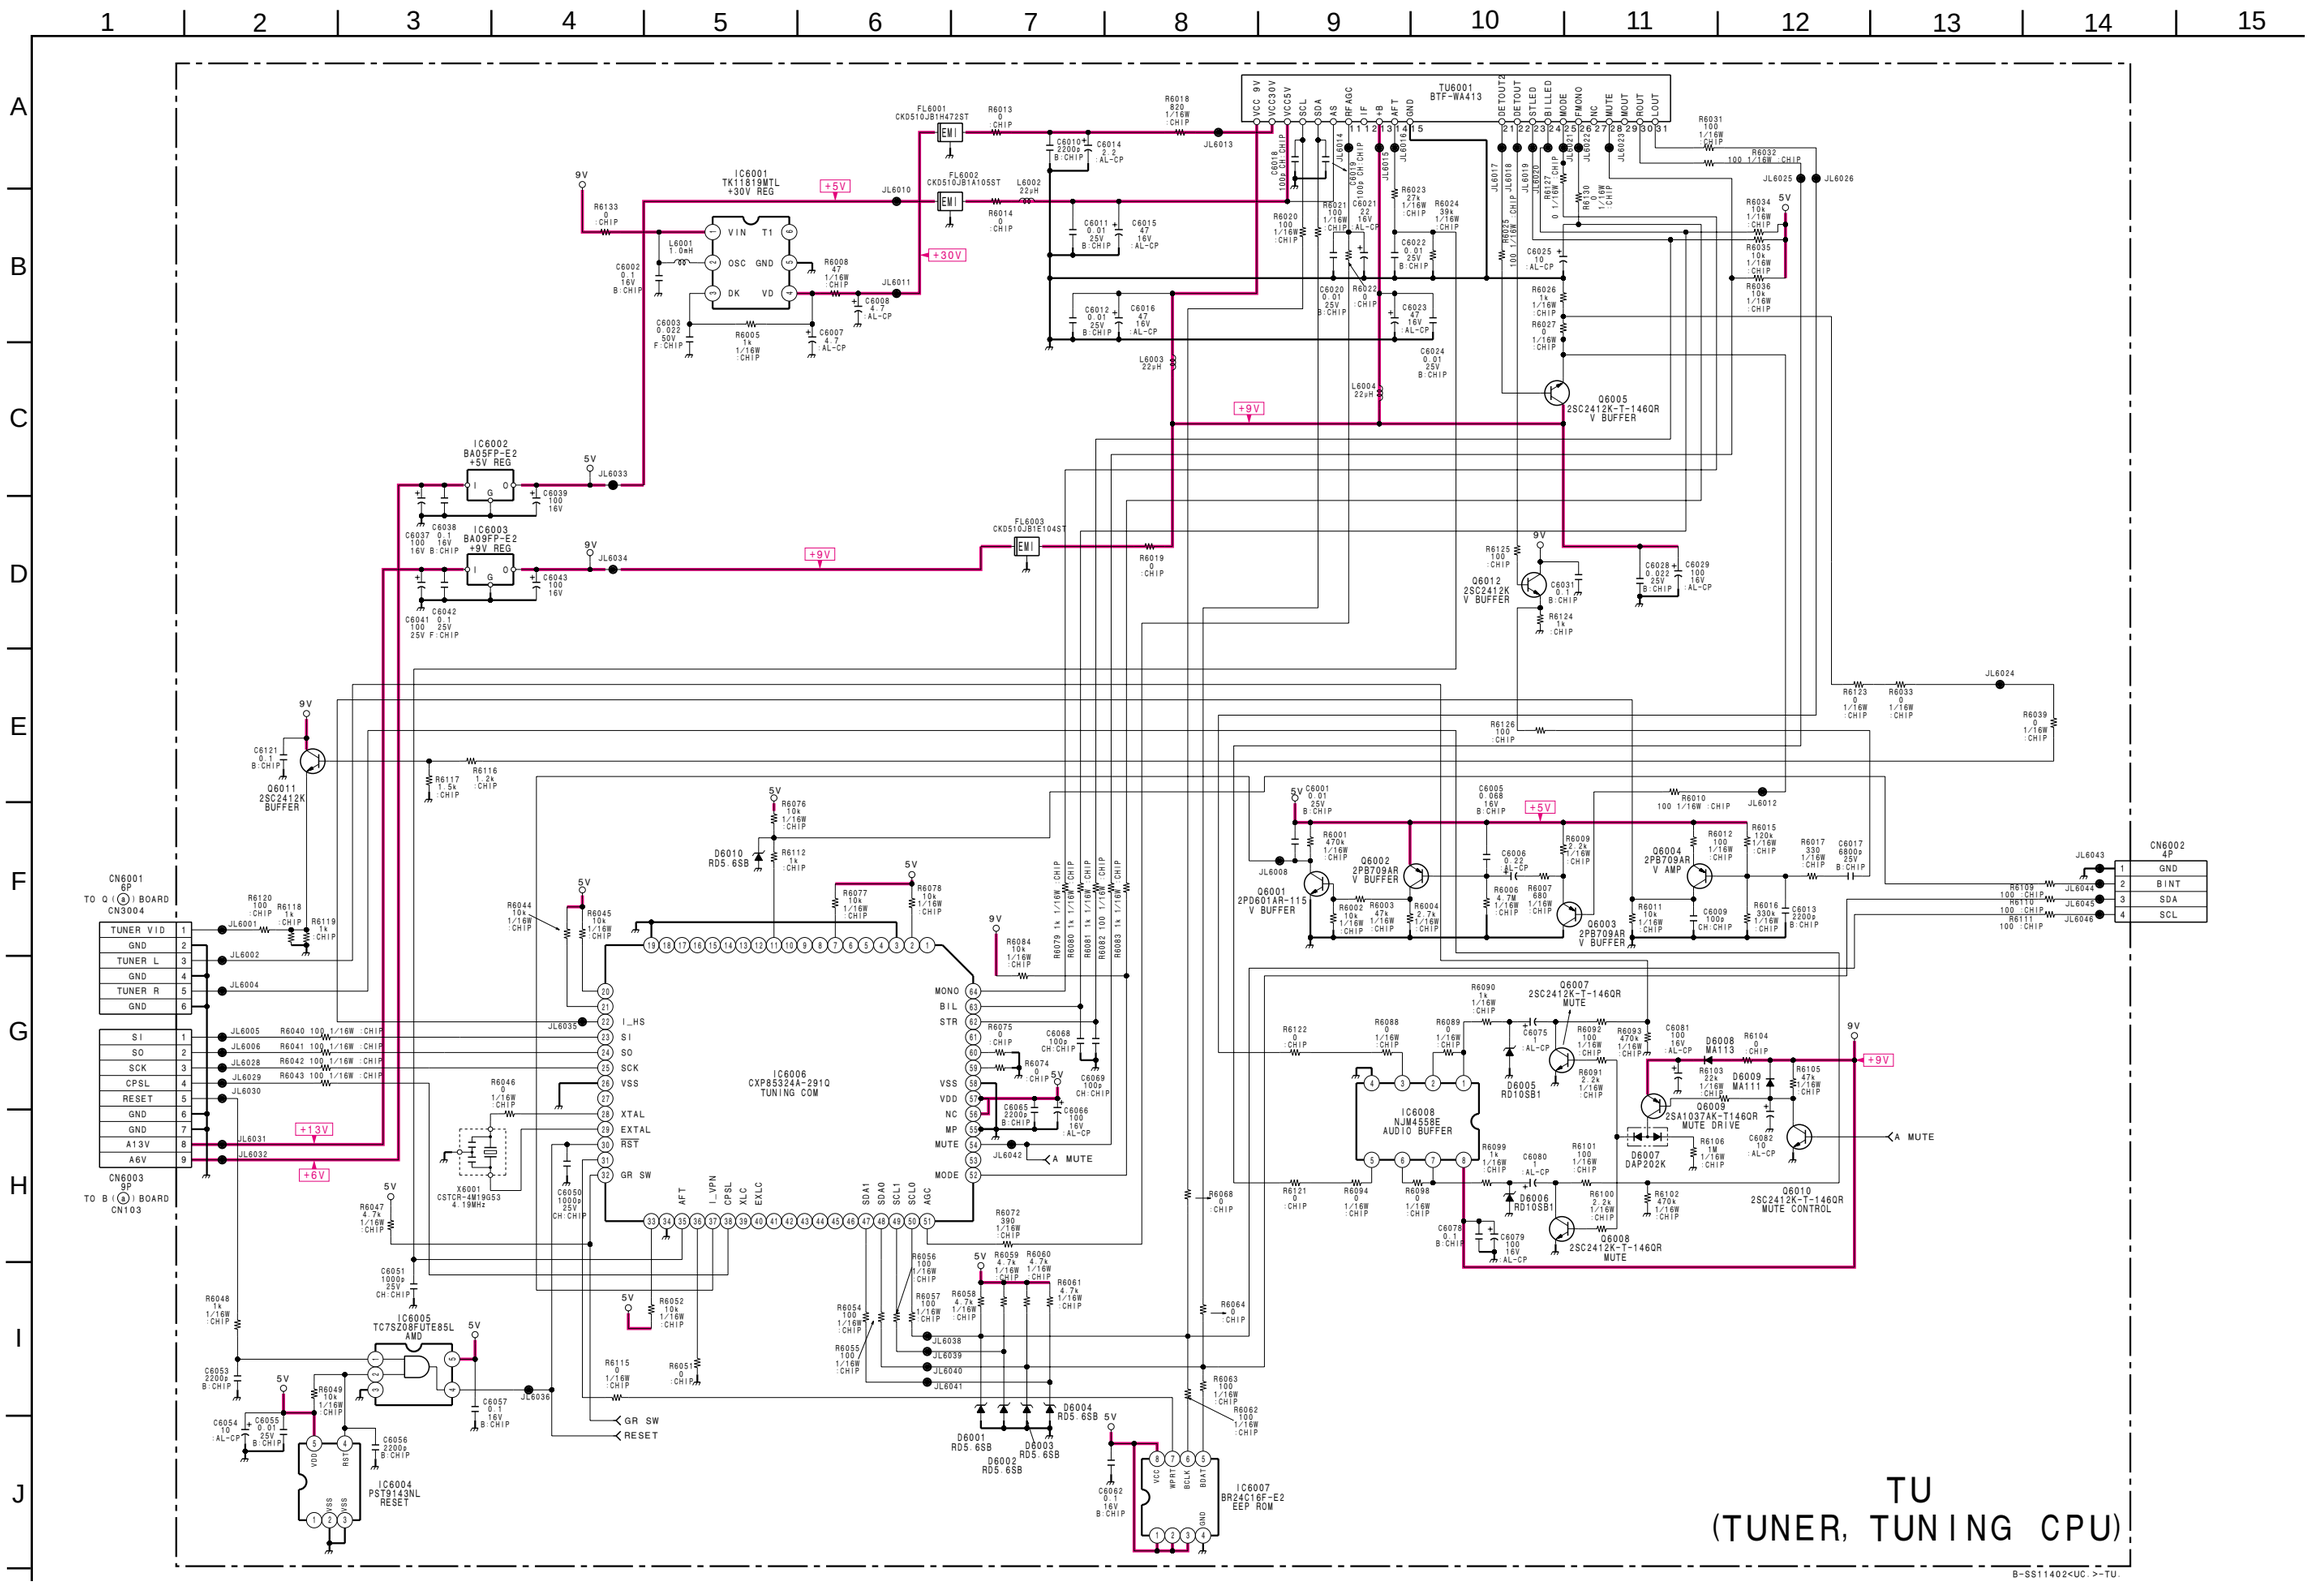

TU [TUNER, TUNING CPU]

— TU BOARD —

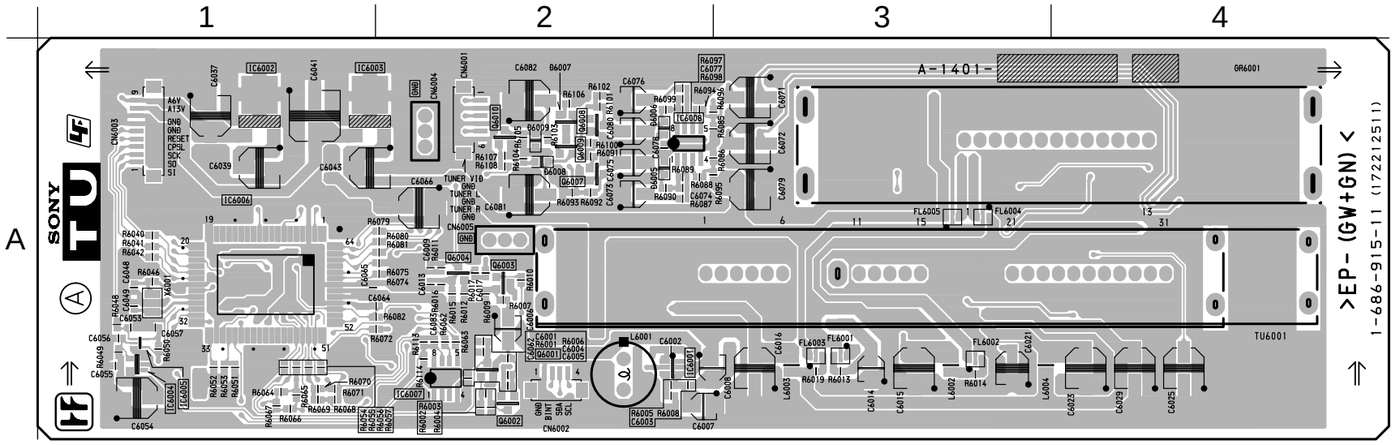

<COMPONENT SIDE>

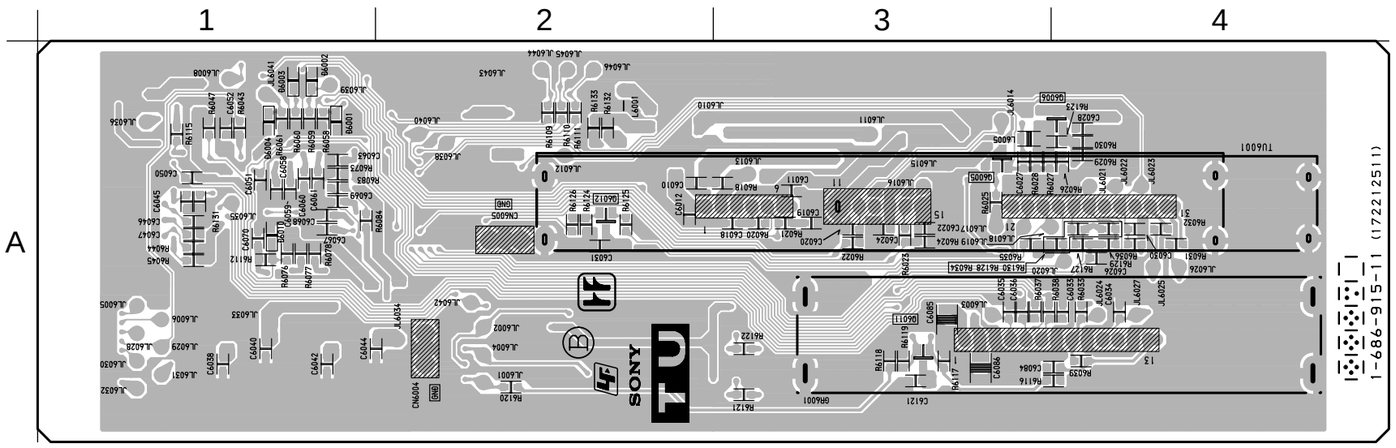

<CONDUCTOR SIDE>

- **TU BOARD SEMICONDUCTOR LOCATION**

IC	(COMPONENT SIDE)	(CONDUCTOR SIDE)
IC6001	A-2	
IC6002	A-1	
IC6003	A-1	
IC6004	A-1	
IC6005	A-1	
IC6006	A-1	
IC6007	A-2	
IC6008	A-2	

TRANSISTOR	(COMPONENT SIDE)	(CONDUCTOR SIDE)	*
Q6001	A-2		②
Q6002	A-2		②
Q6003	A-2		②
Q6004	A-2		②
Q6005		A-3	①
Q6007	A-2		②
Q6008	A-2		②
Q6009	A-2		②
Q6010	A-2		②
Q6011		A-3	①
Q6012		A-2	①

DIODE	(COMPONENT SIDE)	(CONDUCTOR SIDE)	*
D6001		A-1	③
D6002		A-1	③
D6003		A-1	③
D6004		A-1	③
D6005	A-2		③
D6006	A-2		③
D6007	A-2		⑪
D6008	A-2		③
D6009	A-2		③
D6010		A-1	③

∗: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 3-6)

(6) Schematic Diagram of UD Board

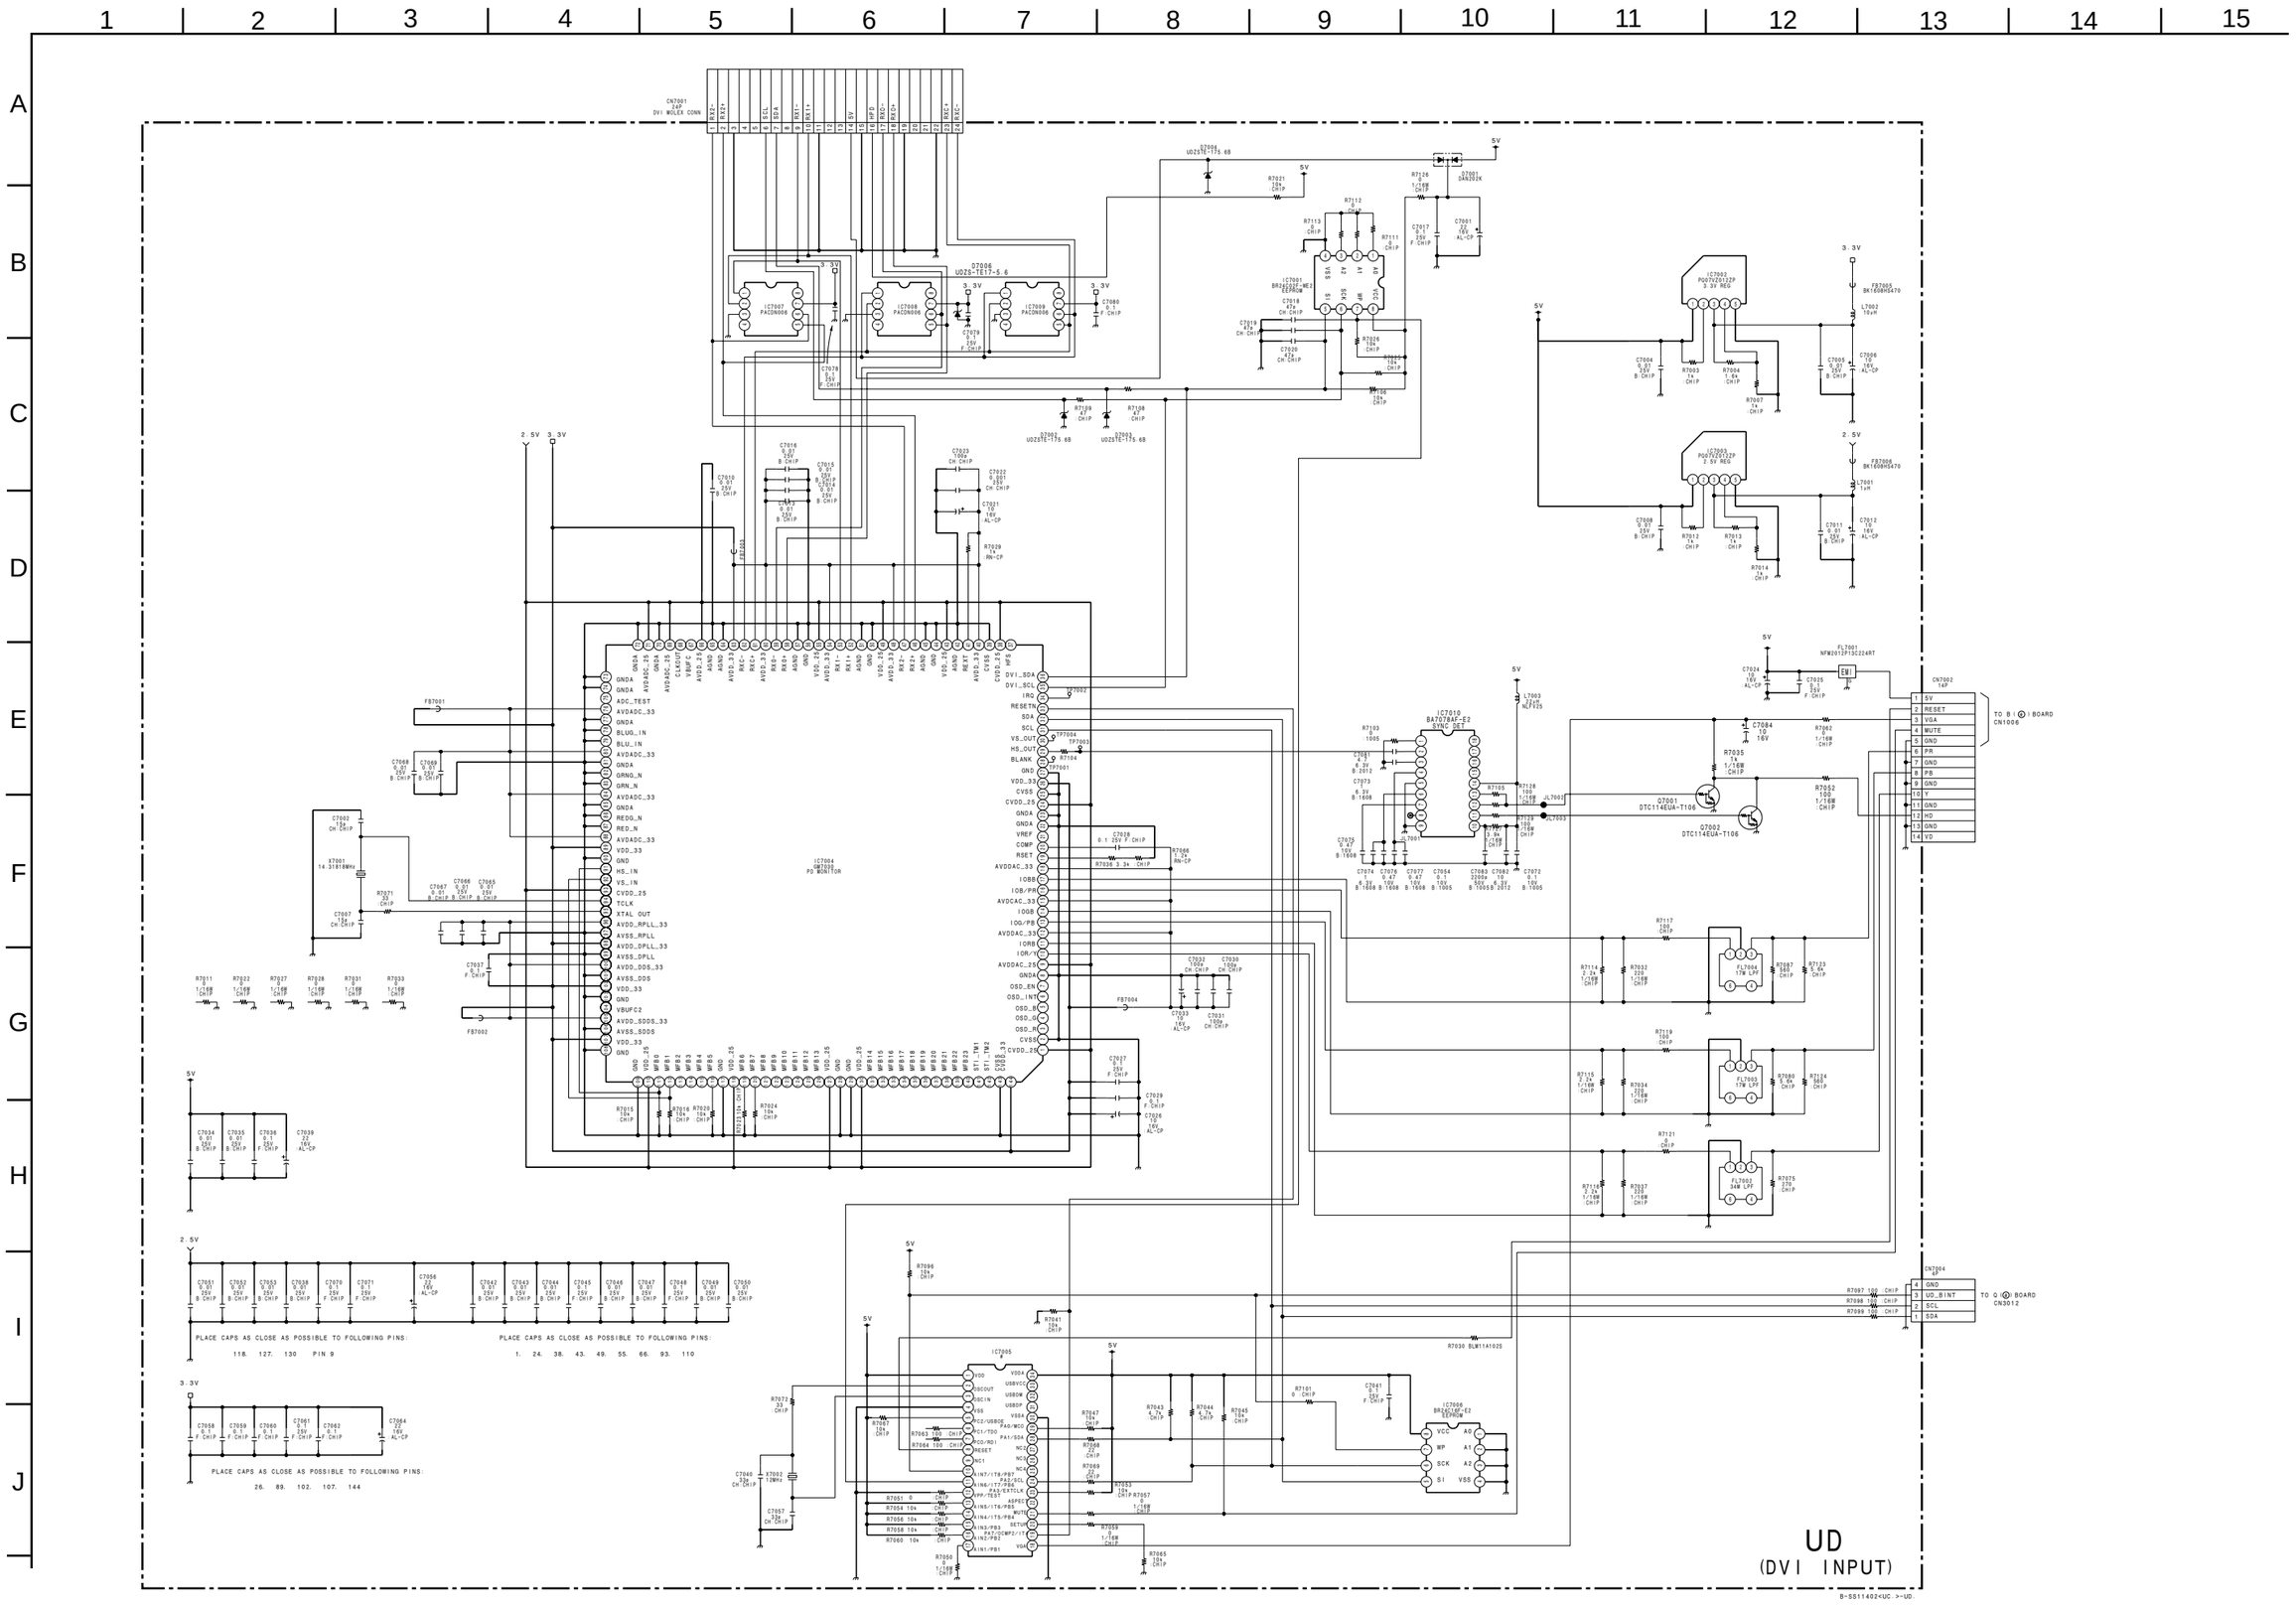

UD

— UD BOARD —

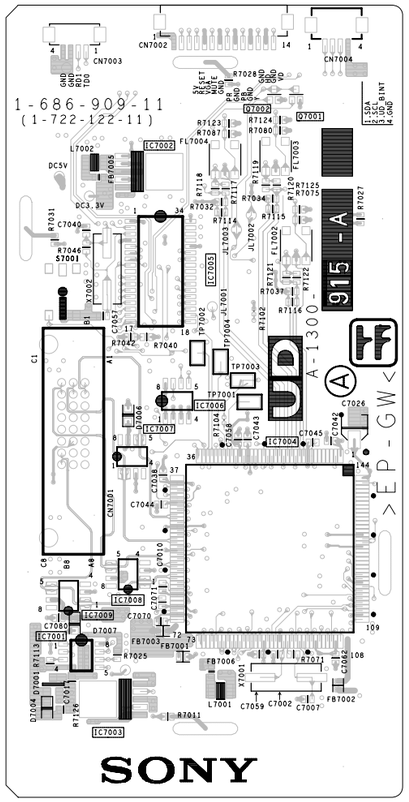

<COMPONENT SIDE>

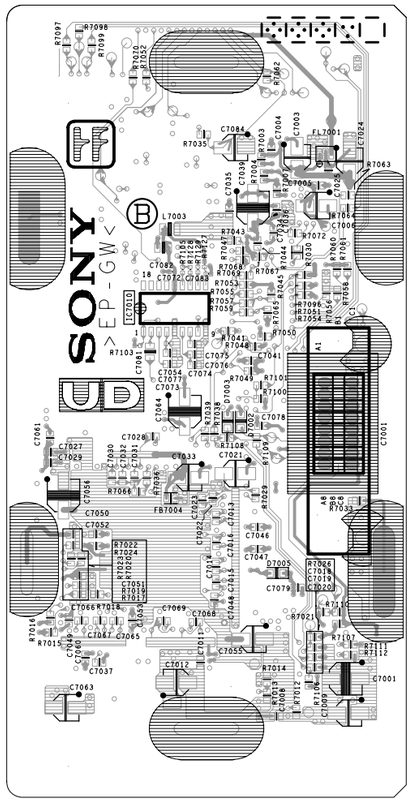

<CONDUCTOR SIDE>

3-4. SEMICONDUCTORS

BA033F-E2
BR24C02F-WE2
BR24C16F-E2
CXA1211M
LM1881M
M24C64-WMN6T(B)
NJM2903M
NJM4558E(TE2)
PACDN006S
SI-3025LSA-TL
SN74CBTD3306PWR-12
SN74LV4053ANSR
TC4W53FU
TC7W14FU(TE12R)
TC7W241FU-TE12R
TC7W32FU
TC7WH125FU(TE12R)



8 pin SOP

BA033FP-E2
BA05FP-E2
BA09FP-E2
BA12FP-E2
L88M05T-FA-TL
PST9143NL
SC7S04F
TC7SZ08FU(TE85R)



5 Pin CHIP

BA7078AF-E2
NJM2188M-TE2
SN74LV123APWR
SN74LV4053APWR
TC7S08FU(TE85R)
Z8622912SSC-00T



18 Pin SOP

CXA2089Q
MC141627FT



48 Pin QFP

CXA2163AQ-T6

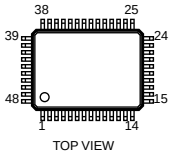

CXA3516R
GM7030-H
XC2S50-5TQ144C1



144 Pin QFP

CXD2057M-T6
TEA6422DT



28 Pin SOP

CXD9606Q



208 Pin QFP

CXP85324A-291Q

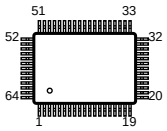

HD64F2633TE



120 Pin QFP

IP00C713



256 Pin QFP

K4S161622D-TC80
MSM56V16160F-10TS-K



50 Pin SOP

MB90098APF-A-130-BND-ER
M52347FP-TE
TC74VHC541FT(EL)
TC74VHCT541AFT(EL)



20 Pin SOP

M52758FP



36 Pin SOP

RS5C348A-E2



10 Pin SOP

S-80828ANNP-DER-T2
S-80828ANNP-ED6
S-80842ANNP-ED6-T2



4 Pin CHIP

TA78M09F(TE16L)



TA8776N

30 Pin DIP

TC74VHCT14AFT(EL)



14 Pin SOP

TDA2822D013TR

8 Pin DIP

TDA7480



20 Pin DIP

THC63LVDM83R



56 Pin SOP

TK11819MTL



6 Pin SOP

UPD64083GF-3BA

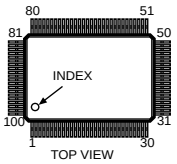

XC18V01PC20C



256 Pin QFJ

DTC114EU



DTC114WUA-T106
DTC144EE
DTC144EKA
DTC144EKA-T146
DTC144EUA-T106
2SA1037AK-T146-QR
2SA1162-G
2SA1462-T1Y33Y34
2SA1462-Y33
2SA1774R
2SA1774TL-QR
2SB709A-QRS-TX
2SB709AR-115
2SC1623-L5L6
2SC2412K-T-146-QR
2SC4617R
2SD601A-Q-TX



DAP202K
DAP222
MA3075WA-(TX)
MA3130WA-TX



DAN202K



DTZ10B
MA111-TX
MA113-(TX)
RD10SB1-T1
RD5.6SB-T1
UDZSTE-1710B

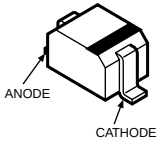

HN1D03FU-TE85L
HN1D03FU-TE85R

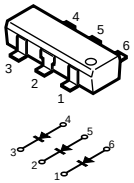

MA3100-TX
02CZ10-TE85L

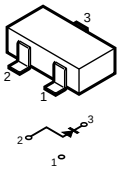

MA2S111-(K8).SO
NSQ03A06-TE16L

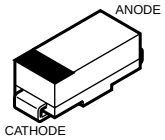

RD10SB1

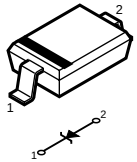

MA157-TX
1SS226



SECTION 4
EXPLODED VIEWS

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

4-1. COVER

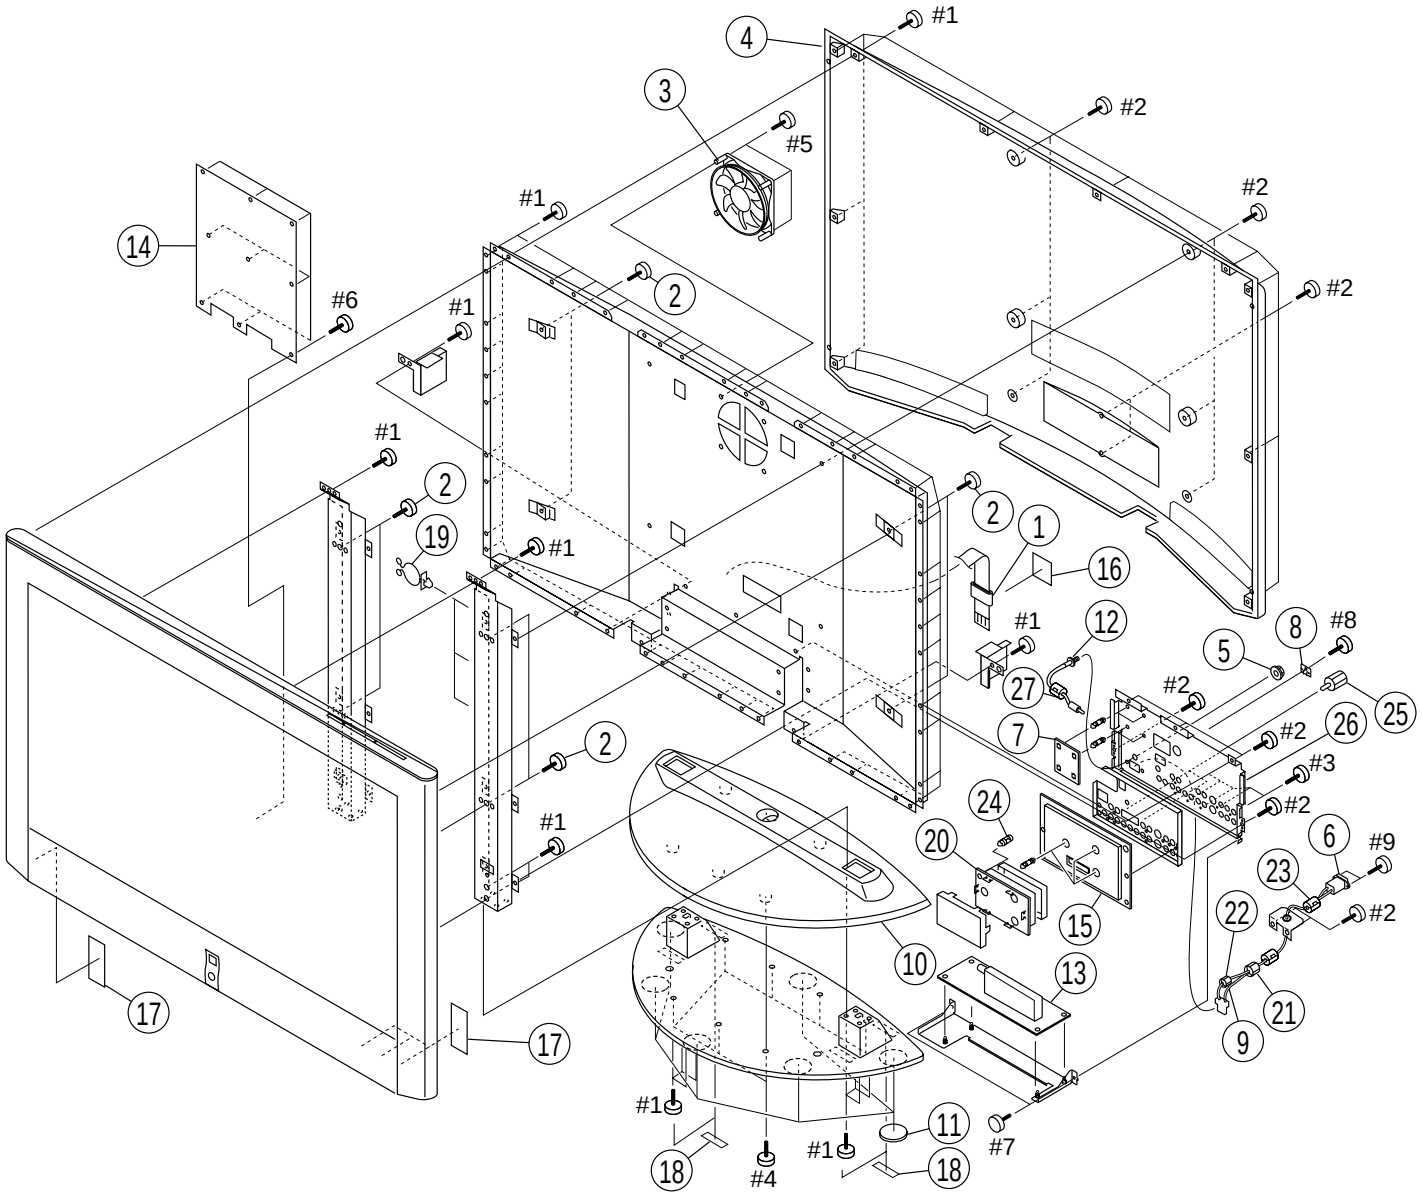
4
#1
3
#5
#2
#2
14
#1
2
#2
#6
#1
#1
2
2
19
#1
1
16
#1
12
8
#8
5
27
#2
25
7
#2
26
#3
#2
24
6
#9
20
23
#2
22
15
10
13
21
9
17
17
#1
11
#7
#1
#1
18
#4
18

REF.NO.		PART NO.	DESCRIPTION	REMARK
1		1-543-936-11	CORE (FPC)	
2		2-350-305-11	+PSW (M5)	
3		1-763-808-11	FAN, DC	
4		X-4039-911-1	COVER ASSY, REAR	
5		3-682-691-00	NUT, WASHER HEXAGON	
6	⚠	1-815-560-21	INLET, AC	
7	*	A-1401-921-A	Q2 BOARD, MOUNT	
8		4-087-363-01	COVER, CONNECTOR	
9		1-469-969-11	CLAMP, FERRITE	
10		X-4040-219-1	COVER, BASE ASSY	
11		4-087-341-01	FOOT, STAND	
12		1-823-862-11	CABLE,COAXIAL(F JACK-RCA PLUG)	
13	*	A-1401-922-A	TU BOARD, MOUNT	
14		1-468-720-11	REGULATOR, SWITCHING	
15	*	A-1401-920-A	Q BOARD, MOUNT	
16		4-088-212-01	TAPE, SHIELD (55X125)	
17		4-087-332-32	TAPE, SHIELD	
18		4-087-914-01	FOOT, STAND SUB	
19		4-035-160-01	PURSE LOCK (S) (DIA. 12)	
20	*	A-1300-915-A	UD BOARD, COMPLETE	
21		1-543-947-11	CORE, FERRITE	
22		1-500-249-11	BEAD FERRITE (CASE)	
23		1-500-459-11	FILTER, CLAMP (FERRITE CORE)	
24	*	3-669-610-00	SPACER	
25		4-635-966-01	SCREW (HEX)	
26		X-4040-920-1	BRACKET ASSY, Q	
27		1-469-241-11	CORE, FERRITE (REC-8BK)	
28		4-088-473-01	SHEET LIGHT INTERCEPTION	
#1		7-685-663-79	SCREW +BVTP 4X16 TYPE2 IT-3	
#2		7-682-963-09	SCREW +PSW 4X12	
#3		7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	
#4		7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3	
#5		7-682-961-01	SCREW +PSW 4X8	
#6		7-682-947-01	SCREW +PSW 3X6	
#7		7-682-660-09	SCREW +PS 4X6	
#8		7-682-948-09	SCREW +PSW 3X8	
#9		7-682-250-09	SCREW +K 3X12	

[Note]

1. The part No.28 is for service use only.
   This part is not described in the Exploded Views since it is not used for manufacturing.

4-2. CHASSIS

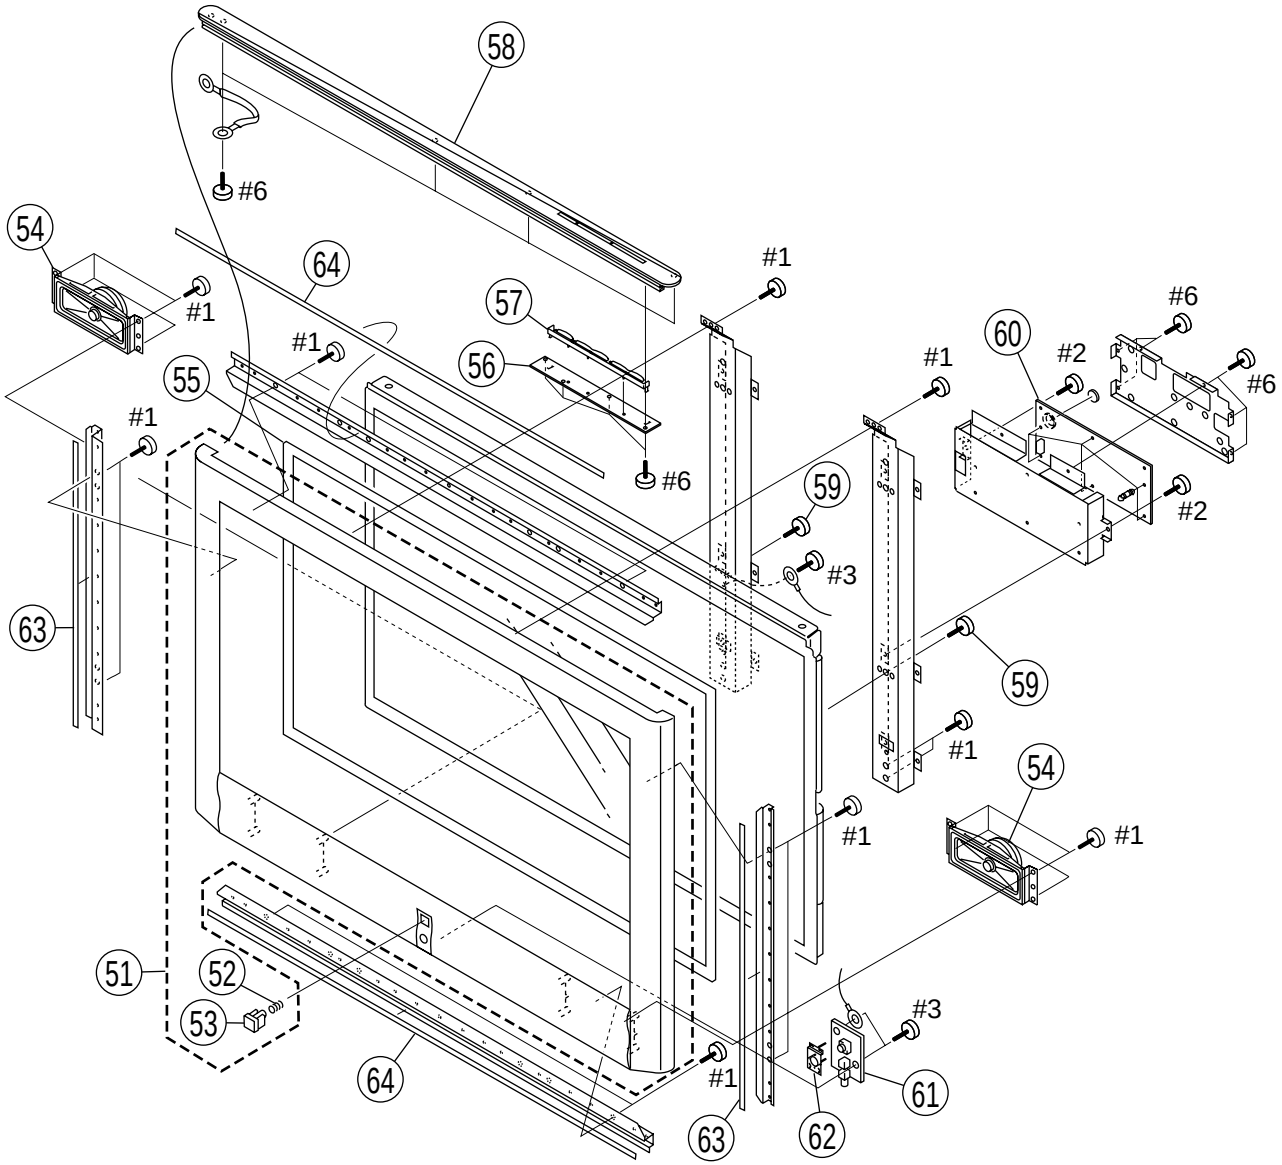
58
#6
54
64
#1
57
56
55
#1
#6
59
#3
63
#1
#1
60
#2
#6
#6
#2
59
#1
54
#1
#1
51
52
53
64
#1
#3
61
63
62

REF.NO.	PART NO.	DESCRIPTION	REMARK
51	X-4039-912-4	BEZEL ASSY	52, 53
52	4-086-856-01	SPRING, COMPRESSION	
53	4-086-858-01	BUTTON, POWER	
54	1-825-099-11	SPEAKER (13X5.5CM)	
55	1-758-746-21	FILTER, OPTICAL GLASS	
56	* A-1401-924-A	H2 BOARD, MOUNT	
57	X-4040-040-1	BUTTON ASSY, MULTI	
58	4-086-862-41	PLATE, TOP	
59	2-350-305-01	+PSW (M5)	
60	* A-1300-914-A	B BOARD, COMPLETE	
61	* A-1401-925-A	H1 BOARD, MOUNT	
62	4-087-169-11	WINDOW, RAY CATCHER	
63	4-088-078-01	DUST PROTECTION SHEET	
64	4-088-078-11	DUST PROTECTION SHEET	
#1	7-685-663-79	SCREW +BVTP 4X16 TYPE2 IT-3	
#2	7-682-963-09	SCREW +PSW 4X12	
#3	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	
#4	7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3	
#5	7-682-961-01	SCREW +PSW 4X8	
#6	7-682-947-01	SCREW +PSW 3X6	

REF.NO.	PART NO.	DESCRIPTION	REMARK

4-3. PACKING MATERIALS

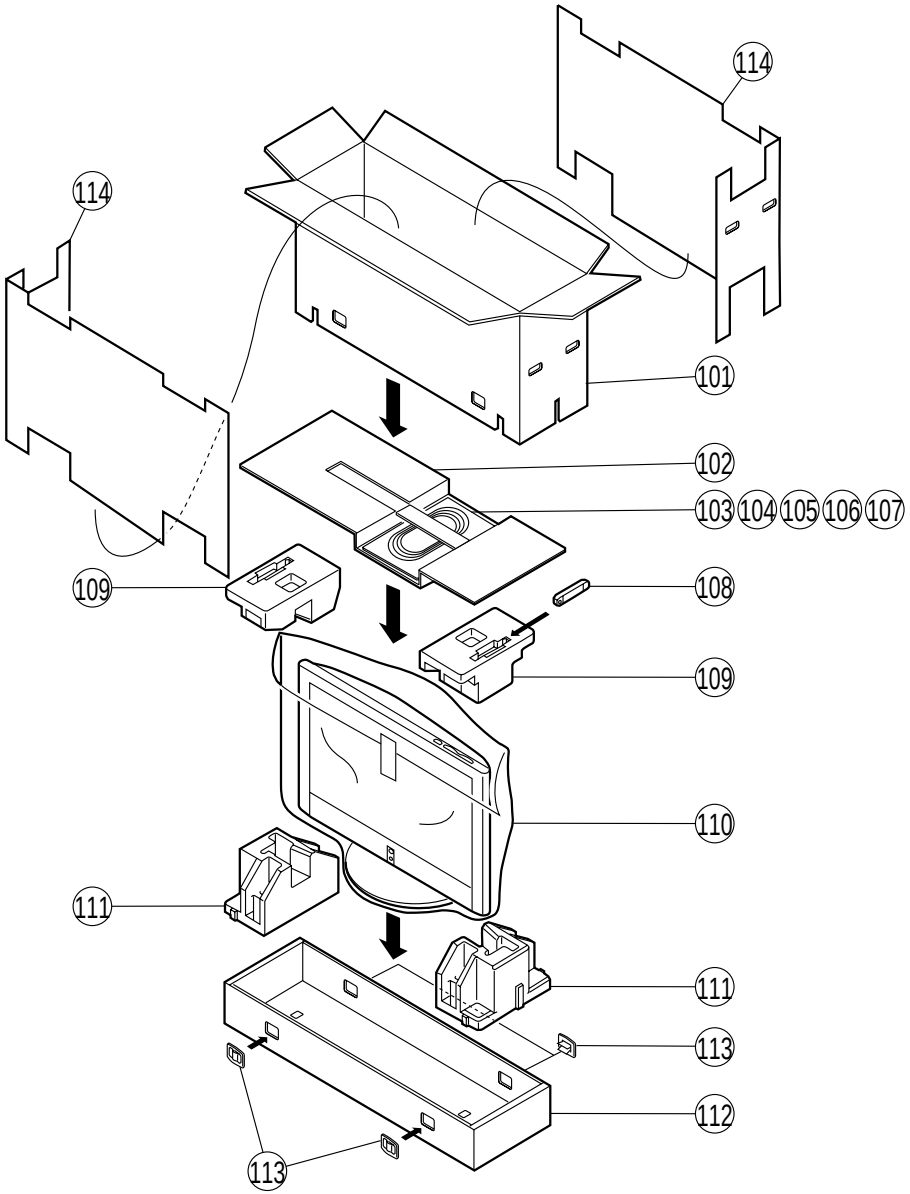

REF.NO.		PART NO.	DESCRIPTION	REMARK
101	*	4-091-566-01	INDIVIDUAL CARTON	
102	*	4-087-854-01	BOARD, TOP	
103		1-757-319-41	CABLE, COAXIAL (WITH (F) PLUG)	
104		4-091-567-11	MANUAL INSTRUCTION	
105	*	X-4040-964-1	ASSY, CLEANING CLOTH (FOR U/C)	
106	⚠	1-824-668-11	AC POWER-SUPPLY CORD	
107		4-087-339-01	BRACKET	
108		1-477-625-11	REMOTE COMMANDER (RM-928Y)	
109	*	4-087-001-01	CUSHION (UPPER)	
110	*	4-087-863-02	BAG, PROTECTION	
111	*	4-087-002-01	CUSHION (LOWER)	
112	*	4-087-815-02	TRAY	
113	*	3-674-673-01	STOPPER (A)	
114	*	4-087-816-01	FREAM	

SECTION 5
ELECTRICAL PARTS LIST

NOTE:

The components identified ⚠ marked are critical for safety.
Replace only with the part number specified.

Les composants identifiés par la marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

RESISTORS
- All resistors are in ohms
- F : nonflammable

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1		B	CAPACITOR		C1	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
2		B	CAPACITOR		C2	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
3		B	CAPACITOR		C3	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V			
4		B	CAPACITOR		C5	1-107-823-11	CERAMIC CHIP 0.47UF 10.00% 16V			
5		B	CAPACITOR		C6	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
6		B	CAPACITOR		C7	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
7		B	CAPACITOR		C8	1-125-889-91	CERAMIC CHIP 2.2UF 10% 10V			
8		B	CAPACITOR		C9	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
9		B	CAPACITOR		C10	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
10		B	CAPACITOR		C11	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
11		B	CAPACITOR		C12	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
12		B	CAPACITOR		C13	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
13		B	CAPACITOR		C14	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
14		B	CAPACITOR		C15	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
15		B	CAPACITOR		C16	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
16		B	CAPACITOR		C17	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V			
17		B	CAPACITOR		C18	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
18		B	CAPACITOR		C19	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
19		B	CAPACITOR		C20	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
20		B	CAPACITOR		C21	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
21		B	CAPACITOR		C22	1-115-467-11	CERAMIC CHIP 0.22UF 10.00% 10V			
22		B	CAPACITOR		C23	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
23		B	CAPACITOR		C24	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
24		B	CAPACITOR		C25	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
25		B	CAPACITOR		C26	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
26		B	CAPACITOR		C27	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
27		B	CAPACITOR		C28	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
28		B	CAPACITOR		C29	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
29		B	CAPACITOR		C30	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
30		B	CAPACITOR		C31	1-164-489-11	CERAMIC CHIP 0.22UF 10.00% 16V			
31		B	CAPACITOR		C32	1-164-489-11	CERAMIC CHIP 0.22UF 10.00% 16V			
32		B	CAPACITOR		C33	1-164-489-11	CERAMIC CHIP 0.22UF 10.00% 16V			
33		B	CAPACITOR		C34	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V			
34		B	CAPACITOR		C35	1-162-917-11	CERAMIC CHIP 15PF 5.00% 50V			
35		B	CAPACITOR		C36	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V			
36		B	CAPACITOR		C37	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
37		B	CAPACITOR		C38	1-164-344-11	CERAMIC CHIP 0.068UF 10.00% 25V			
38		B	CAPACITOR		C39	1-164-315-11	CERAMIC CHIP 470PF 5.00% 50V			
39		B	CAPACITOR		C40	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
40		B	CAPACITOR		C41	1-162-969-11	CERAMIC CHIP 0.0068UF 10.00% 25V			
41		B	CAPACITOR		C42	1-162-928-11	CERAMIC CHIP 120PF 5.00% 50V			
42		B	CAPACITOR		C43	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
43		B	CAPACITOR		C44	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
44		B	CAPACITOR		C45	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
45		B	CAPACITOR		C46	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
46		B	CAPACITOR		C47	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
47		B	CAPACITOR		C48	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
48		B	CAPACITOR		C49	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
49		B	CAPACITOR		C50	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
50		B	CAPACITOR		C51	1-127-692-11	CERAMIC CHIP 10UF 10% 16V			
51		B	CAPACITOR		C52	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
52		B	CAPACITOR		C53	1-131-661-21	ELECT CHIP 100UF 20% 10V			
53		B	CAPACITOR		C54	1-164-315-11	CERAMIC CHIP 470PF 5.00% 50V			
54		B	CAPACITOR		C55	1-163-233-91	CERAMIC CHIP 18PF 5.00% 50V			
55		B	CAPACITOR		C56	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
56		B	CAPACITOR		C57	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V			
57		B	CAPACITOR		C58	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
58		B	CAPACITOR		C59	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
59		B	CAPACITOR		C60	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
60		B	CAPACITOR		C61	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
61		B	CAPACITOR		C62	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
62		B	CAPACITOR		C63	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
63		B	CAPACITOR		C64	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
64		B	CAPACITOR		C65	1-162-917-11	CERAMIC CHIP 15PF 5.00% 50V			
65		B	CAPACITOR		C66	1-162-917-11	CERAMIC CHIP 15PF 5.00% 50V			
66		B	CAPACITOR		C67	1-131-661-21	ELECT CHIP 100UF 20% 10V			
67		B	CAPACITOR		C68	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
68		B	CAPACITOR		C69	1-128-361-11	ELECT CHIP 470UF 20.00% 10V			
69		B	CAPACITOR		C70	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
70		B	CAPACITOR		C71	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
71		B	CAPACITOR		C72	1-128-400-11	ELECT CHIP 47UF 20.00% 25V			
72		B	CAPACITOR		C74	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
73		B	CAPACITOR		C75	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
74		B	CAPACITOR		C76	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
75		B	CAPACITOR		C78	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
76		B	CAPACITOR		C79	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
77		B	CAPACITOR		C80	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
78		B	CAPACITOR		C81	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
79		B	CAPACITOR		C82	1-131-661-21	ELECT CHIP 100UF 20% 10V			
80		B	CAPACITOR		C83	1-127-692-11	CERAMIC CHIP 10UF 10% 16V			
81		B	CAPACITOR		C84	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
82		B	CAPACITOR		C86	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V			
83		B	CAPACITOR		C87	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V			
84		B	CAPACITOR		C88	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V			
85		B	CAPACITOR		C201	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
86		B	CAPACITOR		C202	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
87		B	CAPACITOR		C203	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
88		B	CAPACITOR		C204	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
89		B	CAPACITOR		C205	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
90		B	CAPACITOR		C206	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
91		B	CAPACITOR		C207	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
92		B	CAPACITOR		C208	1-115-670-11	ELECT CHIP 220UF 20.00% 35V			
93		B	CAPACITOR		C209	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
94		B	CAPACITOR		C210	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
95		B	CAPACITOR		C211	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V			
96		B	CAPACITOR		C212	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
97		B	CAPACITOR		C214	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
98		B	CAPACITOR		C216	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
99		B	CAPACITOR		C218	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
100		B	CAPACITOR		C220	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
101		B	CAPACITOR		C221	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
102		B	CAPACITOR		C222	1-162-975-11	CERAMIC CHIP 24PF 5.00% 50V			
103		B	CAPACITOR		C223	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
104		B	CAPACITOR		C224	1-162-975-11	CERAMIC CHIP 24PF 5.00% 50V			
105		B	CAPACITOR		C225	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
106		B	CAPACITOR		C226	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
107		B	CAPACITOR		C227	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
108		B	CAPACITOR		C228	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
109		B	CAPACITOR		C229	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
110		B	CAPACITOR		C230	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
111		B	CAPACITOR		C231	1-165-872-21	ELECT CHIP 47UF 20% 6.3V			
112		B	CAPACITOR		C232	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
113		B	CAPACITOR		C233	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
114		B	CAPACITOR		C234	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V			
115		B	CAPACITOR		C235	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
116		B	CAPACITOR		C236	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
117		B	CAPACITOR		C237	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
118		B	CAPACITOR		C238	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
119		B	CAPACITOR		C239	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
120		B	CAPACITOR		C240	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
121		B	CAPACITOR		C241	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
122		B	CAPACITOR		C242	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
123		B	CAPACITOR		C243	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
124		B	CAPACITOR		C244	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
125		B	CAPACITOR		C245	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V			
126		B	CAPACITOR		C247	1-115-459-11	ELECT CHIP 47UF 20.00% 6.3V			
127		B	CAPACITOR		C249	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
128		B	CAPACITOR		C250	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
129		B	CAPACITOR		C251	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
130		B	CAPACITOR		C252	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
131		B	CAPACITOR		C253	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
132		B	CAPACITOR		C254	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
133		B	CAPACITOR		C255	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
134		B	CAPACITOR		C256	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
135		B	CAPACITOR		C257	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
136		B	CAPACITOR		C258	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
137		B	CAPACITOR		C259	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
138		B	CAPACITOR		C260	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V			
139		B	CAPACITOR		C261	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
140		B	CAPACITOR		C262	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
141		B	CAPACITOR		C263	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
142		B	CAPACITOR		C264	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
143		B	CAPACITOR		C265	1-127-692-11	CERAMIC CHIP 10UF 10% 16V			
144		B	CAPACITOR		C266	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
145		B	CAPACITOR		C270	1-131-661-21	ELECT CHIP 100UF 20% 10V			
146		B	CAPACITOR		C271	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
147		B	CAPACITOR		C272	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
148		B	CAPACITOR		C273	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
149		B	CAPACITOR		C274	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
150		B	CAPACITOR		C275	1-127-692-11	CERAMIC CHIP 10UF 10% 16V			
151		B	CAPACITOR		C276	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
152		B	CAPACITOR		C401	1-115-670-11	ELECT CHIP 220UF 20.00% 35V			
153		B	CAPACITOR		C402	1-162-959-11	CERAMIC CHIP 330PF 5.00% 50V			
154		B	CAPACITOR		C403	1-125-898-91	CERAMIC CHIP 0.22UF 10.00% 50V			
155		B	CAPACITOR		C404	1-125-898-91	CERAMIC CHIP 0.22UF 10.00% 50V			
156		B	CAPACITOR		C405	1-125-898-91	CERAMIC CHIP 0.22UF 10.00% 50V			
157		B	CAPACITOR		C406	1-125-898-91	CERAMIC CHIP 0.22UF 10.00% 50V			
158		B	CAPACITOR		C407	1-110-501-11	CERAMIC CHIP 0.33UF 10.00% 16V			
159		B	CAPACITOR		C408	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
160		B	CAPACITOR		C409	1-125-898-91	CERAMIC CHIP 0.22UF 10.00% 50V			
161		B	CAPACITOR		C410	1-125-898-91	CERAMIC CHIP 0.22UF 10.00% 50V			
162		B	CAPACITOR		C411	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
163		B	CAPACITOR		C412	1-125-898-91	CERAMIC CHIP 0.22UF 10.00% 50V			
164		B	CAPACITOR		C413	1-125-898-91	CERAMIC CHIP 0.22UF 10.00% 50V			
165		B	CAPACITOR		C414	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
166		B	CAPACITOR		C415	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
167		B	CAPACITOR		C416	1-115-670-11	ELECT CHIP 220UF 20.00% 35V			
168		B	CAPACITOR		C417	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
169		B	CAPACITOR		C418	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
170		B	CAPACITOR		C419	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
171		B	CAPACITOR		C420	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
172		B	CAPACITOR		C421	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
173		B	CAPACITOR		C422	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
174		B	CAPACITOR		C423	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
175		B	CAPACITOR		C424	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
176		B	CAPACITOR		C425	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
177		B	CAPACITOR		C426	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
178		B	CAPACITOR		C427	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
179		B	CAPACITOR		C428	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
180		B	CAPACITOR		C429	1-115-670-11	ELECT CHIP 220UF 20.00% 35V			
181		B	CAPACITOR		C431	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
182		B	CAPACITOR		C432	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V			
183		B	CAPACITOR		C433	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
184		B	CAPACITOR		C434	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
185		B	CAPACITOR		C435	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V			
186		B	CAPACITOR		C436	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
187		B	CAPACITOR		C437	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
188		B	CAPACITOR		C438	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
189		B	CAPACITOR		C439	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
190		B	CAPACITOR		C440	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
191		B	CAPACITOR		C441	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
192		B	CAPACITOR		C442	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
193		B	CAPACITOR		C443	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
194		B	CAPACITOR		C444	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
195		B	CAPACITOR		C445	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
196		B	CAPACITOR		C446	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
197		B	CAPACITOR		C447	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
198		B	CAPACITOR		C448	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
199		B	CAPACITOR		C449	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V			
200		B	CAPACITOR		C450	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
201		B	CAPACITOR		C451	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
202		B	CAPACITOR		C453	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
203		B	CAPACITOR		C454	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
204		B	CAPACITOR		C455	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
205		B	CAPACITOR		C456	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
206		B	CAPACITOR		C457	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
207		B	CAPACITOR		C458	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
208		B	CAPACITOR		C459	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
209		B	CAPACITOR		C460	1-164-230-11	CERAMIC CHIP 220PF 5.00% 50V			
210		B	CAPACITOR		C461	1-162-919-11	CERAMIC CHIP 22PF 5.00% 50V			
211		B	CAPACITOR		C462	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
212		B	CAPACITOR		C463	1-128-361-11	ELECT CHIP 470UF 20.00% 10V			
213		B	CAPACITOR		C464	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
214		B	CAPACITOR		C465	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V			
215		B	CAPACITOR		C466	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
216		B	CAPACITOR		C467	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V			
217		B	CAPACITOR		C468	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
218		B	CAPACITOR		C604	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
219		B	CAPACITOR		C605	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
220		B	CAPACITOR		C606	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
221		B	CAPACITOR		C607	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
222		B	CAPACITOR		C608	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
223		B	CAPACITOR		C609	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
224		B	CAPACITOR		C610	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
225		B	CAPACITOR		C611	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
226		B	CAPACITOR		C612	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
227		B	CAPACITOR		C613	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
228		B	CAPACITOR		C614	1-128-360-11	ELECT CHIP 220UF 20.00% 10V			
229		B	CAPACITOR		C615	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
230		B	CAPACITOR		C616	1-128-304-11	ELECT CHIP 330UF 20.00% 16V			
231		B	CAPACITOR		C617	1-128-304-11	ELECT CHIP 330UF 20.00% 16V			
232		B	CAPACITOR		C618	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
233		B	CAPACITOR		C619	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
234		B	CAPACITOR		C620	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
235		B	CAPACITOR		C621	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
236		B	CAPACITOR		C624	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
237		B	CAPACITOR		C625	1-128-360-11	ELECT CHIP 220UF 20.00% 10V			
238		B	CAPACITOR		C626	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
239		B	CAPACITOR		C627	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
240		B	CAPACITOR		C628	1-115-412-11	CERAMIC CHIP 680PF 5.00% 25V			
241		B	CAPACITOR		C629	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
242		B	CAPACITOR		C630	1-162-964-11	CERAMIC CHIP 0.001UF 10.00% 50V			
243		B	CAPACITOR		C801	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
244		B	CAPACITOR		C802	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
245		B	CAPACITOR		C803	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
246		B	CAPACITOR		C804	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
247		B	CAPACITOR		C805	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
248		B	CAPACITOR		C806	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
249		B	CAPACITOR		C807	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
250		B	CAPACITOR		C808	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
251		B	CAPACITOR		C809	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
252		B	CAPACITOR		C810	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
253		B	CAPACITOR		C811	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
254		B	CAPACITOR		C812	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
255		B	CAPACITOR		C813	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
256		B	CAPACITOR		C814	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
257		B	CAPACITOR		C815	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
258		B	CAPACITOR		C816	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
259		B	CAPACITOR		C817	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
260		B	CAPACITOR		C818	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
261		B	CAPACITOR		C819	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
262		B	CAPACITOR		C820	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
263		B	CAPACITOR		C821	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
264		B	CAPACITOR		C822	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
265		B	CAPACITOR		C823	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
266		B	CAPACITOR		C824	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
267		B	CAPACITOR		C825	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
268		B	CAPACITOR		C826	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
269		B	CAPACITOR		C827	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
270		B	CAPACITOR		C828	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
271		B	CAPACITOR		C829	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
272		B	CAPACITOR		C830	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
273		B	CAPACITOR		C831	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
274		B	CAPACITOR		C832	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
275		B	CAPACITOR		C833	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
276		B	CAPACITOR		C834	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
277		B	CAPACITOR		C835	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
278		B	CAPACITOR		C836	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
279		B	CAPACITOR		C837	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
280		B	CAPACITOR		C838	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
281		B	CAPACITOR		C839	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
282		B	CAPACITOR		C840	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
283		B	CAPACITOR		C841	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
284		B	CAPACITOR		C842	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
285		B	CAPACITOR		C843	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
286		B	CAPACITOR		C844	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
287		B	CAPACITOR		C845	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
288		B	CAPACITOR		C846	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
289		B	CAPACITOR		C847	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
290		B	CAPACITOR		C848	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
291		B	CAPACITOR		C849	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
292		B	CAPACITOR		C850	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
293		B	CAPACITOR		C851	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
294		B	CAPACITOR		C852	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
295		B	CAPACITOR		C853	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
296		B	CAPACITOR		C1001	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
297		B	CAPACITOR		C1005	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
298		B	CAPACITOR		C1007	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
299		B	CAPACITOR		C1008	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
300		B	CAPACITOR		C1009	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
301		B	CAPACITOR		C1010	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
302		B	CAPACITOR		C1011	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
303		B	CAPACITOR		C1012	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
304		B	CAPACITOR		C1013	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
305		B	CAPACITOR		C1014	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
306		B	CAPACITOR		C1015	1-125-889-91	CERAMIC CHIP 2.2UF 10% 10V			
307		B	CAPACITOR		C1016	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V			
308		B	CAPACITOR		C1017	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
309		B	CAPACITOR		C1018	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
310		B	CAPACITOR		C1019	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
311		B	CAPACITOR		C1020	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V			
312		B	CAPACITOR		C1021	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
313		B	CAPACITOR		C1022	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
314		B	CAPACITOR		C1023	1-164-315-11	CERAMIC CHIP 470PF 5.00% 50V			
315		B	CAPACITOR		C1024	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
316		B	CAPACITOR		C1025	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
317		B	CAPACITOR		C1026	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
318		B	CAPACITOR		C1027	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
319		B	CAPACITOR		C1028	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
320		B	CAPACITOR		C1029	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
321		B	CAPACITOR		C1030	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
322		B	CAPACITOR		C1031	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
323		B	CAPACITOR		C1032	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
324		B	CAPACITOR		C1033	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
325		B	CAPACITOR		C1034	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
326		B	CAPACITOR		C1035	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
327		B	CAPACITOR		C1036	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
328		B	CAPACITOR		C1037	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
329		B	CAPACITOR		C1038	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
330		B	CAPACITOR		C1039	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
331		B	CAPACITOR		C1040	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
332		B	CAPACITOR		C1041	1-126-394-11	ELECT CHIP 10UF 20.00% 16V			
333		B	CAPACITOR		C1042	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
334		B	CAPACITOR		C1043	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
335		B	CAPACITOR		C1044	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
336		B	CAPACITOR		C1045	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
337		B	CAPACITOR		C1046	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
338		B	CAPACITOR		C1047	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
339		B	CAPACITOR		C1048	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
340		B	CAPACITOR		C1049	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
341		B	CAPACITOR		C1050	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
342		B	CAPACITOR		C1051	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
343		B	CAPACITOR		C1052	1-125-889-91	CERAMIC CHIP 2.2UF 10% 10V			
344		B	CAPACITOR		C1053	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
345		B	CAPACITOR		C1054	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
346		B	CAPACITOR		C1055	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
347		B	CAPACITOR		C1056	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
348		B	CAPACITOR		C1201	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
349		B	CAPACITOR		C1202	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
350		B	CAPACITOR		C1203	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
351		B	CAPACITOR		C1204	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
352		B	CAPACITOR		C1205	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
353		B	CAPACITOR		C1206	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
354		B	CAPACITOR		C1207	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
355		B	CAPACITOR		C1208	1-126-392-11	ELECT CHIP 100UF 20.00% 6.3V			
356		B	CAPACITOR		C1209	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
357		B	CAPACITOR		C1210	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
358		B	CAPACITOR		C1211	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
359		B	CAPACITOR		C1212	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
360		B	CAPACITOR		C1213	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
361		B	CAPACITOR		C1214	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
362		B	CAPACITOR		C1215	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
363		B	CAPACITOR		C1216	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
364		B	CAPACITOR		C1217	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
365		B	CAPACITOR		C1218	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
366		B	CAPACITOR		C1219	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
367		B	CAPACITOR		C1220	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
368		B	CAPACITOR		C1221	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
369		B	CAPACITOR		C1222	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
370		B	CAPACITOR		C1223	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
371		B	CAPACITOR		C1224	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
372		B	CAPACITOR		C1225	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
373		B	CAPACITOR		C1226	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
374		B	CAPACITOR		C1227	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
375		B	CAPACITOR		C1228	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
376		B	CAPACITOR		C1229	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
377		B	CAPACITOR		C1230	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
378		B	CAPACITOR		C1231	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
379		B	CAPACITOR		C1232	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
380		B	CAPACITOR		C1233	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
381		B	CAPACITOR		C1234	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
382		B	CAPACITOR		C1235	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
383		B	CAPACITOR		C1236	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
384		B	CAPACITOR		C1237	1-126-391-11	ELECT CHIP 47UF 20.00% 6.3V			
385		B	CAPACITOR		C1238	1-164-315-11	CERAMIC CHIP 470PF 5.00% 50V			
386		B	CAPACITOR		C1239	1-107-682-11	CERAMIC CHIP 1UF 10.00% 16V			
387		B	CAPACITOR		C1240	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
388		B	CAPACITOR		C1241	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
389		B	CONNECTOR		CN101	1-695-209-21	PIN, CONNECTOR (PC BOARD) 15P			
390		B	CONNECTOR		CN102	1-764-082-21	PIN, CONNECTOR (PC BOARD) 11P			
391		B	CONNECTOR		CN103	1-764-081-21	PIN, CONNECTOR (PC BOARD) 9P			
392		B	CONNECTOR		CN401	1-695-889-21	PIN, CONNECTOR (PC BOARD) 10P			
393		B	CONNECTOR		CN1001	1-779-339-21	CONNECTOR, FFC/FPC 30P			
394		B	CONNECTOR		CN1002	1-764-080-21	PIN, CONNECTOR (PC BOARD) 8P			
395		B	CONNECTOR		CN1003	1-764-078-11	PIN, CONNECTOR (PC BOARD) 3P			
396		B	CONNECTOR		CN1004	1-764-078-11	PIN, CONNECTOR (PC BOARD) 3P			
397		B	CONNECTOR	*	CN1006	1-750-635-21	PIN, CONNECTOR (PC BOARD) 5P			
398		B	CONNECTOR		CN1201	1-764-080-21	PIN, CONNECTOR (PC BOARD) 8P			
399		B	CONNECTOR	*	CN1203	1-764-093-21	PIN, CONNECTOR (PC BOARD) 8P			
400		B	CONNECTOR	*	CN1204	1-764-097-11	PIN, CONNECTOR (PC BOARD) 12P			
401		B	DIODE		D1	8-719-056-23	DIODE MA2S111-(K8).SO			
402		B	DIODE		D401	8-719-056-23	DIODE MA2S111-(K8).SO			
403		B	DIODE		D402	8-719-914-43	DIODE DAN202K			
404		B	DIODE		D403	8-719-914-43	DIODE DAN202K			
405		B	DIODE		D406	8-719-056-23	DIODE MA2S111-(K8).SO			
406		B	DIODE		D407	8-719-056-23	DIODE MA2S111-(K8).SO			
407		B	DIODE		D1002	8-719-056-23	DIODE MA2S111-(K8).SO			
408		B	DIODE		D1003	8-719-056-23	DIODE MA2S111-(K8).SO			
409		B	DIODE		D1004	8-719-024-77	DIODE HN1D03FU-TE85L			
410		B	DIODE		D1005	8-719-056-23	DIODE MA2S111-(K8).SO			
411		B	DIODE		D1006	8-719-056-23	DIODE MA2S111-(K8).SO			
412		B	DIODE		D1007	8-719-421-59	DIODE MA3130WA-TX			
413		B	DIODE		D1010	8-719-056-23	DIODE MA2S111-(K8).SO			
414		B	FERRITE		FB401	1-414-234-22	FERRITE 0UH			
415		B	FERRITE		FB801	1-414-921-11	FERRITE 0UH			
416		B	FERRITE		FB802	1-414-921-11	FERRITE 0UH			
417		B	FERRITE		FB1201	1-414-921-11	FERRITE 0UH			
418		B	FERRITE		FB1202	1-414-921-11	FERRITE 0UH			
419		B	FERRITE		FB1203	1-414-921-11	FERRITE 0UH			
420		B	FERRITE		FB1204	1-414-921-11	FERRITE 0UH			
421		B	CHIP CONDUCTOR		FB1205	1-216-864-11	SHORT CHIP 0			
422		B	CHIP CONDUCTOR		FB1206	1-216-864-11	SHORT CHIP 0			
423		B	CHIP CONDUCTOR		FB1207	1-216-864-11	SHORT CHIP 0			
424		B	FILTER		FL1	1-233-505-21	FILTER, LOW PASS			
425		B	FILTER		FL2	1-233-505-21	FILTER, LOW PASS			
426		B	FILTER		FL3	1-233-505-21	FILTER, LOW PASS			
427		B	FILTER		FL400	1-239-558-11	FILTER, CHIP EMI			
428		B	IC		IC1	8-759-443-08	IC TC7W241FU-TE12R			
429		B	IC		IC2	8-752-099-05	IC CXA2163AQ-T6			
430		B	IC		IC3	8-759-082-61	IC TC4W53FU			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
431		B	IC		IC4	8-759-638-04	IC Z8622912SSC-00TR			
432		B	IC		IC5	8-752-053-21	IC CXA1211M			
433		B	IC		IC6	8-752-390-35	IC CXD2057M-T6			
434		B	IC		IC7	8-759-533-85	IC L88M05T-FA-TL			
435		B	IC		IC201	8-749-018-41	IC SI-3025LSA-TL			
436		B	IC		IC202	8-749-018-41	IC SI-3025LSA-TL			
437		B	IC		IC204	8-759-031-84	IC SC7S04F			
438		B	IC		IC205	8-759-436-89	IC MC141627FT			
439		B	IC		IC206	6-700-960-01	IC UPD64083GF-3BA			
440		B	IC		IC207	8-759-987-27	IC LM1881M			
441		B	IC		IC208	8-759-082-61	IC TC4W53FU			
442		B	IC		IC209	8-759-082-61	IC TC4W53FU			
443		B	IC		IC401	8-759-533-85	IC L88M05T-FA-TL			
444		B	IC		IC402	8-759-460-72	IC BA033FP-E2			
445		B	IC		IC403	8-752-095-84	IC CXA3516R			
446		B	IC		IC404	8-759-646-02	IC M52347FP-TE			
447		B	IC		IC405	8-759-596-34	IC SN74LV4053APWR			
448		B	IC		IC406	8-759-058-62	IC TC7S08FU(TE85R)			
449		B	IC		IC601	8-759-837-36	IC CXD9606Q			
450		B	IC		IC603	8-759-676-70	IC MSM56V16160F-10TS-K			
451		B	IC		IC604	8-759-549-00	IC SN74LV123APWR			
452		B	IC		IC801	6-700-681-01	IC IP00C713			
453		B	IC		IC802	8-759-594-19	IC K4S161622D-TC80			
454		B	IC		IC803	8-759-594-19	IC K4S161622D-TC80			
455		B	IC		IC804	8-759-594-19	IC K4S161622D-TC80			
456		B	IC		IC1003	8-759-560-17	IC RS5C348A-E2			
457		B	IC		IC1004	8-759-648-10	IC HD64F2633TE			
458		B	IC		IC1005	8-759-544-01	IC S-80828ANNP-EDR-T2			
459		B	IC		IC1006	8-759-058-62	IC TC7S08FU(TE85R)			
460		B	IC		IC1007	6-702-688-01	IC M24C64-WMN6T(B)			
461		B	IC		IC1009	8-759-443-08	IC TC7W241FU-TE12R			
462		B	IC		IC1010	8-759-524-50	IC TC74VHC541FT(EL)			
463		B	IC		IC1011	8-759-490-41	IC TC74VHCT541AFT(EL)			
464		B	IC		IC1012	8-759-599-01	IC TC74VHCT14AFT(EL)			
465		B	IC		IC1015	8-759-669-50	IC SN74CBTD3306PWR-12			
466		B	IC		IC1016	8-759-277-63	IC TC7W14FU(TE12R)			
467		B	IC		IC1017	8-759-652-56	IC BA033F-E2			
468		B	IC		IC1018	8-759-497-44	IC TC7WH125FU(TE12R)			
469		B	IC		IC1019	8-759-669-50	IC SN74CBTD3306PWR-12			
470		B	IC		IC1020	8-759-582-91	IC S-80842ANNP-ED6-T2			
471		B	IC		IC1201	6-700-750-11	IC XC18V01PC20C-TR/EL			
472		B	IC		IC1202	8-749-018-41	IC SI-3025LSA-TL			
473		B	IC		IC1203	6-702-599-01	IC XC2S50-5TQ144C1			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
474		B	IC		IC1204	6-701-098-11	IC THC63LVDM83R-T			
475		B	IC		IC1205	6-700-683-01	IC MB90098APF-A-130-BND-ER			
476		B	COIL		L1	1-412-052-21	INDUCTOR 1UH			
477		B	COIL		L2	1-412-052-21	INDUCTOR 1UH			
478		B	COIL		L3	1-412-052-21	INDUCTOR 1UH			
479		B	COIL		L4	1-412-052-21	INDUCTOR 1UH			
480		B	COIL		L5	1-412-058-11	INDUCTOR 10UH			
481		B	COIL		L6	1-412-058-11	INDUCTOR 10UH			
482		B	COIL		L7	1-412-058-11	INDUCTOR 10UH			
483		B	COIL		L8	1-412-061-21	INDUCTOR 33UH			
484		B	COIL		L201	1-419-098-21	INDUCTORS (POWER)			
485		B	COIL		L202	1-412-063-21	INDUCTOR 68UH			
486		B	COIL		L204	1-412-052-21	INDUCTOR 1UH			
487		B	COIL		L205	1-412-052-21	INDUCTOR 1UH			
488		B	COIL		L207	1-412-052-21	INDUCTOR 1UH			
489		B	COIL		L208	1-412-052-21	INDUCTOR 1UH			
490		B	COIL		L401	1-412-052-21	INDUCTOR 1UH			
491		B	COIL		L601	1-412-058-11	INDUCTOR 10UH			
492		B	COIL		L602	1-412-030-11	INDUCTOR 22UH			
493		B	COIL		L603	1-412-058-11	INDUCTOR 10UH			
494		B	COIL		L604	1-412-030-11	INDUCTOR 22UH			
495		B	COIL		L801	1-500-451-11	FERRITE 0UH			
496		B	TRANSISTOR		Q1	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R			
497		B	TRANSISTOR		Q2	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R			
498		B	TRANSISTOR		Q3	8-729-927-99	TRANSISTOR 2SC4617R			
499		B	TRANSISTOR		Q4	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R			
500		B	TRANSISTOR		Q5	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX			
501		B	TRANSISTOR		Q6	8-729-927-99	TRANSISTOR 2SC4617R			
502		B	TRANSISTOR		Q7	8-729-928-81	TRANSISTOR DTC144EE			
503		B	TRANSISTOR		Q8	8-729-927-99	TRANSISTOR 2SC4617R			
504		B	TRANSISTOR		Q9	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX			
505		B	TRANSISTOR		Q10	8-729-927-99	TRANSISTOR 2SC4617R			
506		B	TRANSISTOR		Q11	8-729-927-99	TRANSISTOR 2SC4617R			
507		B	TRANSISTOR		Q12	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX			
508		B	TRANSISTOR		Q13	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX			
509		B	TRANSISTOR		Q14	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX			
510		B	TRANSISTOR		Q15	8-729-928-19	TRANSISTOR 2SA1774R			
511		B	TRANSISTOR		Q16	8-729-928-19	TRANSISTOR 2SA1774R			
512		B	TRANSISTOR		Q17	8-729-927-99	TRANSISTOR 2SC4617R			
513		B	TRANSISTOR		Q18	8-729-928-81	TRANSISTOR DTC144EE			
514		B	TRANSISTOR		Q19	8-729-928-19	TRANSISTOR 2SA1774R			
515		B	TRANSISTOR		Q20	8-729-927-99	TRANSISTOR 2SC4617R			
516		B	TRANSISTOR		Q21	8-729-927-99	TRANSISTOR 2SC4617R			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
517		B	TRANSISTOR		Q22	8-729-927-99	TRANSISTOR 2SC4617R			
518		B	TRANSISTOR		Q23	8-729-927-99	TRANSISTOR 2SC4617R			
519		B	TRANSISTOR		Q24	8-729-927-99	TRANSISTOR 2SC4617R			
520		B	TRANSISTOR		Q25	8-729-927-99	TRANSISTOR 2SC4617R			
521		B	TRANSISTOR		Q26	8-729-927-99	TRANSISTOR 2SC4617R			
522		B	TRANSISTOR		Q27	8-729-928-19	TRANSISTOR 2SA1774R			
523		B	TRANSISTOR		Q28	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R			
524		B	TRANSISTOR		Q29	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R			
525		B	TRANSISTOR		Q30	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R			
526		B	TRANSISTOR		Q31	8-729-112-65	TRANSISTOR 2SA1462-Y33			
527		B	TRANSISTOR		Q32	8-729-112-65	TRANSISTOR 2SA1462-Y33			
528		B	TRANSISTOR		Q33	8-729-112-65	TRANSISTOR 2SA1462-Y33			
529		B	TRANSISTOR		Q201	8-729-928-19	TRANSISTOR 2SA1774R			
530		B	TRANSISTOR		Q203	8-729-928-19	TRANSISTOR 2SA1774R			
531		B	TRANSISTOR		Q204	8-729-927-99	TRANSISTOR 2SC4617R			
532		B	TRANSISTOR		Q205	8-729-928-19	TRANSISTOR 2SA1774R			
533		B	TRANSISTOR		Q206	8-729-927-99	TRANSISTOR 2SC4617R			
534		B	TRANSISTOR		Q207	8-729-927-99	TRANSISTOR 2SC4617R			
535		B	TRANSISTOR		Q208	8-729-927-99	TRANSISTOR 2SC4617R			
536		B	TRANSISTOR		Q209	8-729-928-19	TRANSISTOR 2SA1774R			
537		B	TRANSISTOR		Q210	8-729-927-99	TRANSISTOR 2SC4617R			
538		B	TRANSISTOR		Q211	8-729-928-19	TRANSISTOR 2SA1774R			
539		B	TRANSISTOR		Q212	8-729-927-99	TRANSISTOR 2SC4617R			
540		B	TRANSISTOR		Q213	8-729-928-19	TRANSISTOR 2SA1774R			
541		B	TRANSISTOR		Q214	8-729-928-81	TRANSISTOR DTC144EE			
542		B	TRANSISTOR		Q215	8-729-927-99	TRANSISTOR 2SC4617R			
543		B	TRANSISTOR		Q216	8-729-927-99	TRANSISTOR 2SC4617R			
544		B	TRANSISTOR		Q217	8-729-928-19	TRANSISTOR 2SA1774R			
545		B	TRANSISTOR		Q218	8-729-928-19	TRANSISTOR 2SA1774R			
546		B	TRANSISTOR		Q401	8-729-928-19	TRANSISTOR 2SA1774R			
547		B	TRANSISTOR		Q402	8-729-927-99	TRANSISTOR 2SC4617R			
548		B	TRANSISTOR		Q403	8-729-927-99	TRANSISTOR 2SC4617R			
549		B	TRANSISTOR		Q404	8-729-928-81	TRANSISTOR DTC144EE			
550		B	TRANSISTOR		Q405	8-729-928-81	TRANSISTOR DTC144EE			
551		B	TRANSISTOR		Q406	8-729-928-81	TRANSISTOR DTC144EE			
552		B	TRANSISTOR		Q407	8-729-927-99	TRANSISTOR 2SC4617R			
553		B	TRANSISTOR		Q408	8-729-927-99	TRANSISTOR 2SC4617R			
554		B	TRANSISTOR		Q409	8-729-927-99	TRANSISTOR 2SC4617R			
555		B	TRANSISTOR		Q410	8-729-927-99	TRANSISTOR 2SC4617R			
556		B	TRANSISTOR		Q411	8-729-928-19	TRANSISTOR 2SA1774R			
557		B	TRANSISTOR		Q412	8-729-928-19	TRANSISTOR 2SA1774R			
558		B	TRANSISTOR		Q413	8-729-928-19	TRANSISTOR 2SA1774R			
559		B	TRANSISTOR		Q414	8-729-928-19	TRANSISTOR 2SA1774R			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
560		B	TRANSISTOR		Q415	8-729-928-19	TRANSISTOR 2SA1774R			
561		B	TRANSISTOR		Q416	8-729-928-81	TRANSISTOR DTC144EE			
562		B	TRANSISTOR		Q417	8-729-928-81	TRANSISTOR DTC144EE			
563		B	TRANSISTOR		Q418	8-729-928-81	TRANSISTOR DTC144EE			
564		B	TRANSISTOR		Q1001	8-729-927-99	TRANSISTOR 2SC4617R			
565		B	TRANSISTOR		Q1002	8-729-928-19	TRANSISTOR 2SA1774R			
566		B	TRANSISTOR		Q1003	8-729-928-81	TRANSISTOR DTC144EE			
567		B	TRANSISTOR		Q1004	8-729-928-81	TRANSISTOR DTC144EE			
568		B	TRANSISTOR		Q1005	8-729-928-81	TRANSISTOR DTC144EE			
569		B	RESISTOR		R1	1-216-809-11	METAL CHIP 100 5% 1/10W			
570		B	RESISTOR		R2	1-216-809-11	METAL CHIP 100 5% 1/10W			
571		B	RESISTOR		R3	1-216-805-11	METAL CHIP 47 5% 1/10W			
572		B	RESISTOR		R4	1-216-809-11	METAL CHIP 100 5% 1/10W			
573		B	RESISTOR		R6	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
574		B	RESISTOR		R7	1-218-726-11	METAL CHIP 27K 0.5% 1/10W			
575		B	RESISTOR		R8	1-216-805-11	METAL CHIP 47 5% 1/10W			
576		B	RESISTOR		R9	1-216-855-11	METAL CHIP 680K 5% 1/10W			
577		B	RESISTOR		R10	1-216-828-11	METAL CHIP 3.9K 5% 1/10W			
578		B	RESISTOR		R11	1-218-692-11	METAL CHIP 1K 0.5% 1/10W			
579		B	RESISTOR		R12	1-216-805-11	METAL CHIP 47 5% 1/10W			
580		B	RESISTOR		R13	1-216-855-11	METAL CHIP 680K 5% 1/10W			
581		B	RESISTOR		R14	1-216-809-11	METAL CHIP 100 5% 1/10W			
582		B	RESISTOR		R15	1-216-833-11	METAL CHIP 10K 5% 1/10W			
583		B	RESISTOR		R16	1-216-805-11	METAL CHIP 47 5% 1/10W			
584		B	RESISTOR		R17	1-216-809-11	METAL CHIP 100 5% 1/10W			
585		B	RESISTOR		R18	1-218-713-11	METAL CHIP 7.5K 0.5% 1/10W			
586		B	RESISTOR		R19	1-216-809-11	METAL CHIP 100 5% 1/10W			
587		B	RESISTOR		R20	1-216-809-11	METAL CHIP 100 5% 1/10W			
588		B	RESISTOR		R21	1-216-809-11	METAL CHIP 100 5% 1/10W			
589		B	RESISTOR		R22	1-216-819-11	METAL CHIP 680 5% 1/10W			
590		B	RESISTOR		R23	1-216-818-11	METAL CHIP 560 5% 1/10W			
591		B	RESISTOR		R24	1-216-819-11	METAL CHIP 680 5% 1/10W			
592		B	RESISTOR		R25	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
593		B	RESISTOR		R26	1-216-819-11	METAL CHIP 680 5% 1/10W			
594		B	RESISTOR		R27	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
595		B	RESISTOR		R28	1-216-819-11	METAL CHIP 680 5% 1/10W			
596		B	RESISTOR		R29	1-216-830-11	METAL CHIP 5.6K 5% 1/10W			
597		B	RESISTOR		R30	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
598		B	RESISTOR		R31	1-216-839-11	METAL CHIP 33K 5% 1/10W			
599		B	RESISTOR		R32	1-216-841-11	METAL CHIP 47K 5% 1/10W			
600		B	RESISTOR		R33	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W			
601		B	RESISTOR		R34	1-216-819-11	METAL CHIP 680 5% 1/10W			
602		B	RESISTOR		R35	1-216-821-11	METAL CHIP 1K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
603		B	RESISTOR		R36	1-216-821-11	METAL CHIP 1K 5% 1/10W			
604		B	RESISTOR		R37	1-216-821-11	METAL CHIP 1K 5% 1/10W			
605		B	RESISTOR		R39	1-216-830-11	METAL CHIP 5.6K 5% 1/10W			
606		B	RESISTOR		R40	1-216-813-11	METAL CHIP 220 5% 1/10W			
607		B	RESISTOR		R41	1-216-823-11	METAL CHIP 1.5K 5% 1/10W			
608		B	RESISTOR		R42	1-218-712-11	METAL CHIP 6.8K 0.5% 1/10W			
609		B	RESISTOR		R43	1-216-819-11	METAL CHIP 680 5% 1/10W			
610		B	RESISTOR		R44	1-216-821-11	METAL CHIP 1K 5% 1/10W			
611		B	RESISTOR		R45	1-218-692-11	METAL CHIP 1K 0.5% 1/10W			
612		B	RESISTOR		R46	1-218-684-11	METAL CHIP 470 0.5% 1/10W			
613		B	RESISTOR		R47	1-218-716-11	METAL CHIP 10K 0.5% 1/10W			
614		B	RESISTOR		R48	1-216-818-11	METAL CHIP 560 5% 1/10W			
615		B	RESISTOR		R49	1-216-809-11	METAL CHIP 100 5% 1/10W			
616		B	RESISTOR		R50	1-216-809-11	METAL CHIP 100 5% 1/10W			
617		B	RESISTOR		R51	1-216-815-11	METAL CHIP 330 5% 1/10W			
618		B	RESISTOR		R52	1-216-819-11	METAL CHIP 680 5% 1/10W			
619		B	RESISTOR		R53	1-216-809-11	METAL CHIP 100 5% 1/10W			
620		B	RESISTOR		R54	1-216-830-11	METAL CHIP 5.6K 5% 1/10W			
621		B	RESISTOR		R55	1-216-818-11	METAL CHIP 560 5% 1/10W			
622		B	RESISTOR		R56	1-216-821-11	METAL CHIP 1K 5% 1/10W			
623		B	RESISTOR		R57	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W			
624		B	RESISTOR		R58	1-216-845-11	METAL CHIP 100K 5% 1/10W			
625		B	RESISTOR		R59	1-216-809-11	METAL CHIP 100 5% 1/10W			
626		B	RESISTOR		R60	1-218-724-11	METAL CHIP 22K 0.5% 1/10W			
627		B	RESISTOR		R61	1-218-698-11	METAL CHIP 1.8K 0.5% 1/10W			
628		B	RESISTOR		R62	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
629		B	RESISTOR		R64	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
630		B	RESISTOR		R65	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
631		B	RESISTOR		R66	1-216-809-11	METAL CHIP 100 5% 1/10W			
632		B	RESISTOR		R67	1-218-710-11	METAL CHIP 5.6K 0.5% 1/10W			
633		B	RESISTOR		R68	1-216-821-11	METAL CHIP 1K 5% 1/10W			
634		B	RESISTOR		R69	1-216-821-11	METAL CHIP 1K 5% 1/10W			
635		B	RESISTOR		R70	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W			
636		B	RESISTOR		R71	1-218-714-11	METAL CHIP 8.2K 0.5% 1/10W			
637		B	RESISTOR		R72	1-218-702-11	METAL CHIP 2.7K 0.5% 1/10W			
638		B	RESISTOR		R73	1-216-821-11	METAL CHIP 1K 5% 1/10W			
639		B	RESISTOR		R74	1-216-809-11	METAL CHIP 100 5% 1/10W			
640		B	RESISTOR		R75	1-218-692-11	METAL CHIP 1K 0.5% 1/10W			
641		B	RESISTOR		R76	1-218-692-11	METAL CHIP 1K 0.5% 1/10W			
642		B	RESISTOR		R77	1-216-820-11	METAL CHIP 820 5% 1/10W			
643		B	RESISTOR		R78	1-218-676-11	METAL CHIP 220 0.5% 1/10W			
644		B	RESISTOR		R79	1-216-864-11	SHORT CHIP 0			
645		B	RESISTOR		R80	1-218-692-11	METAL CHIP 1K 0.5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
646		B	RESISTOR		R81	1-218-692-11	METAL CHIP 1K 0.5% 1/10W			
647		B	RESISTOR		R82	1-216-809-11	METAL CHIP 100 5% 1/10W			
648		B	RESISTOR		R83	1-218-693-11	METAL CHIP 1.1K 0.5% 1/10W			
649		B	RESISTOR		R84	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W			
650		B	RESISTOR		R85	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W			
651		B	RESISTOR		R86	1-216-833-11	METAL CHIP 10K 5% 1/10W			
652		B	RESISTOR		R89	1-216-833-11	METAL CHIP 10K 5% 1/10W			
653		B	RESISTOR		R90	1-218-684-11	METAL CHIP 470 0.5% 1/10W			
654		B	RESISTOR		R91	1-218-694-11	METAL CHIP 1.2K 0.5% 1/10W			
655		B	RESISTOR		R92	1-216-821-11	METAL CHIP 1K 5% 1/10W			
656		B	RESISTOR		R93	1-218-672-11	METAL CHIP 150 0.5% 1/10W			
657		B	RESISTOR		R94	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W			
658		B	RESISTOR		R95	1-218-702-11	METAL CHIP 2.7K 0.5% 1/10W			
659		B	RESISTOR		R96	1-216-809-11	METAL CHIP 100 5% 1/10W			
660		B	RESISTOR		R97	1-216-809-11	METAL CHIP 100 5% 1/10W			
661		B	RESISTOR		R98	1-218-668-11	METAL CHIP 100 0.5% 1/10W			
662		B	RESISTOR		R99	1-216-864-11	SHORT CHIP 0			
663		B	RESISTOR		R100	1-216-805-11	METAL CHIP 47 5% 1/10W			
664		B	RESISTOR		R101	1-216-805-11	METAL CHIP 47 5% 1/10W			
665		B	RESISTOR		R102	1-216-805-11	METAL CHIP 47 5% 1/10W			
666		B	RESISTOR		R103	1-216-821-11	METAL CHIP 1K 5% 1/10W			
667		B	RESISTOR		R104	1-216-821-11	METAL CHIP 1K 5% 1/10W			
668		B	RESISTOR		R105	1-216-821-11	METAL CHIP 1K 5% 1/10W			
669		B	RESISTOR		R106	1-216-813-11	METAL CHIP 220 5% 1/10W			
670		B	RESISTOR		R107	1-216-813-11	METAL CHIP 220 5% 1/10W			
671		B	RESISTOR		R108	1-216-805-11	METAL CHIP 47 5% 1/10W			
672		B	RESISTOR		R109	1-216-805-11	METAL CHIP 47 5% 1/10W			
673		B	RESISTOR		R110	1-216-805-11	METAL CHIP 47 5% 1/10W			
674		B	RESISTOR		R112	1-216-864-11	SHORT CHIP 0			
675		B	RESISTOR		R113	1-216-864-11	SHORT CHIP 0			
676		B	RESISTOR		R116	1-216-817-11	METAL CHIP 470 5% 1/10W			
677		B	RESISTOR		R117	1-216-864-11	SHORT CHIP 0			
678		B	RESISTOR		R118	1-216-857-11	METAL CHIP 1M 5% 1/10W			
679		B	RESISTOR		R119	1-216-857-11	METAL CHIP 1M 5% 1/10W			
680		B	RESISTOR		R201	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W			
681		B	RESISTOR		R202	1-216-840-11	METAL CHIP 39K 5% 1/10W			
682		B	RESISTOR		R204	1-216-813-11	METAL CHIP 220 5% 1/10W			
683		B	RESISTOR		R205	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
684		B	RESISTOR		R207	1-218-668-11	METAL CHIP 100 0.5% 1/10W			
685		B	RESISTOR		R213	1-216-809-11	METAL CHIP 100 5% 1/10W			
686		B	RESISTOR		R214	1-218-661-11	METAL CHIP 51 0.5% 1/10W			
687		B	RESISTOR		R216	1-216-824-11	METAL CHIP 1.8K 5% 1/10W			
688		B	RESISTOR		R217	1-216-824-11	METAL CHIP 1.8K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
689		B	RESISTOR		R218	1-216-824-11	METAL CHIP 1.8K 5% 1/10W			
690		B	RESISTOR		R219	1-216-824-11	METAL CHIP 1.8K 5% 1/10W			
691		B	RESISTOR		R223	1-218-731-11	METAL CHIP 43K 0.5% 1/10W			
692		B	RESISTOR		R232	1-216-833-11	METAL CHIP 10K 5% 1/10W			
693		B	RESISTOR		R240	1-216-835-11	METAL CHIP 15K 5% 1/10W			
694		B	RESISTOR		R245	1-216-813-11	METAL CHIP 220 5% 1/10W			
695		B	RESISTOR		R246	1-216-809-11	METAL CHIP 100 5% 1/10W			
696		B	RESISTOR		R248	1-216-809-11	METAL CHIP 100 5% 1/10W			
697		B	RESISTOR		R252	1-216-822-11	METAL CHIP 1.2K 5% 1/10W			
698		B	RESISTOR		R255	1-216-824-11	METAL CHIP 1.8K 5% 1/10W			
699		B	RESISTOR		R256	1-216-809-11	METAL CHIP 100 5% 1/10W			
700		B	RESISTOR		R257	1-216-839-11	METAL CHIP 33K 5% 1/10W			
701		B	RESISTOR		R258	1-216-836-11	METAL CHIP 18K 5% 1/10W			
702		B	RESISTOR		R260	1-216-813-11	METAL CHIP 220 5% 1/10W			
703		B	RESISTOR		R261	1-216-809-11	METAL CHIP 100 5% 1/10W			
704		B	RESISTOR		R262	1-216-821-11	METAL CHIP 1K 5% 1/10W			
705		B	RESISTOR		R263	1-218-692-11	METAL CHIP 1K 0.5% 1/10W			
706		B	RESISTOR		R265	1-216-821-11	METAL CHIP 1K 5% 1/10W			
707		B	RESISTOR		R266	1-218-690-11	METAL CHIP 820 0.5% 1/10W			
708		B	RESISTOR		R269	1-216-821-11	METAL CHIP 1K 5% 1/10W			
709		B	RESISTOR		R271	1-216-816-11	METAL CHIP 390 5% 1/10W			
710		B	RESISTOR		R272	1-218-688-11	METAL CHIP 680 0.5% 1/10W			
711		B	RESISTOR		R273	1-218-712-11	METAL CHIP 6.8K 0.5% 1/10W			
712		B	RESISTOR		R274	1-216-809-11	METAL CHIP 100 5% 1/10W			
713		B	RESISTOR		R275	1-216-809-11	METAL CHIP 100 5% 1/10W			
714		B	RESISTOR		R276	1-216-809-11	METAL CHIP 100 5% 1/10W			
715		B	RESISTOR		R277	1-216-855-11	METAL CHIP 680K 5% 1/10W			
716		B	RESISTOR		R279	1-216-823-11	METAL CHIP 1.5K 5% 1/10W			
717		B	RESISTOR		R280	1-216-809-11	METAL CHIP 100 5% 1/10W			
718		B	RESISTOR		R281	1-216-823-11	METAL CHIP 1.5K 5% 1/10W			
719		B	RESISTOR		R282	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W			
720		B	RESISTOR		R283	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
721		B	RESISTOR		R284	1-216-821-11	METAL CHIP 1K 5% 1/10W			
722		B	RESISTOR		R285	1-218-684-11	METAL CHIP 470 0.5% 1/10W			
723		B	RESISTOR		R286	1-216-815-11	METAL CHIP 330 5% 1/10W			
724		B	RESISTOR		R287	1-216-839-11	METAL CHIP 33K 5% 1/10W			
725		B	RESISTOR		R288	1-216-836-11	METAL CHIP 18K 5% 1/10W			
726		B	RESISTOR		R289	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W			
727		B	RESISTOR		R290	1-216-821-11	METAL CHIP 1K 5% 1/10W			
728		B	RESISTOR		R291	1-216-821-11	METAL CHIP 1K 5% 1/10W			
729		B	RESISTOR		R292	1-218-686-11	METAL CHIP 560 0.5% 1/10W			
730		B	RESISTOR		R293	1-218-684-11	METAL CHIP 470 0.5% 1/10W			
731		B	RESISTOR		R294	1-218-688-11	METAL CHIP 680 0.5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
732		B	RESISTOR		R295	1-218-720-11	METAL CHIP 15K 0.5% 1/10W			
733		B	RESISTOR		R296	1-216-809-11	METAL CHIP 100 5% 1/10W			
734		B	RESISTOR		R298	1-216-809-11	METAL CHIP 100 5% 1/10W			
735		B	RESISTOR		R299	1-216-821-11	METAL CHIP 1K 5% 1/10W			
736		B	RESISTOR		R301	1-216-809-11	METAL CHIP 100 5% 1/10W			
737		B	RESISTOR		R302	1-216-817-11	METAL CHIP 470 5% 1/10W			
738		B	RESISTOR		R303	1-216-817-11	METAL CHIP 470 5% 1/10W			
739		B	RESISTOR		R304	1-216-817-11	METAL CHIP 470 5% 1/10W			
740		B	RESISTOR		R305	1-216-823-11	METAL CHIP 1.5K 5% 1/10W			
741		B	RESISTOR		R306	1-216-823-11	METAL CHIP 1.5K 5% 1/10W			
742		B	RESISTOR		R307	1-216-823-11	METAL CHIP 1.5K 5% 1/10W			
743		B	RESISTOR		R308	1-216-823-11	METAL CHIP 1.5K 5% 1/10W			
744		B	RESISTOR		R401	1-216-827-11	METAL CHIP 3.3K 5% 1/10W			
745		B	RESISTOR		R405	1-218-703-11	METAL CHIP 3K 0.5% 1/10W			
746		B	RESISTOR		R406	1-218-690-11	METAL CHIP 820 0.5% 1/10W			
747		B	RESISTOR		R407	1-216-864-11	SHORT CHIP 0			
748		B	RESISTOR		R409	1-218-690-11	METAL CHIP 820 0.5% 1/10W			
749		B	RESISTOR		R410	1-218-690-11	METAL CHIP 820 0.5% 1/10W			
750		B	RESISTOR		R411	1-216-805-11	METAL CHIP 47 5% 1/10W			
751		B	RESISTOR		R412	1-216-809-11	METAL CHIP 100 5% 1/10W			
752		B	RESISTOR		R413	1-216-809-11	METAL CHIP 100 5% 1/10W			
753		B	RESISTOR		R414	1-216-817-11	METAL CHIP 470 5% 1/10W			
754		B	RESISTOR		R415	1-216-817-11	METAL CHIP 470 5% 1/10W			
755		B	RESISTOR		R416	1-216-817-11	METAL CHIP 470 5% 1/10W			
756		B	RESISTOR		R417	1-216-823-11	METAL CHIP 1.5K 5% 1/10W			
757		B	RESISTOR		R418	1-216-805-11	METAL CHIP 47 5% 1/10W			
758		B	RESISTOR		R419	1-218-722-11	METAL CHIP 18K 0.5% 1/10W			
759		B	RESISTOR		R420	1-216-813-11	METAL CHIP 220 5% 1/10W			
760		B	RESISTOR		R421	1-218-722-11	METAL CHIP 18K 0.5% 1/10W			
761		B	RESISTOR		R422	1-216-813-11	METAL CHIP 220 5% 1/10W			
762		B	RESISTOR		R423	1-218-744-11	METAL CHIP 150K 0.5% 1/10W			
763		B	RESISTOR		R424	1-218-707-11	METAL CHIP 4.3K 0.5% 1/10W			
764		B	RESISTOR		R425	1-218-738-11	METAL CHIP 82K 0.5% 1/10W			
765		B	RESISTOR		R426	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W			
766		B	RESISTOR		R427	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W			
767		B	RESISTOR		R428	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W			
768		B	RESISTOR		R429	1-218-692-11	METAL CHIP 1K 0.5% 1/10W			
769		B	RESISTOR		R432	1-218-660-91	METAL CHIP 47 0.5% 1/10W			
770		B	RESISTOR		R435	1-216-805-11	METAL CHIP 47 5% 1/10W			
771		B	RESISTOR		R440	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W			
772		B	RESISTOR		R441	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
773		B	RESISTOR		R442	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
774		B	RESISTOR		R443	1-216-821-11	METAL CHIP 1K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
775		B	RESISTOR		R444	1-216-821-11	METAL CHIP 1K 5% 1/10W			
776		B	RESISTOR		R445	1-216-821-11	METAL CHIP 1K 5% 1/10W			
777		B	RESISTOR		R446	1-216-847-11	METAL CHIP 150K 5% 1/10W			
778		B	RESISTOR		R447	1-216-827-11	METAL CHIP 3.3K 5% 1/10W			
779		B	RESISTOR		R448	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W			
780		B	RESISTOR		R449	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W			
781		B	RESISTOR		R450	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W			
782		B	RESISTOR		R451	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
783		B	RESISTOR		R452	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
784		B	RESISTOR		R453	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W			
785		B	RESISTOR		R454	1-216-797-11	METAL CHIP 10 5% 1/10W			
786		B	RESISTOR		R455	1-216-809-11	METAL CHIP 100 5% 1/10W			
787		B	RESISTOR		R456	1-216-843-11	METAL CHIP 68K 5% 1/10W			
788		B	RESISTOR		R457	1-216-843-11	METAL CHIP 68K 5% 1/10W			
789		B	RESISTOR		R458	1-216-843-11	METAL CHIP 68K 5% 1/10W			
790		B	RESISTOR		R459	1-216-833-11	METAL CHIP 10K 5% 1/10W			
791		B	RESISTOR		R460	1-216-830-11	METAL CHIP 5.6K 5% 1/10W			
792		B	RESISTOR		R461	1-216-864-11	SHORT CHIP 0			
793		B	RESISTOR		R462	1-218-720-11	METAL CHIP 15K 0.5% 1/10W			
794		B	RESISTOR		R604	1-216-809-11	METAL CHIP 100 5% 1/10W			
795		B	RESISTOR		R607	1-216-809-11	METAL CHIP 100 5% 1/10W			
796		B	RESISTOR		R608	1-216-833-11	METAL CHIP 10K 5% 1/10W			
797		B	RESISTOR		R609	1-216-833-11	METAL CHIP 10K 5% 1/10W			
798		B	RESISTOR		R610	1-216-801-11	METAL CHIP 22 5% 1/10W			
799		B	RESISTOR		R611	1-216-801-11	METAL CHIP 22 5% 1/10W			
800		B	RESISTOR		R612	1-216-801-11	METAL CHIP 22 5% 1/10W			
801		B	RESISTOR		R613	1-216-801-11	METAL CHIP 22 5% 1/10W			
802		B	RESISTOR		R614	1-216-801-11	METAL CHIP 22 5% 1/10W			
803		B	RESISTOR		R615	1-216-833-11	METAL CHIP 10K 5% 1/10W			
804		B	RESISTOR		R616	1-216-833-11	METAL CHIP 10K 5% 1/10W			
805		B	RESISTOR		R620	1-216-833-11	METAL CHIP 10K 5% 1/10W			
806		B	RESISTOR		R621	1-216-833-11	METAL CHIP 10K 5% 1/10W			
807		B	RESISTOR		R622	1-216-833-11	METAL CHIP 10K 5% 1/10W			
808		B	RESISTOR		R623	1-216-833-11	METAL CHIP 10K 5% 1/10W			
809		B	RESISTOR		R624	1-216-833-11	METAL CHIP 10K 5% 1/10W			
810		B	RESISTOR		R625	1-216-833-11	METAL CHIP 10K 5% 1/10W			
811		B	RESISTOR		R626	1-216-833-11	METAL CHIP 10K 5% 1/10W			
812		B	RESISTOR		R627	1-216-833-11	METAL CHIP 10K 5% 1/10W			
813		B	RESISTOR		R629	1-216-805-11	METAL CHIP 47 5% 1/10W			
814		B	RESISTOR		R630	1-216-805-11	METAL CHIP 47 5% 1/10W			
815		B	RESISTOR		R631	1-216-833-11	METAL CHIP 10K 5% 1/10W			
816		B	RESISTOR		R632	1-216-833-11	METAL CHIP 10K 5% 1/10W			
817		B	RESISTOR		R633	1-216-833-11	METAL CHIP 10K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
818		B	RESISTOR		R634	1-216-833-11	METAL CHIP 10K 5% 1/10W			
819		B	RESISTOR		R635	1-216-801-11	METAL CHIP 22 5% 1/10W			
820		B	RESISTOR		R636	1-216-801-11	METAL CHIP 22 5% 1/10W			
821		B	RESISTOR		R637	1-218-724-11	METAL CHIP 22K 0.5% 1/10W			
822		B	RESISTOR		R638	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W			
823		B	RESISTOR		R801	1-216-809-11	METAL CHIP 100 5% 1/10W			
824		B	RESISTOR		R802	1-216-805-11	METAL CHIP 47 5% 1/10W			
825		B	RESISTOR		R803	1-216-805-11	METAL CHIP 47 5% 1/10W			
826		B	RESISTOR		R804	1-216-805-11	METAL CHIP 47 5% 1/10W			
827		B	RESISTOR		R805	1-216-845-11	METAL CHIP 100K 5% 1/10W			
828		B	RESISTOR		R1001	1-216-821-11	METAL CHIP 1K 5% 1/10W			
829		B	RESISTOR		R1003	1-216-833-11	METAL CHIP 10K 5% 1/10W			
830		B	RESISTOR		R1004	1-216-809-11	METAL CHIP 100 5% 1/10W			
831		B	RESISTOR		R1005	1-216-809-11	METAL CHIP 100 5% 1/10W			
832		B	RESISTOR		R1006	1-216-864-11	SHORT CHIP 0			
833		B	RESISTOR		R1007	1-216-841-11	METAL CHIP 47K 5% 1/10W			
834		B	RESISTOR		R1008	1-216-833-11	METAL CHIP 10K 5% 1/10W			
835		B	RESISTOR		R1009	1-216-841-11	METAL CHIP 47K 5% 1/10W			
836		B	RESISTOR		R1010	1-216-841-11	METAL CHIP 47K 5% 1/10W			
837		B	RESISTOR		R1011	1-216-805-11	METAL CHIP 47 5% 1/10W			
838		B	RESISTOR		R1012	1-216-833-11	METAL CHIP 10K 5% 1/10W			
839		B	RESISTOR		R1013	1-216-833-11	METAL CHIP 10K 5% 1/10W			
840		B	RESISTOR		R1014	1-216-817-11	METAL CHIP 470 5% 1/10W			
841		B	RESISTOR		R1015	1-216-833-11	METAL CHIP 10K 5% 1/10W			
842		B	RESISTOR		R1016	1-216-809-11	METAL CHIP 100 5% 1/10W			
843		B	RESISTOR		R1017	1-216-838-11	METAL CHIP 27K 5% 1/10W			
844		B	RESISTOR		R1018	1-216-833-11	METAL CHIP 10K 5% 1/10W			
845		B	RESISTOR		R1019	1-216-809-11	METAL CHIP 100 5% 1/10W			
846		B	RESISTOR		R1020	1-218-675-11	METAL CHIP 200 0.5% 1/10W			
847		B	RESISTOR		R1021	1-218-703-11	METAL CHIP 3K 0.5% 1/10W			
848		B	RESISTOR		R1022	1-216-841-11	METAL CHIP 47K 5% 1/10W			
849		B	RESISTOR		R1023	1-216-821-11	METAL CHIP 1K 5% 1/10W			
850		B	RESISTOR		R1024	1-216-797-11	METAL CHIP 10 5% 1/10W			
851		B	RESISTOR		R1025	1-216-797-11	METAL CHIP 10 5% 1/10W			
852		B	RESISTOR		R1026	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
853		B	RESISTOR		R1027	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
854		B	RESISTOR		R1028	1-216-797-11	METAL CHIP 10 5% 1/10W			
855		B	RESISTOR		R1029	1-216-797-11	METAL CHIP 10 5% 1/10W			
856		B	RESISTOR		R1030	1-216-833-11	METAL CHIP 10K 5% 1/10W			
857		B	RESISTOR		R1031	1-216-833-11	METAL CHIP 10K 5% 1/10W			
858		B	RESISTOR		R1032	1-216-827-11	METAL CHIP 3.3K 5% 1/10W			
859		B	RESISTOR		R1033	1-216-827-11	METAL CHIP 3.3K 5% 1/10W			
860		B	RESISTOR		R1034	1-216-841-11	METAL CHIP 47K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
861		B	RESISTOR		R1035	1-216-833-11	METAL CHIP 10K 5% 1/10W			
862		B	RESISTOR		R1041	1-216-805-11	METAL CHIP 47 5% 1/10W			
863		B	RESISTOR		R1044	1-216-841-11	METAL CHIP 47K 5% 1/10W			
864		B	RESISTOR		R1045	1-216-841-11	METAL CHIP 47K 5% 1/10W			
865		B	RESISTOR		R1046	1-216-821-11	METAL CHIP 1K 5% 1/10W			
866		B	RESISTOR		R1047	1-216-841-11	METAL CHIP 47K 5% 1/10W			
867		B	RESISTOR		R1048	1-216-837-11	METAL CHIP 22K 5% 1/10W			
868		B	RESISTOR		R1049	1-216-864-11	SHORT CHIP 0			
869		B	RESISTOR		R1051	1-216-864-11	SHORT CHIP 0			
870		B	RESISTOR		R1054	1-216-864-11	SHORT CHIP 0			
871		B	RESISTOR		R1055	1-216-864-11	SHORT CHIP 0			
872		B	RESISTOR		R1057	1-216-841-11	METAL CHIP 47K 5% 1/10W			
873		B	RESISTOR		R1058	1-216-841-11	METAL CHIP 47K 5% 1/10W			
874		B	RESISTOR		R1061	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
875		B	RESISTOR		R1062	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
876		B	RESISTOR		R1063	1-216-833-11	METAL CHIP 10K 5% 1/10W			
877		B	RESISTOR		R1068	1-216-838-11	METAL CHIP 27K 5% 1/10W			
878		B	RESISTOR		R1069	1-216-833-11	METAL CHIP 10K 5% 1/10W			
879		B	RESISTOR		R1071	1-218-740-11	METAL CHIP 100K 0.5% 1/10W			
880		B	RESISTOR		R1201	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
881		B	RESISTOR		R1202	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
882		B	RESISTOR		R1203	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
883		B	RESISTOR		R1204	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
884		B	RESISTOR		R1205	1-218-679-11	METAL CHIP 300 0.5% 1/10W			
885		B	RESISTOR		R1206	1-218-679-11	METAL CHIP 300 0.5% 1/10W			
886		B	RESISTOR		R1207	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
887		B	RESISTOR		R1208	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
888		B	RESISTOR		R1209	1-216-805-11	METAL CHIP 47 5% 1/10W			
889		B	RESISTOR		R1210	1-216-805-11	METAL CHIP 47 5% 1/10W			
890		B	RESISTOR		R1211	1-216-797-11	METAL CHIP 10 5% 1/10W			
891		B	RESISTOR		R1213	1-216-805-11	METAL CHIP 47 5% 1/10W			
892		B	RESISTOR		R1214	1-216-805-11	METAL CHIP 47 5% 1/10W			
893		B	RESISTOR		R1218	1-218-740-11	METAL CHIP 100K 0.5% 1/10W			
894		B	RESISTOR		R1220	1-216-864-11	SHORT CHIP 0			
895		B	RESISTOR		R1222	1-216-864-11	SHORT CHIP 0			
896		B	NETWORK		RB201	1-234-371-21	RES, NETWORK 47X4 (1005)			
897		B	NETWORK		RB202	1-234-371-21	RES, NETWORK 47X4 (1005)			
898		B	NETWORK		RB203	1-234-371-21	RES, NETWORK 47X4 (1005)			
899		B	NETWORK		RB204	1-234-375-21	RES, NETWORK 1KX4 (1005)			
900		B	NETWORK		RB205	1-234-375-21	RES, NETWORK 1KX4 (1005)			
901		B	NETWORK		RB206	1-234-375-21	RES, NETWORK 1KX4 (1005)			
902		B	NETWORK		RB401	1-234-371-21	RES, NETWORK 47X4 (1005)			
903		B	NETWORK		RB402	1-234-371-21	RES, NETWORK 47X4 (1005)			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
904		B	NETWORK		RB403	1-234-371-21	RES, NETWORK 47X4 (1005)			
905		B	NETWORK		RB404	1-234-371-21	RES, NETWORK 47X4 (1005)			
906		B	NETWORK		RB405	1-234-371-21	RES, NETWORK 47X4 (1005)			
907		B	NETWORK		RB406	1-234-371-21	RES, NETWORK 47X4 (1005)			
908		B	NETWORK		RB407	1-234-371-21	RES, NETWORK 47X4 (1005)			
909		B	NETWORK		RB408	1-234-371-21	RES, NETWORK 47X4 (1005)			
910		B	NETWORK		RB409	1-234-371-21	RES, NETWORK 47X4 (1005)			
911		B	NETWORK		RB410	1-234-371-21	RES, NETWORK 47X4 (1005)			
912		B	NETWORK		RB411	1-234-371-21	RES, NETWORK 47X4 (1005)			
913		B	NETWORK		RB412	1-234-371-21	RES, NETWORK 47X4 (1005)			
914		B	NETWORK		RB601	1-234-371-21	RES, NETWORK 47X4 (1005)			
915		B	NETWORK		RB602	1-234-371-21	RES, NETWORK 47X4 (1005)			
916		B	NETWORK		RB603	1-234-371-21	RES, NETWORK 47X4 (1005)			
917		B	NETWORK		RB604	1-234-371-21	RES, NETWORK 47X4 (1005)			
918		B	NETWORK		RB605	1-234-371-21	RES, NETWORK 47X4 (1005)			
919		B	NETWORK		RB606	1-234-371-21	RES, NETWORK 47X4 (1005)			
920		B	NETWORK		RB607	1-234-371-21	RES, NETWORK 47X4 (1005)			
921		B	NETWORK		RB608	1-234-371-21	RES, NETWORK 47X4 (1005)			
922		B	NETWORK		RB609	1-234-371-21	RES, NETWORK 47X4 (1005)			
923		B	NETWORK		RB610	1-234-371-21	RES, NETWORK 47X4 (1005)			
924		B	NETWORK		RB611	1-234-371-21	RES, NETWORK 47X4 (1005)			
925		B	NETWORK		RB612	1-234-371-21	RES, NETWORK 47X4 (1005)			
926		B	NETWORK		RB801	1-234-371-21	RES, NETWORK 47X4 (1005)			
927		B	NETWORK		RB802	1-234-371-21	RES, NETWORK 47X4 (1005)			
928		B	NETWORK		RB803	1-234-371-21	RES, NETWORK 47X4 (1005)			
929		B	NETWORK		RB804	1-234-371-21	RES, NETWORK 47X4 (1005)			
930		B	NETWORK		RB805	1-234-371-21	RES, NETWORK 47X4 (1005)			
931		B	NETWORK		RB806	1-234-371-21	RES, NETWORK 47X4 (1005)			
932		B	NETWORK		RB807	1-234-371-21	RES, NETWORK 47X4 (1005)			
933		B	NETWORK		RB1001	1-234-369-21	RES, NETWORK 10X4 (1005)			
934		B	NETWORK		RB1002	1-234-369-21	RES, NETWORK 10X4 (1005)			
935		B	NETWORK		RB1003	1-234-369-21	RES, NETWORK 10X4 (1005)			
936		B	NETWORK		RB1004	1-234-369-21	RES, NETWORK 10X4 (1005)			
937		B	NETWORK		RB1005	1-234-371-21	RES, NETWORK 47X4 (1005)			
938		B	NETWORK		RB1006	1-234-371-21	RES, NETWORK 47X4 (1005)			
939		B	NETWORK		RB1007	1-234-371-21	RES, NETWORK 47X4 (1005)			
940		B	NETWORK		RB1008	1-234-371-21	RES, NETWORK 47X4 (1005)			
941		B	NETWORK		RB1009	1-234-371-21	RES, NETWORK 47X4 (1005)			
942		B	NETWORK		RB1010	1-234-371-21	RES, NETWORK 47X4 (1005)			
943		B	NETWORK		RB1011	1-234-371-21	RES, NETWORK 47X4 (1005)			
944		B	NETWORK		RB1012	1-234-371-21	RES, NETWORK 47X4 (1005)			
945		B	NETWORK		RB1013	1-234-371-21	RES, NETWORK 47X4 (1005)			
946		B	NETWORK		RB1014	1-234-371-21	RES, NETWORK 47X4 (1005)			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
947		B	NETWORK		RB1201	1-234-371-21	RES, NETWORK 47X4 (1005)			
948		B	NETWORK		RB1202	1-234-371-21	RES, NETWORK 47X4 (1005)			
949		B	NETWORK		RB1203	1-234-371-21	RES, NETWORK 47X4 (1005)			
950		B	NETWORK		RB1204	1-234-371-21	RES, NETWORK 47X4 (1005)			
951		B	NETWORK		RB1205	1-234-371-21	RES, NETWORK 47X4 (1005)			
952		B	NETWORK		RB1206	1-234-371-21	RES, NETWORK 47X4 (1005)			
953		B	NETWORK		RB1207	1-234-371-21	RES, NETWORK 47X4 (1005)			
954		B	NETWORK		RB1211	1-234-371-21	RES, NETWORK 47X4 (1005)			
955		B	NETWORK		RB1212	1-234-371-21	RES, NETWORK 47X4 (1005)			
956		B	THERMISTOR		TH401	1-809-350-21	THERMISTOR, NTC (2125)			
957		B	CHIP CHECKER		TP1	1-535-757-11	CHIP, CHECKER			
958		B	CHIP CHECKER		TP2	1-535-757-11	CHIP, CHECKER			
959		B	CHIP CHECKER		TP3	1-535-757-11	CHIP, CHECKER			
960		B	CHIP CHECKER		TP4	1-535-757-11	CHIP, CHECKER			
961		B	CHIP CHECKER		TP5	1-535-757-11	CHIP, CHECKER			
962		B	CHIP CHECKER		TP6	1-535-757-11	CHIP, CHECKER			
963		B	CHIP CHECKER		TP7	1-535-757-11	CHIP, CHECKER			
964		B	CHIP CHECKER		TP8	1-535-757-11	CHIP, CHECKER			
965		B	CHIP CHECKER		TP9	1-535-757-11	CHIP, CHECKER			
966		B	CHIP CHECKER		TP201	1-535-757-11	CHIP, CHECKER			
967		B	CHIP CHECKER		TP202	1-535-757-11	CHIP, CHECKER			
968		B	CHIP CHECKER		TP401	1-535-757-11	CHIP, CHECKER			
969		B	CHIP CHECKER		TP402	1-535-757-11	CHIP, CHECKER			
970		B	CHIP CHECKER		TP403	1-535-757-11	CHIP, CHECKER			
971		B	CHIP CHECKER		TP608	1-535-757-11	CHIP, CHECKER			
972		B	CHIP CHECKER		TP609	1-535-757-11	CHIP, CHECKER			
973		B	CHIP CHECKER		TP611	1-535-757-11	CHIP, CHECKER			
974		B	CHIP CHECKER		TP612	1-535-757-11	CHIP, CHECKER			
975		B	CHIP CHECKER		TP613	1-535-757-11	CHIP, CHECKER			
976		B	CHIP CHECKER		TP614	1-535-757-11	CHIP, CHECKER			
977		B	CHIP CHECKER		TP615	1-535-757-11	CHIP, CHECKER			
978		B	CHIP CHECKER		TP801	1-535-757-11	CHIP, CHECKER			
979		B	CHIP CHECKER		TP802	1-535-757-11	CHIP, CHECKER			
980		B	CHIP CHECKER		TP803	1-535-757-11	CHIP, CHECKER			
981		B	CHIP CHECKER		TP804	1-535-757-11	CHIP, CHECKER			
982		B	CHIP CHECKER		TP805	1-535-757-11	CHIP, CHECKER			
983		B	CHIP CHECKER		TP1201	1-535-757-11	CHIP, CHECKER			
984		B	CHIP CHECKER		TP1202	1-535-757-11	CHIP, CHECKER			
985		B	CHIP CHECKER		TP1203	1-535-757-11	CHIP, CHECKER			
986		B	CHIP CHECKER		TP1204	1-535-757-11	CHIP, CHECKER			
987		B	CHIP CHECKER		TP1205	1-535-757-11	CHIP, CHECKER			
988		B	CRYSTAL		X1	1-781-914-21	VIBRATOR, CRYSTAL			
989		B	CRYSTAL		X2	1-760-502-11	VIBRATOR, CRYSTAL			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
990		B	CRYSTAL		X601	1-795-283-21	OSCILLATOR, CRYSTAL			
991		B	CRYSTAL		X801	1-795-011-21	OSCILLATOR, CRYSTAL			
992		B	CRYSTAL		X802	1-767-365-21	OSCILLATOR, CRYSTAL			
993		B	CRYSTAL		X1001	1-579-886-11	VIBRATOR, CRYSTAL			
994		B	CRYSTAL		X1002	1-781-659-21	VIBRATOR, CRYSTAL			
995		UD	CAPACITOR		C7001	1-126-395-11	ELECT CHIP 22UF 20.00% 16V			
996		UD	CAPACITOR		C7002	1-162-917-11	CERAMIC CHIP 15PF 5.00% 50V			
997		UD	CAPACITOR		C7004	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
998		UD	CAPACITOR		C7005	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
999		UD	CAPACITOR		C7006	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1000		UD	CAPACITOR		C7007	1-162-917-11	CERAMIC CHIP 15PF 5.00% 50V			
1001		UD	CAPACITOR		C7008	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1002		UD	CAPACITOR		C7010	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1003		UD	CAPACITOR		C7011	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1004		UD	CAPACITOR		C7012	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1005		UD	CAPACITOR		C7013	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1006		UD	CAPACITOR		C7014	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1007		UD	CAPACITOR		C7015	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1008		UD	CAPACITOR		C7016	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1009		UD	CAPACITOR		C7017	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1010		UD	CAPACITOR		C7018	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V			
1011		UD	CAPACITOR		C7019	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V			
1012		UD	CAPACITOR		C7020	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V			
1013		UD	CAPACITOR		C7021	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1014		UD	CAPACITOR		C7022	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V			
1015		UD	CAPACITOR		C7023	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
1016		UD	CAPACITOR		C7024	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1017		UD	CAPACITOR		C7025	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1018		UD	CAPACITOR		C7026	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1019		UD	CAPACITOR		C7027	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1020		UD	CAPACITOR		C7028	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1021		UD	CAPACITOR		C7029	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1022		UD	CAPACITOR		C7030	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
1023		UD	CAPACITOR		C7031	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
1024		UD	CAPACITOR		C7032	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
1025		UD	CAPACITOR		C7033	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1026		UD	CAPACITOR		C7034	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1027		UD	CAPACITOR		C7035	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1028		UD	CAPACITOR		C7036	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1029		UD	CAPACITOR		C7037	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1030		UD	CAPACITOR		C7038	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1031		UD	CAPACITOR		C7039	1-126-395-11	ELECT CHIP 22UF 20.00% 16V			
1032		UD	CAPACITOR		C7040	1-162-921-11	CERAMIC CHIP 33PF 5.00% 50V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1033		UD	CAPACITOR		C7041	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1034		UD	CAPACITOR		C7042	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1035		UD	CAPACITOR		C7043	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1036		UD	CAPACITOR		C7044	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1037		UD	CAPACITOR		C7045	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1038		UD	CAPACITOR		C7046	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1039		UD	CAPACITOR		C7047	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1040		UD	CAPACITOR		C7048	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1041		UD	CAPACITOR		C7049	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1042		UD	CAPACITOR		C7050	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1043		UD	CAPACITOR		C7051	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1044		UD	CAPACITOR		C7052	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1045		UD	CAPACITOR		C7053	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1046		UD	CAPACITOR		C7054	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1047		UD	CAPACITOR		C7056	1-126-395-11	ELECT CHIP 22UF 20.00% 16V			
1048		UD	CAPACITOR		C7057	1-162-921-11	CERAMIC CHIP 33PF 5.00% 50V			
1049		UD	CAPACITOR		C7058	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1050		UD	CAPACITOR		C7059	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1051		UD	CAPACITOR		C7060	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1052		UD	CAPACITOR		C7061	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1053		UD	CAPACITOR		C7062	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1054		UD	CAPACITOR		C7064	1-126-395-11	ELECT CHIP 22UF 20.00% 16V			
1055		UD	CAPACITOR		C7065	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1056		UD	CAPACITOR		C7066	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1057		UD	CAPACITOR		C7067	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1058		UD	CAPACITOR		C7068	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1059		UD	CAPACITOR		C7069	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1060		UD	CAPACITOR		C7070	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1061		UD	CAPACITOR		C7071	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1062		UD	CAPACITOR		C7072	1-125-777-11	CERAMIC CHIP 0.1UF 10.00% 10V			
1063		UD	CAPACITOR		C7073	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V			
1064		UD	CAPACITOR		C7074	1-125-837-91	CERAMIC CHIP 1UF 10% 6.3V			
1065		UD	CAPACITOR		C7075	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
1066		UD	CAPACITOR		C7076	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
1067		UD	CAPACITOR		C7077	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
1068		UD	CAPACITOR		C7078	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1069		UD	CAPACITOR		C7079	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1070		UD	CAPACITOR		C7080	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1071		UD	CAPACITOR		C7081	1-127-760-11	CERAMIC CHIP 4.7UF 10% 6.3V			
1072		UD	CAPACITOR		C7082	1-137-710-11	CERAMIC CHIP 10UF 20% 6.3V			
1073		UD	CAPACITOR		C7083	1-164-939-11	CERAMIC CHIP 0.0022UF 10.00% 50V			
1074		UD	CAPACITOR		C7084	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1075		UD	CONNECTOR		CN7001	1-816-228-11	CONNECTOR, DVI			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1076		UD	CONNECTOR	*	CN7001	1-816-228-21	CONNECTOR, DIV			
1077		UD	CONNECTOR		CN7002	1-764-099-11	PIN, CONNECTOR (PC BOARD) 14P			
1078		UD	CONNECTOR	*	CN7004	1-764-089-11	PIN, CONNECTOR (PC BOARD) 4P			
1079		UD	DIODE		D7001	8-719-914-43	DIODE DAN202K			
1080		UD	DIODE		D7002	8-719-069-55	DIODE UDZSTE-175.6B			
1081		UD	DIODE		D7003	8-719-069-55	DIODE UDZSTE-175.6B			
1082		UD	DIODE		D7004	8-719-069-55	DIODE UDZSTE-175.6B			
1083		UD	DIODE		D7006	8-719-069-55	DIODE UDZSTE-175.6B			
1084		UD	FERRITE		FB7001	1-414-760-21	FERRITE 0UH			
1085		UD	FERRITE		FB7002	1-414-760-21	FERRITE 0UH			
1086		UD	FERRITE		FB7003	1-414-760-21	FERRITE 0UH			
1087		UD	FERRITE		FB7004	1-414-760-21	FERRITE 0UH			
1088		UD	FERRITE		FB7005	1-469-836-21	FERRITE 0UH			
1089		UD	FERRITE		FB7006	1-469-836-21	FERRITE 0UH			
1090		UD	FILTER		FL7001	1-400-087-21	FILTER, EMI REMOVAL (SMD)			
1091		UD	FILTER		FL7002	1-234-560-21	FILTER, LOW PASS			
1092		UD	FILTER		FL7003	1-234-559-21	FILTER, LOW PASS			
1093		UD	FILTER		FL7004	1-234-559-21	FILTER, LOW PASS			
1094		UD	IC		IC7001	8-759-640-39	IC BR24C02F-WE2			
1095		UD	IC		IC7002	8-749-015-18	IC PQ07VZ012ZP			
1096		UD	IC		IC7003	8-749-015-18	IC PQ07VZ012ZP			
1097		UD	IC		IC7004	6-702-080-01	IC GM7030-H			
1098		UD	IC		IC7006	8-759-641-86	IC BR24C16F-E2			
1099		UD	IC		IC7007	6-702-170-01	IC PACDN006S			
1100		UD	IC		IC7008	6-702-170-01	IC PACDN006S			
1101		UD	IC		IC7009	6-702-170-01	IC PACDN006S			
1102		UD	IC		IC7010	8-759-584-88	IC BA7078AF-E2			
1103		UD	COIL		L7001	1-412-052-21	INDUCTOR 1UH			
1104		UD	COIL		L7002	1-412-058-11	INDUCTOR 10UH			
1105		UD	COIL		L7003	1-469-526-91	INDUCTOR 22UH			
1106		UD	TRANSISTOR		Q7001	8-729-907-00	TRANSISTOR DTC114EU			
1107		UD	TRANSISTOR		Q7002	8-729-907-00	TRANSISTOR DTC114EU			
1108		UD	RESISTOR		R7003	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1109		UD	RESISTOR		R7004	1-218-852-11	METAL CHIP 1.6K 0.5% 1/10W			
1110		UD	RESISTOR		R7007	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1111		UD	RESISTOR		R7011	1-216-864-11	SHORT CHIP 0			
1112		UD	RESISTOR		R7012	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1113		UD	RESISTOR		R7013	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1114		UD	RESISTOR		R7014	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1115		UD	RESISTOR		R7015	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1116		UD	RESISTOR		R7016	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1117		UD	RESISTOR		R7020	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1118		UD	RESISTOR		R7021	1-216-833-11	METAL CHIP 10K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1119		UD	RESISTOR		R7022	1-216-864-11	SHORT CHIP 0			
1120		UD	RESISTOR		R7023	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1121		UD	RESISTOR		R7024	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1122		UD	RESISTOR		R7025	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1123		UD	RESISTOR		R7026	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1124		UD	RESISTOR		R7027	1-216-864-11	SHORT CHIP 0			
1125		UD	RESISTOR		R7028	1-216-864-11	SHORT CHIP 0			
1126		UD	RESISTOR		R7029	1-218-692-11	METAL CHIP 1K 0.5% 1/10W			
1127		UD	RESISTOR		R7030	1-414-760-21	FERRITE 0UH			
1128		UD	RESISTOR		R7031	1-216-864-11	SHORT CHIP 0			
1129		UD	RESISTOR		R7032	1-218-676-11	METAL CHIP 220 0.5% 1/10W			
1130		UD	RESISTOR		R7033	1-216-864-11	SHORT CHIP 0			
1131		UD	RESISTOR		R7034	1-218-676-11	METAL CHIP 220 0.5% 1/10W			
1132		UD	RESISTOR		R7035	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1133		UD	RESISTOR		R7036	1-218-704-11	METAL CHIP 3.3K 0.5% 1/10W			
1134		UD	RESISTOR		R7037	1-218-676-11	METAL CHIP 220 0.5% 1/10W			
1135		UD	RESISTOR		R7041	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1136		UD	RESISTOR		R7043	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1137		UD	RESISTOR		R7044	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1138		UD	RESISTOR		R7045	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1139		UD	RESISTOR		R7047	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1140		UD	RESISTOR		R7050	1-216-864-11	SHORT CHIP 0			
1141		UD	RESISTOR		R7051	1-216-864-11	SHORT CHIP 0			
1142		UD	RESISTOR		R7052	1-216-809-11	METAL CHIP 100 5% 1/10W			
1143		UD	RESISTOR		R7053	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1144		UD	RESISTOR		R7054	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1145		UD	RESISTOR		R7056	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1146		UD	RESISTOR		R7057	1-216-864-11	SHORT CHIP 0			
1147		UD	RESISTOR		R7058	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1148		UD	RESISTOR		R7059	1-216-864-11	SHORT CHIP 0			
1149		UD	RESISTOR		R7060	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1150		UD	RESISTOR		R7062	1-216-864-11	SHORT CHIP 0			
1151		UD	RESISTOR		R7063	1-216-809-11	METAL CHIP 100 5% 1/10W			
1152		UD	RESISTOR		R7064	1-216-809-11	METAL CHIP 100 5% 1/10W			
1153		UD	RESISTOR		R7065	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1154		UD	RESISTOR		R7066	1-218-694-11	METAL CHIP 1.2K 0.5% 1/10W			
1155		UD	RESISTOR		R7067	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1156		UD	RESISTOR		R7068	1-216-801-11	METAL CHIP 22 5% 1/10W			
1157		UD	RESISTOR		R7069	1-216-801-11	METAL CHIP 22 5% 1/10W			
1158		UD	RESISTOR		R7071	1-216-803-11	METAL CHIP 33 5% 1/10W			
1159		UD	RESISTOR		R7072	1-216-803-11	METAL CHIP 33 5% 1/10W			
1160		UD	RESISTOR		R7075	1-218-678-11	METAL CHIP 270 0.5% 1/10W			
1161		UD	RESISTOR		R7080	1-218-710-11	METAL CHIP 5.6K 0.5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1162		UD	RESISTOR		R7087	1-218-686-11	METAL CHIP 560 0.5% 1/10W			
1163		UD	RESISTOR		R7096	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1164		UD	RESISTOR		R7097	1-216-809-11	METAL CHIP 100 5% 1/10W			
1165		UD	RESISTOR		R7098	1-216-809-11	METAL CHIP 100 5% 1/10W			
1166		UD	RESISTOR		R7099	1-216-809-11	METAL CHIP 100 5% 1/10W			
1167		UD	RESISTOR		R7101	1-216-864-11	SHORT CHIP 0			
1168		UD	RESISTOR		R7103	1-218-990-11	SHORT CHIP 0			
1169		UD	RESISTOR		R7106	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1170		UD	RESISTOR		R7108	1-216-805-11	METAL CHIP 47 5% 1/10W			
1171		UD	RESISTOR		R7109	1-216-805-11	METAL CHIP 47 5% 1/10W			
1172		UD	RESISTOR		R7111	1-216-864-11	SHORT CHIP 0			
1173		UD	RESISTOR		R7112	1-216-864-11	SHORT CHIP 0			
1174		UD	RESISTOR		R7113	1-216-864-11	SHORT CHIP 0			
1175		UD	RESISTOR		R7114	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W			
1176		UD	RESISTOR		R7115	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W			
1177		UD	RESISTOR		R7116	1-218-700-11	METAL CHIP 2.2K 0.5% 1/10W			
1178		UD	RESISTOR		R7117	1-218-668-11	METAL CHIP 100 0.5% 1/10W			
1179		UD	RESISTOR		R7119	1-218-668-11	METAL CHIP 100 0.5% 1/10W			
1180		UD	RESISTOR		R7121	1-216-864-11	SHORT CHIP 0			
1181		UD	RESISTOR		R7123	1-218-710-11	METAL CHIP 5.6K 0.5% 1/10W			
1182		UD	RESISTOR		R7124	1-218-686-11	METAL CHIP 560 0.5% 1/10W			
1183		UD	RESISTOR		R7126	1-216-864-11	SHORT CHIP 0			
1184		UD	RESISTOR		R7127	1-218-960-11	RES-CHIP 3.9K 5% 1/16W			
1185		UD	RESISTOR		R7128	1-218-941-81	RES-CHIP 100 5% 1/16W			
1186		UD	RESISTOR		R7129	1-218-941-81	RES-CHIP 100 5% 1/16W			
1187		UD	CRYSTAL		X7001	1-795-568-21	VIBRATOR, CRYSTAL			
1188		UD	CRYSTAL		X7002	1-795-567-21	VIBRATOR, CRYSTAL			
1189		Q	CAPACITOR		C2000	1-162-587-11	CERAMIC CHIP 0.039UF 10.00% 25V			
1190		Q	CAPACITOR		C2001	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1191		Q	CAPACITOR		C2002	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1192		Q	CAPACITOR		C2003	1-162-587-11	CERAMIC CHIP 0.039UF 10.00% 25V			
1193		Q	CAPACITOR		C2004	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1194		Q	CAPACITOR		C2005	1-162-587-11	CERAMIC CHIP 0.039UF 10.00% 25V			
1195		Q	CAPACITOR		C2006	1-126-602-11	ELECT CHIP 3.3UF 20.00% 50V			
1196		Q	CAPACITOR		C2007	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1197		Q	CAPACITOR		C2008	1-163-135-00	CERAMIC CHIP 560PF 5.00% 50V			
1198		Q	CAPACITOR		C2010	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1199		Q	CAPACITOR		C2011	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1200		Q	CAPACITOR		C2012	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1201		Q	CAPACITOR		C2013	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1202		Q	CAPACITOR		C2014	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1203		Q	CAPACITOR		C2015	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1204		Q	CAPACITOR		C2016	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1205		Q	CAPACITOR		C2017	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1206		Q	CAPACITOR		C2018	1-110-501-11	CERAMIC CHIP 0.33UF 10.00% 16V			
1207		Q	CAPACITOR		C2019	1-110-501-11	CERAMIC CHIP 0.33UF 10.00% 16V			
1208		Q	CAPACITOR		C2020	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V			
1209		Q	CAPACITOR		C2021	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V			
1210		Q	CAPACITOR		C2022	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V			
1211		Q	CAPACITOR		C2023	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V			
1212		Q	CAPACITOR		C2024	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
1213		Q	CAPACITOR		C2025	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
1214		Q	CAPACITOR		C2026	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
1215		Q	CAPACITOR		C2027	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
1216		Q	CAPACITOR		C2028	1-107-884-11	ELECT 1000UF 20.00% 16V			
1217		Q	CAPACITOR		C2029	1-107-884-11	ELECT 1000UF 20.00% 16V			
1218		Q	CAPACITOR		C2030	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1219		Q	CAPACITOR		C2031	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1220		Q	CAPACITOR		C2032	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1221		Q	CAPACITOR		C2033	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1222		Q	CAPACITOR		C2034	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1223		Q	CAPACITOR		C2035	1-107-884-11	ELECT 1000UF 20.00% 16V			
1224		Q	CAPACITOR		C2036	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1225		Q	CAPACITOR		C2037	1-107-884-11	ELECT 1000UF 20.00% 16V			
1226		Q	CAPACITOR		C2038	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1227		Q	CAPACITOR		C2039	1-163-135-00	CERAMIC CHIP 560PF 5.00% 50V			
1228		Q	CAPACITOR		C2040	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1229		Q	CAPACITOR		C2041	1-163-135-00	CERAMIC CHIP 560PF 5.00% 50V			
1230		Q	CAPACITOR		C2043	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V			
1231		Q	CAPACITOR		C2044	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V			
1232		Q	CAPACITOR		C2049	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V			
1233		Q	CAPACITOR		C2051	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V			
1234		Q	CAPACITOR		C2052	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1235		Q	CAPACITOR		C2057	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1236		Q	CAPACITOR		C2058	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1237		Q	CAPACITOR		C2059	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1238		Q	CAPACITOR		C2060	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V			
1239		Q	CAPACITOR		C2061	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V			
1240		Q	CAPACITOR		C2062	1-162-968-11	CERAMIC CHIP 0.0047UF 10.00% 50V			
1241		Q	CAPACITOR		C2063	1-115-467-11	CERAMIC CHIP 0.22UF 10.00% 10V			
1242		Q	CAPACITOR		C2064	1-115-467-11	CERAMIC CHIP 0.22UF 10.00% 10V			
1243		Q	CAPACITOR		C2065	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1244		Q	CAPACITOR		C2066	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1245		Q	CAPACITOR		C2067	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1246		Q	CAPACITOR		C2068	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1247		Q	CAPACITOR		C2070	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1248		Q	CAPACITOR		C2071	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
1249		Q	CAPACITOR		C2072	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
1250		Q	CAPACITOR		C2073	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
1251		Q	CAPACITOR		C2074	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
1252		Q	CAPACITOR		C2075	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V			
1253		Q	CAPACITOR		C2076	1-124-778-00	ELECT CHIP 22UF 20.00% 6.3V			
1254		Q	CAPACITOR		C3000	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1255		Q	CAPACITOR		C3001	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1256		Q	CAPACITOR		C3002	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1257		Q	CAPACITOR		C3003	1-165-320-11	CERAMIC CHIP 0.47UF 10.00% 16V			
1258		Q	CAPACITOR		C3004	1-117-370-11	CERAMIC CHIP 10UF 10V			
1259		Q	CAPACITOR		C3006	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
1260		Q	CAPACITOR		C3007	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
1261		Q	CAPACITOR		C3008	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
1262		Q	CAPACITOR		C3011	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
1263		Q	CAPACITOR		C3012	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
1264		Q	CAPACITOR		C3013	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
1265		Q	CAPACITOR		C3014	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1266		Q	CAPACITOR		C3015	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1267		Q	CAPACITOR		C3016	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1268		Q	CAPACITOR		C3021	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1269		Q	CAPACITOR		C3025	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1270		Q	CAPACITOR		C3026	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1271		Q	CAPACITOR		C3028	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1272		Q	CAPACITOR		C3030	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1273		Q	CAPACITOR		C3032	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1274		Q	CAPACITOR		C3033	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1275		Q	CAPACITOR		C3035	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1276		Q	CAPACITOR		C3036	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1277		Q	CAPACITOR		C3041	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1278		Q	CAPACITOR		C3042	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1279		Q	CAPACITOR		C3043	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1280		Q	CAPACITOR		C3044	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1281		Q	CAPACITOR		C3045	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1282		Q	CAPACITOR		C3046	1-126-395-11	ELECT CHIP 22UF 20.00% 16V			
1283		Q	CAPACITOR		C3047	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1284		Q	CAPACITOR		C3048	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1285		Q	CAPACITOR		C3049	1-126-395-11	ELECT CHIP 22UF 20.00% 16V			
1286		Q	CAPACITOR		C3050	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1287		Q	CAPACITOR		C3051	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1288		Q	CAPACITOR		C3052	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1289		Q	CAPACITOR		C3054	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1290		Q	CAPACITOR		C3055	1-128-499-11	ELECT 220UF 20.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1291		Q	CAPACITOR		C3069	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1292		Q	CAPACITOR		C3070	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1293		Q	CAPACITOR		C3075	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
1294		Q	CAPACITOR		C3076	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1295		Q	CAPACITOR		C3077	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
1296		Q	CAPACITOR		C3078	1-126-206-11	ELECT CHIP 100UF 20.00% 6.3V			
1297		Q	CAPACITOR		C3079	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1298		Q	CAPACITOR		C3080	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1299		Q	CAPACITOR		C3081	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V			
1300		Q	CAPACITOR		C3082	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V			
1301		Q	CAPACITOR		C3083	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V			
1302		Q	CAPACITOR		C3084	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V			
1303		Q	CAPACITOR		C3085	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V			
1304		Q	CAPACITOR		C3086	1-162-923-11	CERAMIC CHIP 47PF 5.00% 50V			
1305		Q	CAPACITOR		C3087	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1306		Q	CAPACITOR		C3088	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1307		Q	CAPACITOR		C3089	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1308		Q	CAPACITOR		C3090	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1309		Q	CAPACITOR		C3091	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1310		Q	CAPACITOR		C3094	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1311		Q	CAPACITOR		C3095	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1312		Q	CAPACITOR		C3096	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1313		Q	CAPACITOR		C3097	1-126-205-11	ELECT CHIP 47UF 20.00% 6.3V			
1314		Q	CAPACITOR		C3100	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
1315		Q	CAPACITOR		C3101	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V			
1316		Q	CAPACITOR		C3106	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1317		Q	CAPACITOR		C3107	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1318		Q	CAPACITOR		C3108	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1319		Q	CAPACITOR		C3109	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1320		Q	CAPACITOR		C3110	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1321		Q	CAPACITOR		C3111	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1322		Q	CAPACITOR		C3112	1-126-204-11	ELECT CHIP 47UF 20.00% 16V			
1323		Q	CAPACITOR		C3113	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1324		Q	CAPACITOR		C3114	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1325		Q	CAPACITOR		C3115	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1326		Q	CAPACITOR		C3116	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1327		Q	CAPACITOR		C3117	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1328		Q	CAPACITOR		C3118	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1329		Q	CAPACITOR		C3119	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1330		Q	CAPACITOR		C3120	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1331		Q	CAPACITOR		C3121	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1332		Q	CAPACITOR		C3122	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1333		Q	CAPACITOR		C3123	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1334		Q	CAPACITOR		C3124	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1335		Q	CAPACITOR		C3125	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1336		Q	CAPACITOR		C3126	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1337		Q	CAPACITOR		C3127	1-126-193-11	ELECT CHIP 1UF 20.00% 50V			
1338		Q	CAPACITOR		C3128	1-126-193-11	ELECT CHIP 1UF 20.00% 50V			
1339		Q	CAPACITOR		C3129	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V			
1340		Q	CAPACITOR		C3130	1-137-980-91	CERAMIC CHIP 0.47UF 10% 50V			
1341		Q	CAPACITOR		C3131	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1342		Q	CAPACITOR		C3132	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1343		Q	CAPACITOR		C3133	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1344		Q	CAPACITOR		C3134	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1345		Q	CAPACITOR		C3135	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1346		Q	CAPACITOR		C3136	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1347		Q	CAPACITOR		C3137	1-126-395-11	ELECT CHIP 22UF 20.00% 16V			
1348		Q	CAPACITOR		C3138	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1349		Q	CAPACITOR		C3141	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1350		Q	CAPACITOR		C3142	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1351		Q	CAPACITOR		C3143	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1352		Q	CAPACITOR		C3146	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1353		Q	CAPACITOR		C3147	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1354		Q	CAPACITOR		C3148	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1355		Q	CAPACITOR		C3149	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1356		Q	CAPACITOR		C3150	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1357		Q	CAPACITOR		C3151	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V			
1358		Q	CAPACITOR		C3152	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V			
1359		Q	CAPACITOR		C3153	1-165-176-11	CERAMIC CHIP 0.047UF 10.00% 16V			
1360		Q	CAPACITOR		C3154	1-124-779-00	ELECT CHIP 10UF 20.00% 16V			
1361		Q	CAPACITOR		C3155	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1362		Q	CAPACITOR		C3156	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1363		Q	CAPACITOR		C3157	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1364		Q	CAPACITOR		C3158	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1365		Q	CAPACITOR		C3159	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1366		Q	CAPACITOR		C3160	1-126-603-11	ELECT CHIP 4.7UF 20.00% 35V			
1367		Q	CAPACITOR		C3161	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1368		Q	CAPACITOR		C3162	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1369		Q	CAPACITOR		C3163	1-127-692-11	CERAMIC CHIP 10UF 10% 16V			
1370		Q	CAPACITOR		C3164	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1371		Q	CAPACITOR		C3165	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1372		Q	CAPACITOR		C3168	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1373		Q	CAPACITOR		C3169	1-127-692-11	CERAMIC CHIP 10UF 10% 16V			
1374		Q	CAPACITOR		C3170	1-127-692-11	CERAMIC CHIP 10UF 10% 16V			
1375		Q	CAPACITOR		C3172	1-127-573-11	CERAMIC CHIP 1UF 10% 16V			
1376		Q	CAPACITOR		C3201	1-165-320-11	CERAMIC CHIP 0.47UF 10.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1377		Q	CAPACITOR		C3202	1-117-370-11	CERAMIC CHIP 10UF 10V			
1378		Q	CONNECTOR		CN3001	1-764-096-21	PIN, CONNECTOR (PC BOARD) 11P			
1379		Q	CONNECTOR	*	CN3002	1-764-095-11	PIN, CONNECTOR (PC BOARD) 10P			
1380		Q	CONNECTOR		CN3003	1-750-345-11	CONNECTOR, FFC/EPC (ZIF) 30P			
1381		Q	CONNECTOR	*	CN3004	1-764-091-11	PIN, CONNECTOR (PC BOARD) 6P			
1382		Q	CONNECTOR	*	CN3005	1-564-523-11	PLUG, CONNECTOR 8P			
1383		Q	CONNECTOR		CN3006	1-764-099-11	PIN, CONNECTOR (PC BOARD) 14P			
1384		Q	CONNECTOR		CN3007	1-506-483-21	PIN, CONNECTOR 4P			
1385		Q	CONNECTOR		CN3008	1-774-771-11	CONNECTOR, FFC/FPC 14P			
1386		Q	CONNECTOR	*	CN3009	1-764-097-11	PIN, CONNECTOR (PC BOARD) 12P			
1387		Q	CONNECTOR	*	CN3010	1-564-719-11	PIN, CONNECTOR (SMALL TYPE) 3P			
1388		Q	CONNECTOR		CN3011	1-764-094-21	PIN, CONNECTOR (PC BOARD) 9P			
1389		Q	CONNECTOR	*	CN3012	1-764-089-11	PIN, CONNECTOR (PC BOARD) 4P			
1390		Q	DIODE		D3002	8-719-977-28	DIODE DTZ10B			
1391		Q	DIODE		D3005	8-719-421-59	DIODE MA3130WA-TX			
1392		Q	DIODE		D3007	8-719-800-76	DIODE 1SS226			
1393		Q	DIODE		D3008	8-719-800-76	DIODE 1SS226			
1394		Q	DIODE		D3009	8-719-800-76	DIODE 1SS226			
1395		Q	DIODE		D3012	8-719-069-55	DIODE UDZSTE-175.6B			
1396		Q	DIODE		D3015	8-719-977-28	DIODE DTZ10B			
1397		Q	DIODE		D3016	8-719-977-28	DIODE DTZ10B			
1398		Q	DIODE		D3017	8-719-977-28	DIODE DTZ10B			
1399		Q	DIODE		D3019	8-719-977-28	DIODE DTZ10B			
1400		Q	DIODE		D3020	8-719-977-28	DIODE DTZ10B			
1401		Q	DIODE		D3021	8-719-977-28	DIODE DTZ10B			
1402		Q	DIODE		D3022	8-719-977-28	DIODE DTZ10B			
1403		Q	DIODE		D3023	8-719-069-55	DIODE UDZSTE-175.6B			
1404		Q	DIODE		D3024	8-719-977-28	DIODE DTZ10B			
1405		Q	DIODE		D3025	8-719-977-28	DIODE DTZ10B			
1406		Q	DIODE		D3026	8-719-041-97	DIODE MA113-(TX)			
1407		Q	DIODE		D3034	8-719-977-28	DIODE DTZ10B			
1408		Q	DIODE		D3035	8-719-977-28	DIODE DTZ10B			
1409		Q	DIODE		D3039	8-719-059-22	DIODE NSQ03A06-TE16L			
1410		Q	DIODE		D3040	8-719-036-94	DIODE RD5.6SB-T1			
1411		Q	DIODE		D3041	8-719-977-28	DIODE DTZ10B			
1412		Q	DIODE		D3042	8-719-977-28	DIODE DTZ10B			
1413		Q	DIODE		D3043	8-719-977-28	DIODE DTZ10B			
1414		Q	DIODE		D3044	8-719-977-28	DIODE DTZ10B			
1415		Q	DIODE		D3045	8-719-977-28	DIODE DTZ10B			
1416		Q	DIODE		D3046	8-719-977-28	DIODE DTZ10B			
1417		Q	DIODE		D3047	8-719-977-28	DIODE DTZ10B			
1418		Q	DIODE		D3048	8-719-977-28	DIODE DTZ10B			
1419		Q	DIODE		D3049	8-719-977-28	DIODE DTZ10B			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1420		Q	DIODE		D3050	8-719-977-28	DIODE DTZ10B			
1421		Q	DIODE		D3051	8-719-977-28	DIODE DTZ10B			
1422		Q	DIODE		D3052	8-719-977-28	DIODE DTZ10B			
1423		Q	DIODE		D3053	8-719-977-28	DIODE DTZ10B			
1424		Q	DIODE		D3054	8-719-977-28	DIODE DTZ10B			
1425		Q	DIODE		D3055	8-719-041-97	DIODE MA113-(TX)			
1426		Q	DIODE		D3056	8-719-404-50	DIODE MA111-TX			
1427		Q	DIODE		D3057	8-719-991-00	DIODE DAP222			
1428		Q	DIODE		D3058	8-719-977-28	DIODE DTZ10B			
1429		Q	DIODE		D3059	8-719-977-28	DIODE DTZ10B			
1430		Q	DIODE		D3060	8-719-977-28	DIODE DTZ10B			
1431		Q	DIODE		D3061	8-719-977-28	DIODE DTZ10B			
1432		Q	DIODE		D3062	8-719-977-28	DIODE DTZ10B			
1433		Q	DIODE		D3063	8-719-977-28	DIODE DTZ10B			
1434		Q	DIODE		D3064	8-719-991-00	DIODE DAP222			
1435		Q	DIODE		D3065	8-719-041-97	DIODE MA113-(TX)			
1436		Q	DIODE		D3066	8-719-404-50	DIODE MA111-TX			
1437		Q	DIODE		D3067	8-719-977-28	DIODE DTZ10B			
1438		Q	DIODE		D3201	8-719-069-55	DIODE UDZSTE-175.6B			
1439		Q	DIODE		D3202	8-719-069-55	DIODE UDZSTE-175.6B			
1440		Q	FERRITE		FB3000	1-414-234-22	FERRITE 0UH			
1441		Q	FERRITE		FB3001	1-414-234-22	FERRITE 0UH			
1442		Q	FERRITE		FB3004	1-414-234-22	FERRITE 0UH			
1443		Q	FERRITE		FB3005	1-414-234-22	FERRITE 0UH			
1444		Q	FERRITE		FB3006	1-410-396-41	FERRITE 0.45UH			
1445		Q	IC		IC2000	8-759-172-60	IC TA8776N			
1446		Q	IC		IC2001	6-700-481-01	IC TDA7480			
1447		Q	IC		IC2002	6-700-481-01	IC TDA7480			
1448		Q	IC		IC2003	8-759-689-71	IC NJM2188M-TE2			
1449		Q	IC		IC3001	8-759-541-25	IC M52758FP			
1450		Q	IC		IC3006	8-759-351-01	IC TEA6422DT			
1451		Q	IC		IC3007	8-759-595-97	IC SN74LV4053ANSR			
1452		Q	IC		IC3008	8-759-335-28	IC TA78M09F(TE16L)			
1453		Q	IC		IC3010	8-759-576-76	IC TDA2822D013TR			
1454		Q	IC		IC3011	8-759-541-25	IC M52758FP			
1455		Q	IC		IC3012	8-759-700-07	IC NJM2903M			
1456		Q	IC		IC3013	8-759-460-81	IC BA12FP-E2			
1457		Q	IC		IC3014	8-752-081-33	IC CXA2089Q			
1458		Q	IC		IC3015	8-759-331-71	IC NJM4558E(TE2)			
1459		Q	IC		IC3016	8-759-331-71	IC NJM4558E(TE2)			
1460		Q	IC		IC3017	8-759-082-59	IC TC7W32FU			
1461		Q	SOCKET		J3000	1-537-506-11	TERMINAL BLOCK, (S) 8P			
1462		Q	SOCKET		J3001	1-816-393-11	JACK BLOCK, PIN 3P			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1463		Q	SOCKET		J3002	1-565-838-11	JACK BLOCK, PIN 2P			
1464		Q	SOCKET		J3004	1-565-838-11	JACK BLOCK, PIN 2P			
1465		Q	SOCKET		J3006	1-764-143-11	JACK			
1466		Q	SOCKET		J3007	1-764-143-11	JACK			
1467		Q	SOCKET		J3008	1-565-838-11	JACK BLOCK, PIN 2P			
1468		Q	SOCKET		J3011	1-816-394-11	JACK BLOCK, PIN 3P			
1469		Q	COIL		L2000	1-416-857-11	INDUCTOR 65UH			
1470		Q	COIL		L2001	1-416-857-11	INDUCTOR 65UH			
1471		Q	COIL		L3001	1-412-029-11	INDUCTOR 10UH			
1472		Q	COIL		L3002	1-416-208-11	INDUCTOR 150UH			
1473		Q	COIL		L3003	1-416-208-11	INDUCTOR 150UH			
1474		Q	COIL		L3004	1-412-029-11	INDUCTOR 10UH			
1475		Q	COIL		L3005	1-412-029-11	INDUCTOR 10UH			
1476		Q	COIL		L3006	1-412-029-11	INDUCTOR 10UH			
1477		Q	COIL		L3007	1-412-029-11	INDUCTOR 10UH			
1478		Q	TRANSISTOR		Q2001	8-729-928-81	TRANSISTOR DTC144EE			
1479		Q	TRANSISTOR		Q2003	8-729-928-81	TRANSISTOR DTC144EE			
1480		Q	TRANSISTOR		Q2004	8-729-928-27	TRANSISTOR DTA144EE			
1481		Q	TRANSISTOR		Q2005	8-729-928-27	TRANSISTOR DTA144EE			
1482		Q	TRANSISTOR		Q2006	8-729-928-81	TRANSISTOR DTC144EE			
1483		Q	TRANSISTOR		Q3005	8-729-928-81	TRANSISTOR DTC144EE			
1484		Q	TRANSISTOR		Q3006	1-801-806-11	TR DTC144EKA			
1485		Q	TRANSISTOR		Q3007	8-729-027-38	TRANSISTOR DTA144EKA-T146			
1486		Q	TRANSISTOR		Q3008	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
1487		Q	TRANSISTOR		Q3014	8-729-112-65	TRANSISTOR 2SA1462-Y33			
1488		Q	TRANSISTOR		Q3015	8-729-112-65	TRANSISTOR 2SA1462-Y33			
1489		Q	TRANSISTOR		Q3016	8-729-112-65	TRANSISTOR 2SA1462-Y33			
1490		Q	TRANSISTOR		Q3017	8-729-928-81	TRANSISTOR DTC144EE			
1491		Q	TRANSISTOR		Q3022	8-729-041-37	TRANSISTOR 2SJ377(TE16L)			
1492		Q	TRANSISTOR		Q3023	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
1493		Q	TRANSISTOR		Q3024	8-729-112-65	TRANSISTOR 2SA1462-Y33			
1494		Q	TRANSISTOR		Q3025	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX			
1495		Q	TRANSISTOR		Q3026	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX			
1496		Q	TRANSISTOR		Q3027	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX			
1497		Q	TRANSISTOR		Q3028	8-729-928-81	TRANSISTOR DTC144EE			
1498		Q	TRANSISTOR		Q3029	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX			
1499		Q	TRANSISTOR		Q3032	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
1500		Q	TRANSISTOR		Q3033	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
1501		Q	TRANSISTOR		Q3034	8-729-928-81	TRANSISTOR DTC144EE			
1502		Q	TRANSISTOR		Q3035	8-729-424-02	TRANSISTOR 2SB709A-QRS-TX			
1503		Q	TRANSISTOR		Q3036	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
1504		Q	TRANSISTOR		Q3037	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
1505		Q	TRANSISTOR		Q3038	8-729-120-28	TRANSISTOR 2SC1623-L5L6			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1506		Q	TRANSISTOR		Q3039	8-729-928-81	TRANSISTOR DTC144EE			
1507		Q	RESISTOR		R2000	1-216-809-11	METAL CHIP 100 5% 1/10W			
1508		Q	RESISTOR		R2001	1-216-809-11	METAL CHIP 100 5% 1/10W			
1509		Q	RESISTOR		R2002	1-216-845-11	METAL CHIP 100K 5% 1/10W			
1510		Q	RESISTOR		R2003	1-216-845-11	METAL CHIP 100K 5% 1/10W			
1511		Q	RESISTOR		R2004	1-216-852-11	METAL CHIP 390K 5% 1/10W			
1512		Q	RESISTOR		R2005	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1513		Q	RESISTOR		R2006	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1514		Q	RESISTOR		R2007	1-216-817-11	METAL CHIP 470 5% 1/10W			
1515		Q	RESISTOR		R2008	1-216-817-11	METAL CHIP 470 5% 1/10W			
1516		Q	RESISTOR		R2009	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1517		Q	RESISTOR		R2010	1-216-839-11	METAL CHIP 33K 5% 1/10W			
1518		Q	RESISTOR		R2011	1-218-718-11	METAL CHIP 12K 0.5% 1/10W			
1519		Q	RESISTOR		R2012	1-218-718-11	METAL CHIP 12K 0.5% 1/10W			
1520		Q	RESISTOR		R2013	1-216-811-11	METAL CHIP 150 5% 1/10W			
1521		Q	RESISTOR		R2014	1-216-811-11	METAL CHIP 150 5% 1/10W			
1522		Q	RESISTOR		R2015	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1523		Q	RESISTOR		R2016	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1524		Q	RESISTOR		R2019	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1525		Q	RESISTOR		R2020	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1526		Q	RESISTOR		R2021	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1527		Q	RESISTOR		R2024	1-218-722-11	METAL CHIP 18K 0.5% 1/10W			
1528		Q	RESISTOR		R2025	1-218-722-11	METAL CHIP 18K 0.5% 1/10W			
1529		Q	RESISTOR		R2026	1-218-731-11	METAL CHIP 43K 0.5% 1/10W			
1530		Q	RESISTOR		R2027	1-218-731-11	METAL CHIP 43K 0.5% 1/10W			
1531		Q	RESISTOR		R2028	1-216-857-11	METAL CHIP 1M 5% 1/10W			
1532		Q	RESISTOR		R2029	1-216-857-11	METAL CHIP 1M 5% 1/10W			
1533		Q	RESISTOR		R2030	1-216-824-11	METAL CHIP 1.8K 5% 1/10W			
1534		Q	RESISTOR		R2031	1-216-847-11	METAL CHIP 150K 5% 1/10W			
1535		Q	RESISTOR		R2032	1-216-839-11	METAL CHIP 33K 5% 1/10W			
1536		Q	RESISTOR		R2033	1-218-296-11	METAL CHIP 75K 5% 1/10W			
1537		Q	RESISTOR		R2034	1-218-331-11	METAL CHIP 51K 5% 1/10W			
1538		Q	RESISTOR		R2035	1-216-823-11	METAL CHIP 1.5K 5% 1/10W			
1539		Q	RESISTOR		R2036	1-216-864-11	SHORT CHIP 0			
1540		Q	RESISTOR		R3000	1-216-853-11	METAL CHIP 470K 5% 1/10W			
1541		Q	RESISTOR		R3006	1-216-029-00	RES-CHIP 150 5% 1/10W			
1542		Q	RESISTOR		R3007	1-216-031-00	RES-CHIP 180 5% 1/10W			
1543		Q	RESISTOR		R3012	1-216-031-00	RES-CHIP 180 5% 1/10W			
1544		Q	RESISTOR		R3016	1-216-805-11	METAL CHIP 47 5% 1/10W			
1545		Q	RESISTOR		R3017	1-216-805-11	METAL CHIP 47 5% 1/10W			
1546		Q	RESISTOR		R3018	1-216-805-11	METAL CHIP 47 5% 1/10W			
1547		Q	RESISTOR		R3028	1-216-805-11	METAL CHIP 47 5% 1/10W			
1548		Q	RESISTOR		R3029	1-216-805-11	METAL CHIP 47 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1549		Q	RESISTOR		R3036	1-216-805-11	METAL CHIP 47 5% 1/10W			
1550		Q	RESISTOR		R3043	1-216-864-11	SHORT CHIP 0			
1551		Q	RESISTOR		R3044	1-216-864-11	SHORT CHIP 0			
1552		Q	RESISTOR		R3045	1-216-864-11	SHORT CHIP 0			
1553		Q	RESISTOR		R3047	1-216-819-11	METAL CHIP 680 5% 1/10W			
1554		Q	RESISTOR		R3048	1-216-819-11	METAL CHIP 680 5% 1/10W			
1555		Q	RESISTOR		R3049	1-216-819-11	METAL CHIP 680 5% 1/10W			
1556		Q	RESISTOR		R3050	1-216-295-91	SHORT CHIP 0			
1557		Q	RESISTOR		R3058	1-216-849-11	METAL CHIP 220K 5% 1/10W			
1558		Q	RESISTOR		R3059	1-216-849-11	METAL CHIP 220K 5% 1/10W			
1559		Q	RESISTOR		R3060	1-216-849-11	METAL CHIP 220K 5% 1/10W			
1560		Q	RESISTOR		R3061	1-216-849-11	METAL CHIP 220K 5% 1/10W			
1561		Q	RESISTOR		R3062	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1562		Q	RESISTOR		R3063	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1563		Q	RESISTOR		R3064	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1564		Q	RESISTOR		R3065	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1565		Q	RESISTOR		R3066	1-216-797-11	METAL CHIP 10 5% 1/10W			
1566		Q	RESISTOR		R3067	1-216-797-11	METAL CHIP 10 5% 1/10W			
1567		Q	RESISTOR		R3074	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1568		Q	RESISTOR		R3075	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1569		Q	RESISTOR		R3076	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1570		Q	RESISTOR		R3077	1-216-809-11	METAL CHIP 100 5% 1/10W			
1571		Q	RESISTOR		R3078	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1572		Q	RESISTOR		R3079	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1573		Q	RESISTOR		R3080	1-216-029-00	RES-CHIP 150 5% 1/10W			
1574		Q	RESISTOR		R3081	1-216-031-00	RES-CHIP 180 5% 1/10W			
1575		Q	RESISTOR		R3082	1-216-029-00	RES-CHIP 150 5% 1/10W			
1576		Q	RESISTOR		R3086	1-216-029-00	RES-CHIP 150 5% 1/10W			
1577		Q	RESISTOR		R3087	1-216-029-00	RES-CHIP 150 5% 1/10W			
1578		Q	RESISTOR		R3088	1-216-029-00	RES-CHIP 150 5% 1/10W			
1579		Q	RESISTOR		R3089	1-216-029-00	RES-CHIP 150 5% 1/10W			
1580		Q	RESISTOR		R3090	1-216-029-00	RES-CHIP 150 5% 1/10W			
1581		Q	RESISTOR		R3091	1-216-029-00	RES-CHIP 150 5% 1/10W			
1582		Q	RESISTOR		R3114	1-216-811-11	METAL CHIP 150 5% 1/10W			
1583		Q	RESISTOR		R3115	1-216-817-11	METAL CHIP 470 5% 1/10W			
1584		Q	RESISTOR		R3116	1-216-811-11	METAL CHIP 150 5% 1/10W			
1585		Q	RESISTOR		R3117	1-216-817-11	METAL CHIP 470 5% 1/10W			
1586		Q	RESISTOR		R3118	1-216-811-11	METAL CHIP 150 5% 1/10W			
1587		Q	RESISTOR		R3119	1-216-817-11	METAL CHIP 470 5% 1/10W			
1588		Q	RESISTOR		R3120	1-216-811-11	METAL CHIP 150 5% 1/10W			
1589		Q	RESISTOR		R3121	1-216-805-11	METAL CHIP 47 5% 1/10W			
1590		Q	RESISTOR		R3122	1-216-805-11	METAL CHIP 47 5% 1/10W			
1591		Q	RESISTOR		R3123	1-216-805-11	METAL CHIP 47 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1592		Q	RESISTOR		R3124	1-216-811-11	METAL CHIP 150 5% 1/10W			
1593		Q	RESISTOR		R3125	1-216-811-11	METAL CHIP 150 5% 1/10W			
1594		Q	RESISTOR		R3126	1-216-805-11	METAL CHIP 47 5% 1/10W			
1595		Q	RESISTOR		R3127	1-216-805-11	METAL CHIP 47 5% 1/10W			
1596		Q	RESISTOR		R3128	1-216-805-11	METAL CHIP 47 5% 1/10W			
1597		Q	RESISTOR		R3129	1-216-837-11	METAL CHIP 22K 5% 1/10W			
1598		Q	RESISTOR		R3148	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1599		Q	RESISTOR		R3149	1-216-797-11	METAL CHIP 10 5% 1/10W			
1600		Q	RESISTOR		R3150	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1601		Q	RESISTOR		R3160	1-216-797-11	METAL CHIP 10 5% 1/10W			
1602		Q	RESISTOR		R3161	1-249-381-11	CARBON 1 5% 1/4W			
1603		Q	RESISTOR		R3162	1-216-826-11	METAL CHIP 2.7K 5% 1/10W			
1604		Q	RESISTOR		R3163	1-216-839-11	METAL CHIP 33K 5% 1/10W			
1605		Q	RESISTOR		R3164	1-216-832-11	METAL CHIP 8.2K 5% 1/10W			
1606		Q	RESISTOR		R3165	1-216-809-11	METAL CHIP 100 5% 1/10W			
1607		Q	RESISTOR		R3166	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1608		Q	RESISTOR		R3167	1-216-836-11	METAL CHIP 18K 5% 1/10W			
1609		Q	RESISTOR		R3168	1-216-029-00	RES-CHIP 150 5% 1/10W			
1610		Q	RESISTOR		R3169	1-216-029-00	RES-CHIP 150 5% 1/10W			
1611		Q	RESISTOR		R3170	1-216-029-00	RES-CHIP 150 5% 1/10W			
1612		Q	RESISTOR		R3171	1-216-029-00	RES-CHIP 150 5% 1/10W			
1613		Q	RESISTOR		R3172	1-216-029-00	RES-CHIP 150 5% 1/10W			
1614		Q	RESISTOR		R3173	1-216-029-00	RES-CHIP 150 5% 1/10W			
1615		Q	RESISTOR		R3174	1-216-813-11	METAL CHIP 220 5% 1/10W			
1616		Q	RESISTOR		R3175	1-216-813-11	METAL CHIP 220 5% 1/10W			
1617		Q	RESISTOR		R3176	1-216-813-11	METAL CHIP 220 5% 1/10W			
1618		Q	RESISTOR		R3177	1-216-813-11	METAL CHIP 220 5% 1/10W			
1619		Q	RESISTOR		R3178	1-216-813-11	METAL CHIP 220 5% 1/10W			
1620		Q	RESISTOR		R3179	1-216-813-11	METAL CHIP 220 5% 1/10W			
1621		Q	RESISTOR		R3180	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1622		Q	RESISTOR		R3181	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1623		Q	RESISTOR		R3182	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1624		Q	RESISTOR		R3183	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1625		Q	RESISTOR		R3184	1-216-849-11	METAL CHIP 220K 5% 1/10W			
1626		Q	RESISTOR		R3185	1-216-849-11	METAL CHIP 220K 5% 1/10W			
1627		Q	RESISTOR		R3186	1-216-849-11	METAL CHIP 220K 5% 1/10W			
1628		Q	RESISTOR		R3187	1-216-849-11	METAL CHIP 220K 5% 1/10W			
1629		Q	RESISTOR		R3188	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1630		Q	RESISTOR		R3189	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1631		Q	RESISTOR		R3190	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1632		Q	RESISTOR		R3191	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1633		Q	RESISTOR		R3192	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1634		Q	RESISTOR		R3193	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1635		Q	RESISTOR		R3194	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1636		Q	RESISTOR		R3195	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1637		Q	RESISTOR		R3196	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1638		Q	RESISTOR		R3197	1-216-809-11	METAL CHIP 100 5% 1/10W			
1639		Q	RESISTOR		R3198	1-216-809-11	METAL CHIP 100 5% 1/10W			
1640		Q	RESISTOR		R3199	1-216-809-11	METAL CHIP 100 5% 1/10W			
1641		Q	RESISTOR		R3200	1-216-809-11	METAL CHIP 100 5% 1/10W			
1642		Q	RESISTOR		R3201	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1643		Q	RESISTOR		R3202	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1644		Q	RESISTOR		R3203	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1645		Q	RESISTOR		R3204	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1646		Q	RESISTOR		R3205	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1647		Q	RESISTOR		R3206	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1648		Q	RESISTOR		R3207	1-216-813-11	METAL CHIP 220 5% 1/10W			
1649		Q	RESISTOR		R3208	1-216-813-11	METAL CHIP 220 5% 1/10W			
1650		Q	RESISTOR		R3212	1-216-864-11	SHORT CHIP 0			
1651		Q	RESISTOR		R3213	1-216-864-11	SHORT CHIP 0			
1652		Q	RESISTOR		R3214	1-216-834-11	METAL CHIP 12K 5% 1/10W			
1653		Q	RESISTOR		R3215	1-216-837-11	METAL CHIP 22K 5% 1/10W			
1654		Q	RESISTOR		R3216	1-216-857-11	METAL CHIP 1M 5% 1/10W			
1655		Q	RESISTOR		R3217	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1656		Q	RESISTOR		R3218	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1657		Q	RESISTOR		R3219	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1658		Q	RESISTOR		R3221	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1659		Q	RESISTOR		R3222	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1660		Q	RESISTOR		R3223	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1661		Q	RESISTOR		R3224	1-216-809-11	METAL CHIP 100 5% 1/10W			
1662		Q	RESISTOR		R3225	1-216-809-11	METAL CHIP 100 5% 1/10W			
1663		Q	RESISTOR		R3228	1-216-827-11	METAL CHIP 3.3K 5% 1/10W			
1664		Q	RESISTOR		R3229	1-216-827-11	METAL CHIP 3.3K 5% 1/10W			
1665		Q	RESISTOR		R3230	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1666		Q	RESISTOR		R3231	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1667		Q	RESISTOR		R3232	1-216-864-11	SHORT CHIP 0			
1668		Q	RESISTOR		R3233	1-216-864-11	SHORT CHIP 0			
1669		Q	RESISTOR		R3234	1-216-839-11	METAL CHIP 33K 5% 1/10W			
1670		Q	RESISTOR		R3235	1-216-837-11	METAL CHIP 22K 5% 1/10W			
1671		Q	RESISTOR		R3237	1-216-857-11	METAL CHIP 1M 5% 1/10W			
1672		Q	RESISTOR		R3238	1-218-716-11	METAL CHIP 10K 0.5% 1/10W			
1673		Q	RESISTOR		R3239	1-218-716-11	METAL CHIP 10K 0.5% 1/10W			
1674		Q	RESISTOR		R3240	1-218-716-11	METAL CHIP 10K 0.5% 1/10W			
1675		Q	RESISTOR		R3241	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1676		Q	RESISTOR		R3242	1-216-827-11	METAL CHIP 3.3K 5% 1/10W			
1677		Q	RESISTOR		R3243	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1678		Q	RESISTOR		R3244	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1679		Q	RESISTOR		R3245	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1680		Q	RESISTOR		R3246	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1681		Q	RESISTOR		R3247	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1682		Q	RESISTOR		R3248	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1683		Q	RESISTOR		R3249	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1684		Q	RESISTOR		R3250	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1685		Q	RESISTOR		R3251	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1686		Q	RESISTOR		R3252	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1687		Q	RESISTOR		R3253	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1688		Q	RESISTOR		R3254	1-216-809-11	METAL CHIP 100 5% 1/10W			
1689		Q	RESISTOR		R3255	1-216-809-11	METAL CHIP 100 5% 1/10W			
1690		Q	RESISTOR		R3259	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1691		Q	RESISTOR		R3260	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1692		Q	RESISTOR		R3261	1-216-797-11	METAL CHIP 10 5% 1/10W			
1693		Q	RESISTOR		R3262	1-216-797-11	METAL CHIP 10 5% 1/10W			
1694		Q	RESISTOR		R3263	1-216-809-11	METAL CHIP 100 5% 1/10W			
1695		Q	RESISTOR		R3264	1-216-809-11	METAL CHIP 100 5% 1/10W			
1696		Q	RESISTOR		R3265	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1697		Q	RESISTOR		R3266	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1698		Q	RESISTOR		R3269	1-216-295-91	SHORT CHIP 0			
1699		Q	RESISTOR		R3271	1-216-842-11	METAL CHIP 56K 5% 1/10W			
1700		Q	RESISTOR		R3272	1-216-840-11	METAL CHIP 39K 5% 1/10W			
1701		Q	CHIP CHECKER		TP10	1-535-877-22	CHIP, CHECKER			
1702		Q	CHIP CHECKER		TP11	1-535-877-22	CHIP, CHECKER			
1703		Q	CHIP CHECKER		TP12	1-535-877-22	CHIP, CHECKER			
1704		Q	CHIP CHECKER		TP13	1-535-877-22	CHIP, CHECKER			
1705		Q	CHIP CHECKER		TP14	1-535-877-22	CHIP, CHECKER			
1706		Q	CHIP CHECKER		TP15	1-535-877-22	CHIP, CHECKER			
1707		Q	CHIP CHECKER		TP16	1-535-877-22	CHIP, CHECKER			
1708		Q	CHIP CHECKER		TP17	1-535-877-22	CHIP, CHECKER			
1709		Q	CHIP CHECKER		TP18	1-535-877-22	CHIP, CHECKER			
1710		Q	CHIP CHECKER		TP19	1-535-877-22	CHIP, CHECKER			
1711		Q	CHIP CHECKER		TP20	1-535-877-22	CHIP, CHECKER			
1712		Q	CHIP CHECKER		TP21	1-535-877-22	CHIP, CHECKER			
1713		Q2	CAPACITOR		C4200	1-109-907-11	ELECT(BLOCK) 22000UF 20.00% 16V			
1714		Q2	CAPACITOR		C4201	1-109-907-11	ELECT(BLOCK) 22000UF 20.00% 16V			
1715		Q2	CONNECTOR	*	CN4200	1-580-838-11	PIN, CONNECTOR (PC BOARD) 4P			
1716		TU	CAPACITOR		C6001	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1717		TU	CAPACITOR		C6002	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1718		TU	CAPACITOR		C6003	1-162-995-11	CERAMIC CHIP 0.022UF 50V			
1719		TU	CAPACITOR		C6005	1-110-563-11	CERAMIC CHIP 0.068UF 10.00% 16V			
1720		TU	CAPACITOR		C6006	1-126-189-11	ELECT CHIP 0.22UF 20.00% 50V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1721		TU	CAPACITOR		C6007	1-128-996-11	ELECT CHIP 4.7UF 20% 50V			
1722		TU	CAPACITOR		C6008	1-128-996-11	ELECT CHIP 4.7UF 20% 50V			
1723		TU	CAPACITOR		C6009	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
1724		TU	CAPACITOR		C6010	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V			
1725		TU	CAPACITOR		C6011	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1726		TU	CAPACITOR		C6012	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1727		TU	CAPACITOR		C6013	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V			
1728		TU	CAPACITOR		C6014	1-126-601-11	ELECT CHIP 2.2UF 20.00% 50V			
1729		TU	CAPACITOR		C6015	1-126-204-11	ELECT CHIP 47UF 20.00% 16V			
1730		TU	CAPACITOR		C6016	1-126-204-11	ELECT CHIP 47UF 20.00% 16V			
1731		TU	CAPACITOR		C6017	1-162-969-11	CERAMIC CHIP 0.0068UF 10.00% 25V			
1732		TU	CAPACITOR		C6018	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
1733		TU	CAPACITOR		C6019	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
1734		TU	CAPACITOR		C6020	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1735		TU	CAPACITOR		C6021	1-126-395-11	ELECT CHIP 22UF 20.00% 16V			
1736		TU	CAPACITOR		C6022	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1737		TU	CAPACITOR		C6023	1-126-204-11	ELECT CHIP 47UF 20.00% 16V			
1738		TU	CAPACITOR		C6024	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1739		TU	CAPACITOR		C6025	1-126-197-11	ELECT CHIP 10UF 20.00% 50V			
1740		TU	CAPACITOR		C6028	1-164-227-11	CERAMIC CHIP 0.022UF 10.00% 25V			
1741		TU	CAPACITOR		C6029	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1742		TU	CAPACITOR		C6031	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1743		TU	CAPACITOR		C6037	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1744		TU	CAPACITOR		C6038	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1745		TU	CAPACITOR		C6039	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1746		TU	CAPACITOR		C6041	1-128-401-11	ELECT CHIP 100UF 20.00% 25V			
1747		TU	CAPACITOR		C6042	1-164-156-11	CERAMIC CHIP 0.1UF 25V			
1748		TU	CAPACITOR		C6043	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1749		TU	CAPACITOR		C6050	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V			
1750		TU	CAPACITOR		C6051	1-115-416-11	CERAMIC CHIP 0.001UF 5.00% 25V			
1751		TU	CAPACITOR		C6053	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V			
1752		TU	CAPACITOR		C6054	1-126-197-11	ELECT CHIP 10UF 20.00% 50V			
1753		TU	CAPACITOR		C6055	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1754		TU	CAPACITOR		C6056	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V			
1755		TU	CAPACITOR		C6057	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1756		TU	CAPACITOR		C6062	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1757		TU	CAPACITOR		C6065	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V			
1758		TU	CAPACITOR		C6066	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1759		TU	CAPACITOR		C6068	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
1760		TU	CAPACITOR		C6069	1-162-927-11	CERAMIC CHIP 100PF 5.00% 50V			
1761		TU	CAPACITOR		C6075	1-126-193-11	ELECT CHIP 1UF 20.00% 50V			
1762		TU	CAPACITOR		C6078	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1763		TU	CAPACITOR		C6079	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1764		TU	CAPACITOR		C6080	1-126-193-11	ELECT CHIP 1UF 20.00% 50V			
1765		TU	CAPACITOR		C6081	1-117-681-11	ELECT CHIP 100UF 20.00% 16V			
1766		TU	CAPACITOR		C6082	1-126-197-11	ELECT CHIP 10UF 20.00% 50V			
1767		TU	CAPACITOR		C6121	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1768		TU	CONNECTOR	*	CN6001	1-695-207-21	PIN, AONNECTOR (PC BOARD) 6P			
1769		TU	CONNECTOR		CN6003	1-764-081-21	PIN, CONNECTOR (PC BOARD) 9P			
1770		TU	DIODE		D6001	8-719-036-94	DIODE RD5.6SB-T1			
1771		TU	DIODE		D6002	8-719-036-94	DIODE RD5.6SB-T1			
1772		TU	DIODE		D6003	8-719-036-94	DIODE RD5.6SB-T1			
1773		TU	DIODE		D6004	8-719-036-94	DIODE RD5.6SB-T1			
1774		TU	DIODE		D6005	8-719-158-40	DIODE RD10SB1			
1775		TU	DIODE		D6006	8-719-158-40	DIODE RD10SB1			
1776		TU	DIODE		D6007	8-719-914-44	DIODE DAP202K			
1777		TU	DIODE		D6008	8-719-041-97	DIODE MA113-(TX)			
1778		TU	DIODE		D6009	8-719-404-50	DIODE MA111-TX			
1779		TU	DIODE		D6010	8-719-036-94	DIODE RD5.6SB-T1			
1780		TU	FERRITE		FL6001	1-234-124-21	FERRITE 0UH			
1781		TU	FERRITE		FL6002	1-234-177-21	FERRITE 0UH			
1782		TU	FERRITE		FL6003	1-234-128-21	FERRITE 0UH			
1783		TU	IC		IC6001	8-749-925-00	IC TK11819MTL			
1784		TU	IC		IC6002	8-759-533-85	IC L88M05T-FA-TL			
1785		TU	IC		IC6003	8-759-460-79	IC BA09FP-E2			
1786		TU	IC		IC6004	8-759-352-91	IC PST9143NL			
1787		TU	IC		IC6005	8-759-592-47	IC TC7SZ08FU(TE85R)			
1788		TU	IC		IC6006	8-752-934-25	IC CXP85324A-291Q			
1789		TU	IC		IC6007	8-759-641-86	IC BR24C16F-E2			
1790		TU	IC		IC6008	8-759-331-71	IC NJM4558E(TE2)			
1791		TU	COIL		L6001	1-419-707-11	INDUCTOR 1000UH			
1792		TU	COIL		L6002	1-412-030-11	INDUCTOR 22UH			
1793		TU	COIL		L6003	1-412-030-11	INDUCTOR 22UH			
1794		TU	COIL		L6004	1-412-030-11	INDUCTOR 22UH			
1795		TU	TRANSISTOR		Q6001	8-729-422-33	TRANSISTOR 2SD601A-Q-TX			
1796		TU	TRANSISTOR		Q6002	8-729-216-22	TRANSISTOR 2SA1162-G			
1797		TU	TRANSISTOR		Q6003	8-729-216-22	TRANSISTOR 2SA1162-G			
1798		TU	TRANSISTOR		Q6004	8-729-216-22	TRANSISTOR 2SA1162-G			
1799		TU	TRANSISTOR		Q6005	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
1800		TU	TRANSISTOR		Q6007	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
1801		TU	TRANSISTOR		Q6008	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
1802		TU	TRANSISTOR		Q6009	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R			
1803		TU	TRANSISTOR		Q6010	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
1804		TU	TRANSISTOR		Q6011	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
1805		TU	TRANSISTOR		Q6012	8-729-120-28	TRANSISTOR 2SC1623-L5L6			
1806		TU	RESISTOR		R6001	1-216-853-11	METAL CHIP 470K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1807		TU	RESISTOR		R6002	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1808		TU	RESISTOR		R6003	1-216-841-11	METAL CHIP 47K 5% 1/10W			
1809		TU	RESISTOR		R6004	1-216-826-11	METAL CHIP 2.7K 5% 1/10W			
1810		TU	RESISTOR		R6005	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1811		TU	RESISTOR		R6006	1-220-397-11	METAL CHIP 4.7M 5% 1/10W			
1812		TU	RESISTOR		R6007	1-216-819-11	METAL CHIP 680 5% 1/10W			
1813		TU	RESISTOR		R6008	1-216-805-11	METAL CHIP 47 5% 1/10W			
1814		TU	RESISTOR		R6009	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1815		TU	RESISTOR		R6010	1-216-809-11	METAL CHIP 100 5% 1/10W			
1816		TU	RESISTOR		R6011	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1817		TU	RESISTOR		R6012	1-216-809-11	METAL CHIP 100 5% 1/10W			
1818		TU	RESISTOR		R6013	1-216-864-11	SHORT CHIP 0			
1819		TU	RESISTOR		R6014	1-216-864-11	SHORT CHIP 0			
1820		TU	RESISTOR		R6015	1-216-846-11	METAL CHIP 120K 5% 1/10W			
1821		TU	RESISTOR		R6016	1-216-851-11	METAL CHIP 330K 5% 1/10W			
1822		TU	RESISTOR		R6017	1-216-815-11	METAL CHIP 330 5% 1/10W			
1823		TU	RESISTOR		R6018	1-216-820-11	METAL CHIP 820 5% 1/10W			
1824		TU	RESISTOR		R6019	1-216-864-11	SHORT CHIP 0			
1825		TU	RESISTOR		R6020	1-216-809-11	METAL CHIP 100 5% 1/10W			
1826		TU	RESISTOR		R6021	1-216-809-11	METAL CHIP 100 5% 1/10W			
1827		TU	RESISTOR		R6022	1-216-864-11	SHORT CHIP 0			
1828		TU	RESISTOR		R6023	1-216-838-11	METAL CHIP 27K 5% 1/10W			
1829		TU	RESISTOR		R6024	1-216-840-11	METAL CHIP 39K 5% 1/10W			
1830		TU	RESISTOR		R6025	1-216-809-11	METAL CHIP 100 5% 1/10W			
1831		TU	RESISTOR		R6026	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1832		TU	RESISTOR		R6027	1-216-864-11	SHORT CHIP 0			
1833		TU	RESISTOR		R6031	1-216-809-11	METAL CHIP 100 5% 1/10W			
1834		TU	RESISTOR		R6032	1-216-809-11	METAL CHIP 100 5% 1/10W			
1835		TU	RESISTOR		R6033	1-216-864-11	SHORT CHIP 0			
1836		TU	RESISTOR		R6034	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1837		TU	RESISTOR		R6035	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1838		TU	RESISTOR		R6036	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1839		TU	RESISTOR		R6039	1-216-864-11	SHORT CHIP 0			
1840		TU	RESISTOR		R6040	1-216-809-11	METAL CHIP 100 5% 1/10W			
1841		TU	RESISTOR		R6041	1-216-809-11	METAL CHIP 100 5% 1/10W			
1842		TU	RESISTOR		R6042	1-216-809-11	METAL CHIP 100 5% 1/10W			
1843		TU	RESISTOR		R6043	1-216-809-11	METAL CHIP 100 5% 1/10W			
1844		TU	RESISTOR		R6044	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1845		TU	RESISTOR		R6045	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1846		TU	RESISTOR		R6046	1-216-864-11	SHORT CHIP 0			
1847		TU	RESISTOR		R6047	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1848		TU	RESISTOR		R6048	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1849		TU	RESISTOR		R6049	1-216-833-11	METAL CHIP 10K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1850		TU	RESISTOR		R6051	1-216-864-11	SHORT CHIP 0			
1851		TU	RESISTOR		R6052	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1852		TU	RESISTOR		R6054	1-216-809-11	METAL CHIP 100 5% 1/10W			
1853		TU	RESISTOR		R6055	1-216-809-11	METAL CHIP 100 5% 1/10W			
1854		TU	RESISTOR		R6056	1-216-809-11	METAL CHIP 100 5% 1/10W			
1855		TU	RESISTOR		R6057	1-216-809-11	METAL CHIP 100 5% 1/10W			
1856		TU	RESISTOR		R6058	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1857		TU	RESISTOR		R6059	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1858		TU	RESISTOR		R6060	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1859		TU	RESISTOR		R6061	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1860		TU	RESISTOR		R6062	1-216-809-11	METAL CHIP 100 5% 1/10W			
1861		TU	RESISTOR		R6063	1-216-809-11	METAL CHIP 100 5% 1/10W			
1862		TU	RESISTOR		R6064	1-216-864-11	SHORT CHIP 0			
1863		TU	RESISTOR		R6066	1-216-864-11	SHORT CHIP 0			
1864		TU	RESISTOR		R6068	1-216-864-11	SHORT CHIP 0			
1865		TU	RESISTOR		R6070	1-216-864-11	SHORT CHIP 0			
1866		TU	RESISTOR		R6072	1-216-816-11	METAL CHIP 390 5% 1/10W			
1867		TU	RESISTOR		R6074	1-216-864-11	SHORT CHIP 0			
1868		TU	RESISTOR		R6075	1-216-864-11	SHORT CHIP 0			
1869		TU	RESISTOR		R6076	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1870		TU	RESISTOR		R6077	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1871		TU	RESISTOR		R6078	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1872		TU	RESISTOR		R6079	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1873		TU	RESISTOR		R6080	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1874		TU	RESISTOR		R6081	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1875		TU	RESISTOR		R6082	1-216-809-11	METAL CHIP 100 5% 1/10W			
1876		TU	RESISTOR		R6083	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1877		TU	RESISTOR		R6084	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1878		TU	RESISTOR		R6088	1-216-864-11	SHORT CHIP 0			
1879		TU	RESISTOR		R6089	1-216-864-11	SHORT CHIP 0			
1880		TU	RESISTOR		R6090	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1881		TU	RESISTOR		R6091	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1882		TU	RESISTOR		R6092	1-216-809-11	METAL CHIP 100 5% 1/10W			
1883		TU	RESISTOR		R6093	1-216-853-11	METAL CHIP 470K 5% 1/10W			
1884		TU	RESISTOR		R6094	1-216-864-11	SHORT CHIP 0			
1885		TU	RESISTOR		R6098	1-216-864-11	SHORT CHIP 0			
1886		TU	RESISTOR		R6099	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1887		TU	RESISTOR		R6100	1-216-825-11	METAL CHIP 2.2K 5% 1/10W			
1888		TU	RESISTOR		R6101	1-216-809-11	METAL CHIP 100 5% 1/10W			
1889		TU	RESISTOR		R6102	1-216-853-11	METAL CHIP 470K 5% 1/10W			
1890		TU	RESISTOR		R6103	1-216-837-11	METAL CHIP 22K 5% 1/10W			
1891		TU	RESISTOR		R6104	1-216-864-11	SHORT CHIP 0			
1892		TU	RESISTOR		R6105	1-216-841-11	METAL CHIP 47K 5% 1/10W			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1893		TU	RESISTOR		R6106	1-216-857-11	METAL CHIP 1M 5% 1/10W			
1894		TU	RESISTOR		R6109	1-216-809-11	METAL CHIP 100 5% 1/10W			
1895		TU	RESISTOR		R6110	1-216-809-11	METAL CHIP 100 5% 1/10W			
1896		TU	RESISTOR		R6111	1-216-809-11	METAL CHIP 100 5% 1/10W			
1897		TU	RESISTOR		R6112	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1898		TU	RESISTOR		R6115	1-216-864-11	SHORT CHIP 0			
1899		TU	RESISTOR		R6116	1-216-822-11	METAL CHIP 1.2K 5% 1/10W			
1900		TU	RESISTOR		R6117	1-216-823-11	METAL CHIP 1.5K 5% 1/10W			
1901		TU	RESISTOR		R6118	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1902		TU	RESISTOR		R6119	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1903		TU	RESISTOR		R6120	1-216-809-11	METAL CHIP 100 5% 1/10W			
1904		TU	RESISTOR		R6121	1-216-864-11	SHORT CHIP 0			
1905		TU	RESISTOR		R6122	1-216-864-11	SHORT CHIP 0			
1906		TU	RESISTOR		R6123	1-216-864-11	SHORT CHIP 0			
1907		TU	RESISTOR		R6124	1-216-821-11	METAL CHIP 1K 5% 1/10W			
1908		TU	RESISTOR		R6125	1-216-809-11	METAL CHIP 100 5% 1/10W			
1909		TU	RESISTOR		R6126	1-216-809-11	METAL CHIP 100 5% 1/10W			
1910		TU	RESISTOR		R6127	1-216-864-11	SHORT CHIP 0			
1911		TU	RESISTOR		R6130	1-216-864-11	SHORT CHIP 0			
1912		TU	RESISTOR		R6133	1-216-864-11	SHORT CHIP 0			
1913		TU	TUNER		TU6001	8-598-593-20	TUNER, FSS BTF-WA421			
1914		TU	CRYSTAL		X6001	1-795-307-21	VIBRATOR, CERAMIC			
1915		H2	CAPACITOR		C4502	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
1916		H2	CAPACITOR		C4503	1-162-915-11	CERAMIC CHIP 10PF 0.50PF 50V			
1917		H2	CONNECTOR	*	CN4501	1-564-719-11	PIN, CONNECTOR (SMALL TYPE) 3P			
1918		H2	DIODE		D4502	8-719-421-59	DIODE MA3130WA-TX			
1919		H2	RESISTOR		R4511	1-216-824-11	METAL CHIP 1.8K 5% 1/10W			
1920		H2	RESISTOR		R4512	1-216-826-11	METAL CHIP 2.7K 5% 1/10W			
1921		H2	RESISTOR		R4513	1-216-829-11	METAL CHIP 4.7K 5% 1/10W			
1922		H2	RESISTOR		R4514	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1923		H2	RESISTOR		R4515	1-216-833-11	METAL CHIP 10K 5% 1/10W			
1924		H2	SWITCH		S4500	1-762-196-21	SWITCH, TACT			
1925		H2	SWITCH		S4502	1-762-196-21	SWITCH, TACT			
1926		H2	SWITCH		S4503	1-762-196-21	SWITCH, TACT			
1927		H2	SWITCH		S4504	1-762-196-21	SWITCH, TACT			
1928		H2	SWITCH		S4505	1-762-196-21	SWITCH, TACT			
1929		H1	CAPACITOR		C4004	1-162-966-11	CERAMIC CHIP 0.0022UF 10.00% 50V			
1930		H1	CAPACITOR		C4005	1-125-891-11	CERAMIC CHIP 0.47UF 10.00% 10V			
1931		H1	CAPACITOR		C4006	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
1932		H1	CAPACITOR		C4007	1-117-137-11	ELECT CHIP 33UF 20.00% 10V			
1933		H1	CAPACITOR		C4008	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			
1934		H1	CAPACITOR		C4009	1-115-566-11	CERAMIC CHIP 4.7UF 10.00% 10V			
1935		H1	CAPACITOR		C4010	1-107-826-11	CERAMIC CHIP 0.1UF 10.00% 16V			

No.	#	Board	Type	⚠/*	Ref.No.	Part No.	Descrption	Remarks-1	Remarks-2	Difference
1936		H1	CAPACITOR		C4013	1-162-970-11	CERAMIC CHIP 0.01UF 10.00% 25V			
1937		H1	CAPACITOR		C4014	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V			
1938		H1	CAPACITOR		C4015	1-109-982-11	CERAMIC CHIP 1UF 10.00% 10V			
1939		H1	CONNECTOR		CN4000	1-564-731-51	PIN, CONNECTOR (SMALL TYPE)15P			
1940		H1	DIODE		D4000	8-719-064-07	DIODE SML-310LTT86			
1941		H1	DIODE		D4001	8-719-053-07	DIODE SML-310MTT86			
1942		H1	DIODE		D4003	8-719-402-16	DIODE MA3100-TX			
1943		H1	DIODE		D4004	8-719-402-16	DIODE MA3100-TX			
1944		H1	DIODE		D4005	8-719-402-16	DIODE MA3100-TX			
1945		H1	DIODE		D4006	8-719-402-16	DIODE MA3100-TX			
1946		H1	DIODE		D4009	8-719-421-59	DIODE MA3130WA-TX			
1947		H1	DIODE		D4010	8-719-421-59	DIODE MA3130WA-TX			
1948		H1	DIODE		D4011	8-719-421-59	DIODE MA3130WA-TX			
1949		H1	DIODE		D4012	8-719-421-59	DIODE MA3130WA-TX			
1950		H1	DIODE		D4013	8-719-421-59	DIODE MA3130WA-TX			
1951		H1	IC		IC4001	6-600-117-01	IC GP1UM27SRK			
1952		H1	SOCKET		J4001	1-568-267-11	JACK			
1953		H1	TRANSISTOR		Q4001	8-729-028-98	TRANSISTOR DTC114WUA-T106			
1954		H1	TRANSISTOR		Q4002	8-729-422-33	TRANSISTOR 2SD601A-Q-TX			
1955		H1	TRANSISTOR		Q4006	8-729-422-33	TRANSISTOR 2SD601A-Q-TX			
1956		H1	TRANSISTOR		Q4007	8-729-028-98	TRANSISTOR DTC114WUA-T106			
1957		H1	RESISTOR		R4001	1-218-660-91	METAL CHIP 47 0.5% 1/10W			
1958		H1	RESISTOR		R4002	1-218-684-11	METAL CHIP 470 0.5% 1/10W			
1959		H1	RESISTOR		R4003	1-218-690-11	METAL CHIP 820 0.5% 1/10W			
1960		H1	RESISTOR		R4004	1-218-716-11	METAL CHIP 10K 0.5% 1/10W			
1961		H1	RESISTOR		R4005	1-216-295-91	SHORT CHIP 0			
1962		H1	RESISTOR		R4006	1-249-415-11	CARBON 680 5% 1/4W			
1963		H1	RESISTOR		R4017	1-249-415-11	CARBON 680 5% 1/4W			
1964		H1	RESISTOR		R4018	1-249-415-11	CARBON 680 5% 1/4W			
1965		H1	RESISTOR		R4019	1-249-415-11	CARBON 680 5% 1/4W			
1966		H1	RESISTOR		R4020	1-249-389-11	CARBON 4.7 5% 1/4W			
1967		H1	RESISTOR		R4021	1-249-389-11	CARBON 4.7 5% 1/4W			
1968		H1	RESISTOR		R4022	1-218-672-11	METAL CHIP 150 0.5% 1/10W			
1969		H1	RESISTOR		R4023	1-218-716-11	METAL CHIP 10K 0.5% 1/10W			
1970		H1	RESISTOR		R4024	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W			
1971		H1	RESISTOR		R4025	1-218-708-11	METAL CHIP 4.7K 0.5% 1/10W			
1972		H1	SWITCH		S4001	1-554-419-00	SWITCH, PUSH (1 KEY)			

9-978-750-01

Sony EMCS Corporation
Ichinomiya TEC

English
2002LL08-Data
Made in Japan
© 2002. 12